


# Frame


## Table of Contents

Exploded View .....	14-2
Fairings .....	14-4
Lower Fairing Removal .....	14-4
Lower Fairing Installation Note .....	14-4
Upper Fairing Removal .....	14-4
Fender .....	14-4
Rear Fender Rear Section Removal .....	14-4
Rear Fender Front Section Removal .....	14-4
Seat Cover .....	14-5
Seat Cover Installation .....	14-5

# 14-2 FRAME

## Exploded View

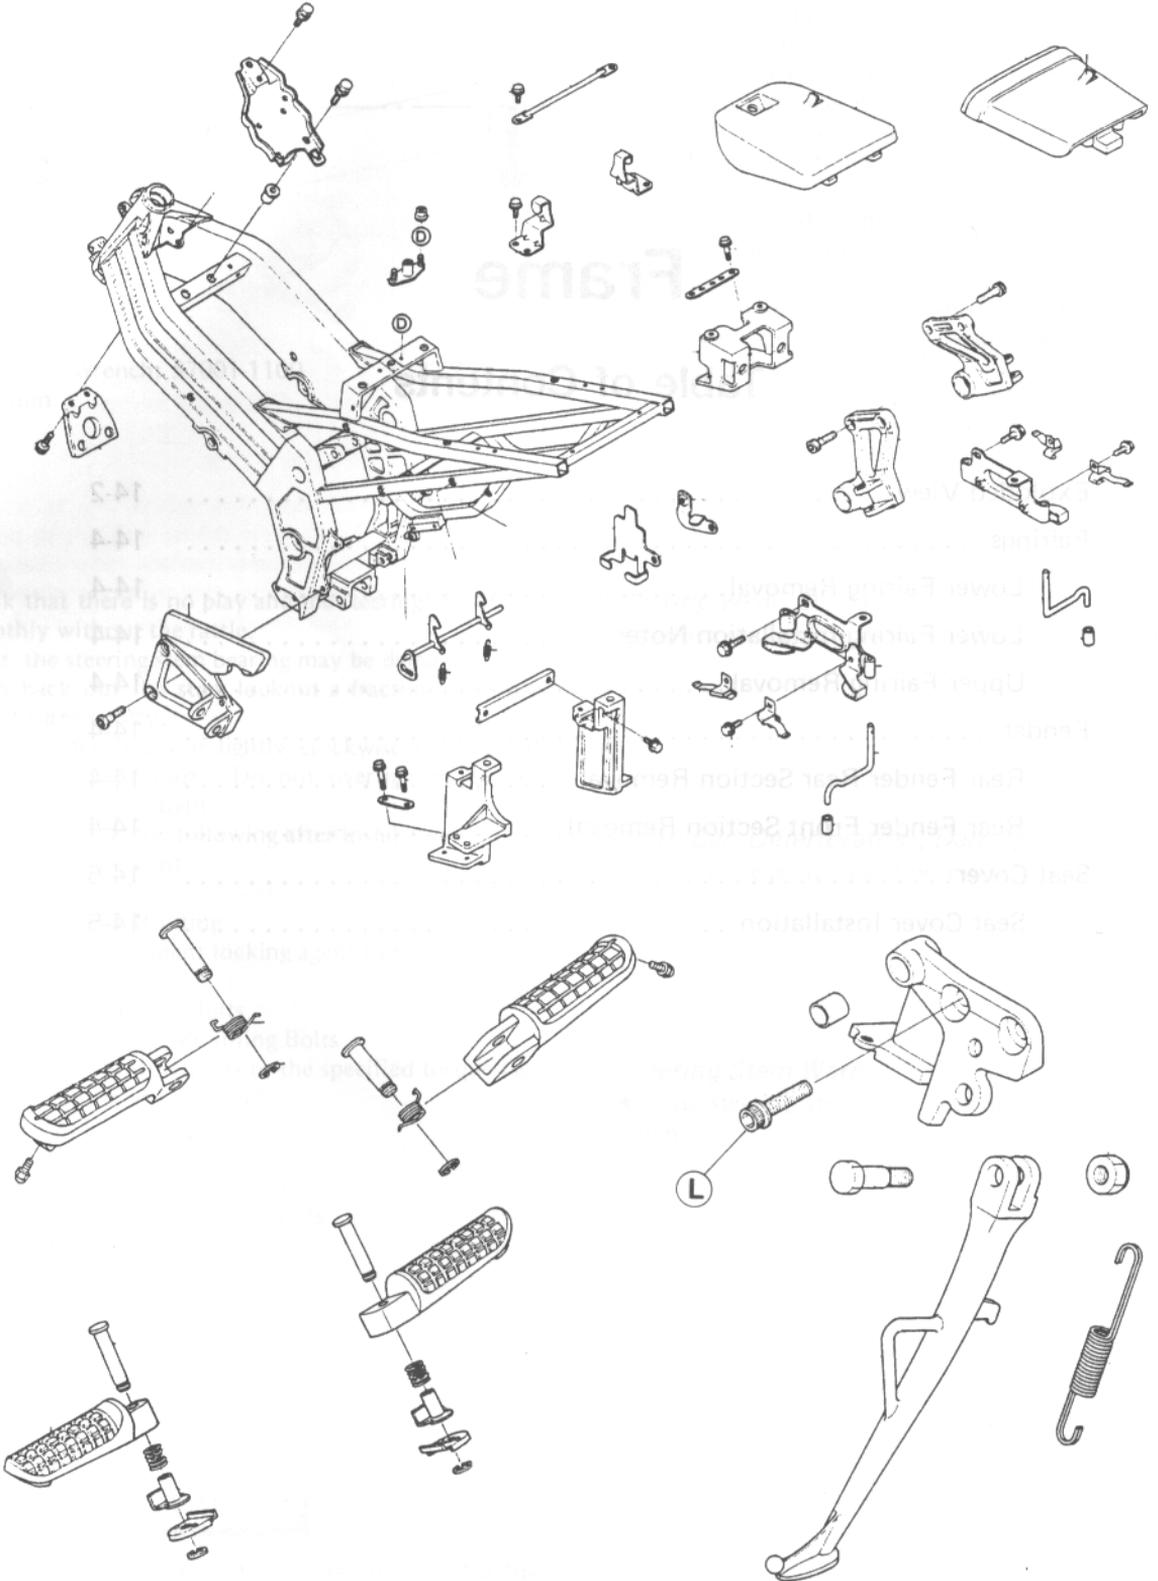

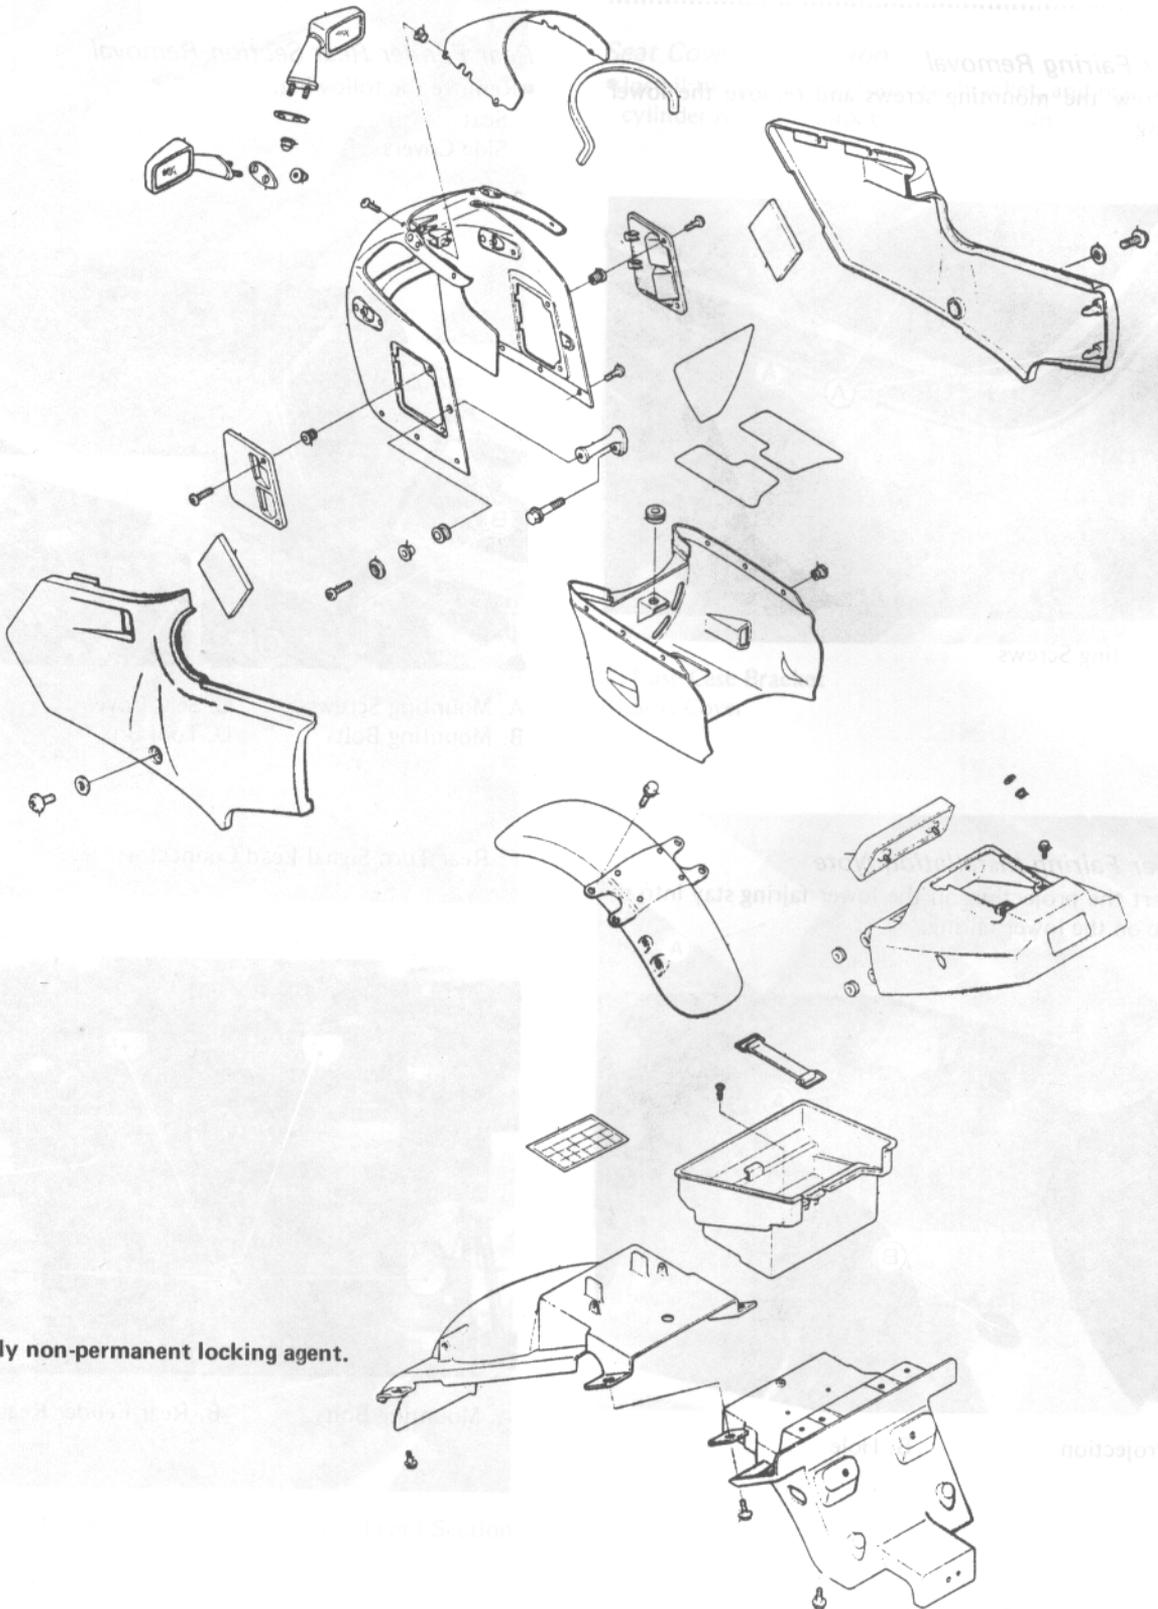


L : Apply non-permanent locking agent.

## 14-4 FRAME

### Fairings

#### Lower Fairing Removal


- Unscrew the mounting screws and remove the lower fairing.

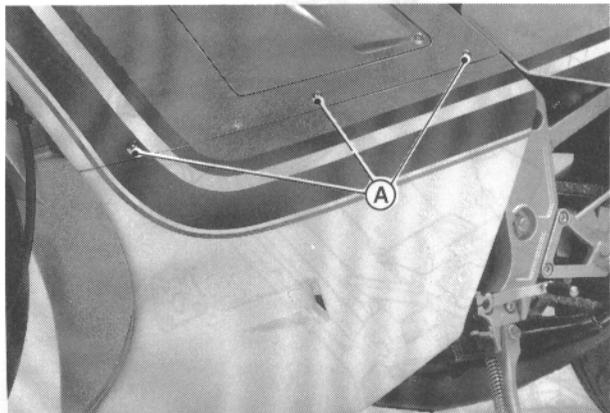

A. Mounting Screws

#### Lower Fairing Installation Note

- Insert the projection on the lower fairing stay into the hole on the lower fairing.

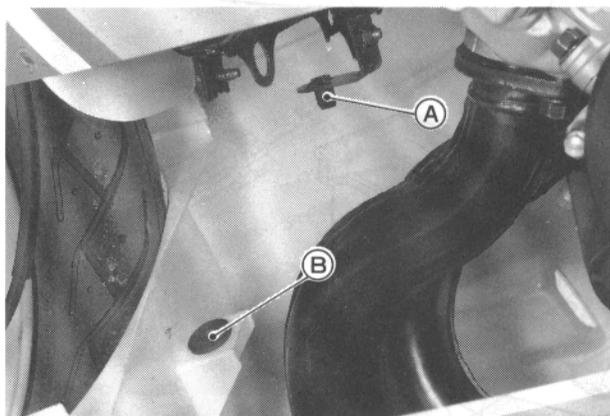

A. Projection

B. Hole


#### Upper Fairing Removal

- Remove the following.
  - Lower Fairing
  - Rear View Mirrors
- Unscrew the mounting bolts and screws, and remove the upper fairing.

### Fender

#### Rear Fender Rear Section Removal

- Remove the following.
  - Seat
  - Side Covers

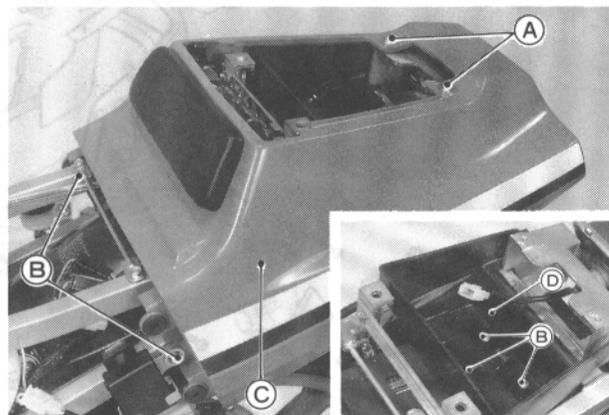


A. Mounting Screws

B. Mounting Bolts

C. Seat Cover

D. Tool Box

#### Rear Turn Signal Lead Connectors

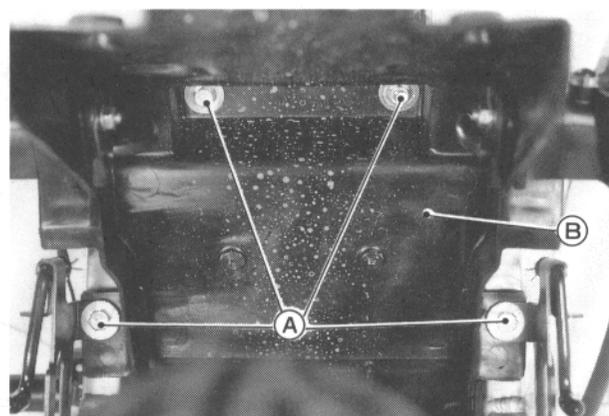

A. Mounting Bolts

B. Rear Fender Rear Section


#### Rear Fender Front Section Removal

- Remove the rear fender rear section.
- Remove the following.


Seat Cover

Seat Cover Installation


- Install the seat cover, fuse case bracket, and rear master cylinder reservoir tank bracket as shown.

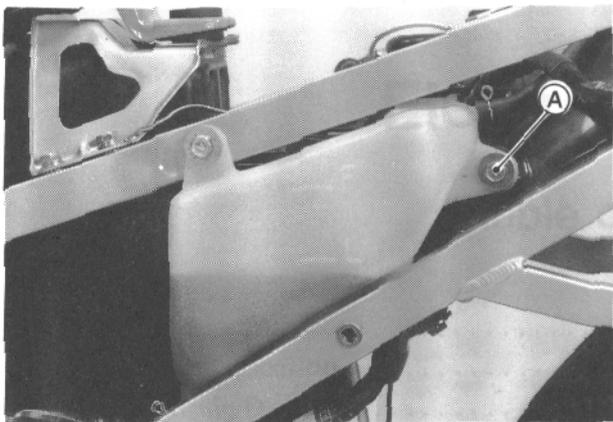


A. Coolant Reservoir Tank Mounting Bolt (Rear)

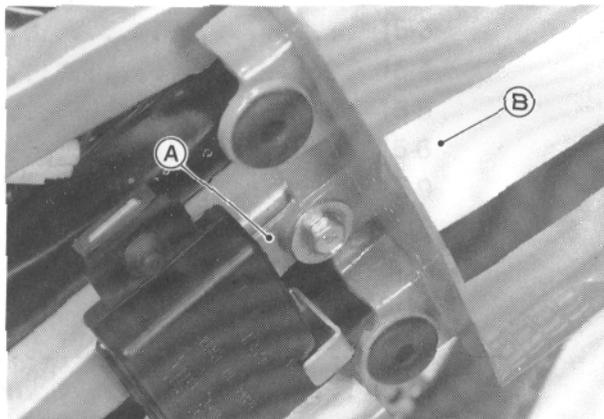


A. Fuse Case Bracket  
B. Seat Cover

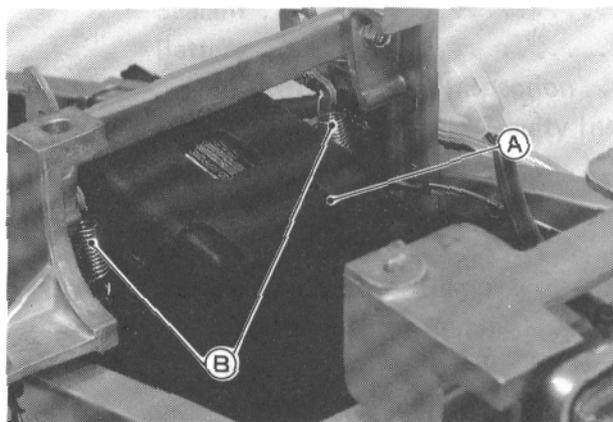

A. CDI Unit  
B. Seat Lock Return Spring

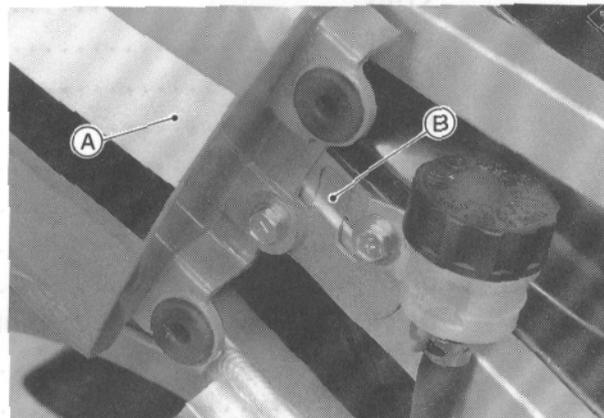

A. Seat Cover  
B. Rear Master Cylinder Reservoir Tank Bracket

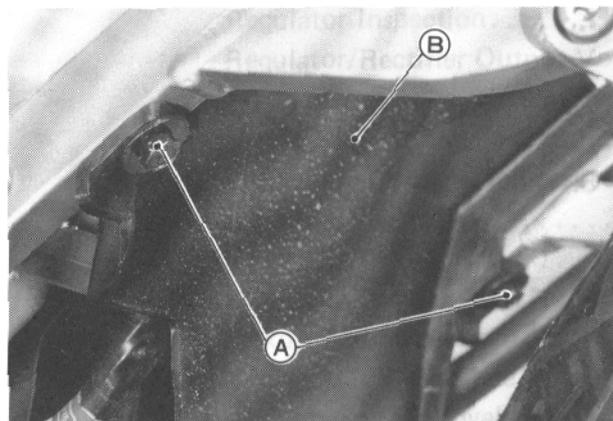

A. Mounting Bolts      B. Rear Fender Front Section