



# aprilia

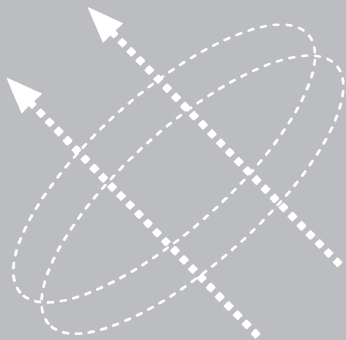


## use and maintenance

aprilia part # 8104042

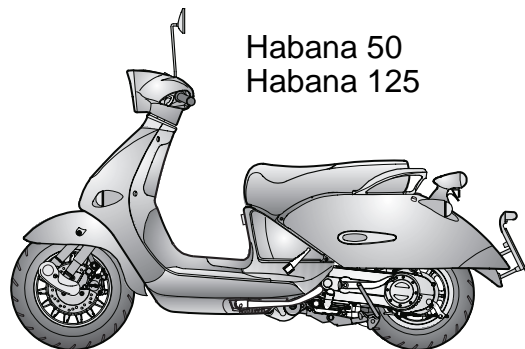

Habana 50  
Habana 125

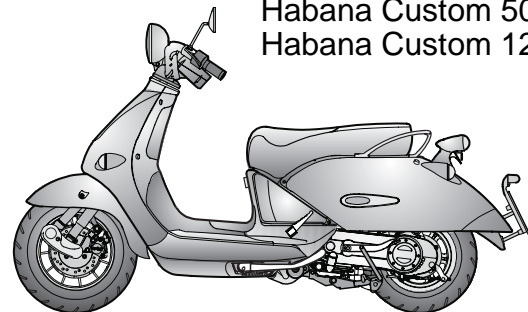

Habana Custom 50  
Habana Custom 125

First edition: may 1999


Reprint: july 1999

Produced and printed by:  
**stp** editing division  
Soave (VERONA) - Italy  
Tel. +39 - 045 76 11 911  
Fax +39 - 045 76 12 241  
E-mail: customer@stp.it  
www.stp.it

On behalf of:  
**aprilia s.p.a.**  
via G. Galilei, 1 - 30033 Noale (VE) - Italy  
Tel. +39 - 041 58 29 111  
Fax +39 - 041 44 10 54  
www.aprilia.com

## SAFETY WARNINGS

The following precautionary warnings are used throughout this manual in order to convey the following messages:

 **Safety warning. When you find this symbol on the vehicle or in the manual, be careful to the potential risk of personal injury. Non-compliance with the indications given in the messages preceded by this symbol may result in grave risks for your and other people's safety and for the vehicle!**

### WARNING

Indicates a potential hazard which may result in serious injury or even death.

### CAUTION

Indicates a potential hazard which may result in minor personal injury or damage to the vehicle.

**NOTE** The word “NOTE” in this manual precedes important information or instructions.

## TECHNICAL

★ The operations preceded by this symbol must be repeated also on the opposite side of the vehicle.

If not expressly indicated otherwise, for the reassembly of the units repeat the disassembly operations in reverse order.

The terms “right” and “left” are referred to the rider seated on the vehicle in the normal riding position.

**H50 HC50** Any mention to the use of the vehicle with passenger is to be intended as referred only to the countries where this is allowed.

## WARNINGS - PRECAUTIONS - GENERAL ADVICE

Before starting the engine, carefully read this manual and in particular the section “SAFE DRIVE”.

Your and other people's safety depends not only on your quickness of reflexes and on your agility, but also on what you know about the vehicle, on its efficiency and on your knowledge of the basic information for “SAFE DRIVE”. Therefore, get a thorough knowledge of the vehicle, in such a way as to be able to drive in the traffic safety.

**NOTE** This manual must be considered as an integral part of the vehicle and must always accompany it, even in case of re-sale.

**aprilia** has carried out this manual with the maximum attention, in order to supply the user with correct and updated information. However, since **aprilia** constantly improves the design of its products, there may be slight discrepancies between the characteristics of your vehicle and those described in this manual. For any clarification concerning the information contained in this manual, do not hesitate to contact your **aprilia** Official Dealer.

For control and repair operations not expressly described in this publication, for the purchase of **aprilia** genuine spare parts, accessories and other products, as well as for specific advice, contact exclusively **aprilia** Official Dealers and Service Centers, which guarantee prompt and accurate assistance.

Thank you for choosing **aprilia**. We wish you a nice ride.

All rights as to electronic storage, reproduction and total or partial adaptation, with any means, are reserved for all Countries.


**NOTE** When asking your Dealer for spare parts, specify the spare parts code indicated on the SPARE PARTS IDENTIFICATION LABEL.

Write down the identification code in the space here below, in order to remember it also in case of loss or deterioration of the label.

The label is stuck on the right beam of the frame; to be able to read it, remove the right inspection cover, see p. 57 (REMOVING THE RIGHT AND LEFT INSPECTION COVERS).

aprilia N°				YEAR		T	V	W	X	Y
SPARE PARTS CODE NUMBER				I.M.		A	B	C	D	E
I	UK	A	P	SF	B	D	F	E	GR	
NL	CH	DK	J	SGP	PL	IL	ROK	MAL	RCH	
BM	USA	AUS	BR	RSA	NZ	CDN	HR	SLO		


In this manual the various versions are indicated by the following symbols:

- H50** Habana model 50 cm<sup>3</sup>
- HC50** Habana Custom model 50 cm<sup>3</sup>
- H125** Habana model 125 cm<sup>3</sup>
- HC125** Habana Custom model 125 cm<sup>3</sup>
- ASD** automatic light switching version (Automatic Switch-on Device)
- OPT** optional
-  catalytic version


#### VERSION:

- I** Italy
- UK** United Kingdom
- A** Austria
- P** Portugal
- SF** Finland
- B** Belgium
- D** Germany
- F** France
- E** Spain
- GR** Greece
- NL** Holland
- CH** Switzerland
- DK** Denmark
- J** Japan
- SGP** Singapore
- PL** Poland
- IL** Israel
- ROK** South Korea
- MAL** Malaysia
- RCH** Chile
- BM** Bermuda
- USA** United States of America
- AUS** Australia
- BR** Brazil
- RSA** South Africa
- NZ** New Zealand
- CDN** Canada
- HR** Croatia
- SLO** Slovenia

## TABLE OF CONTENTS

<b>SAFE DRIVE</b> .....	5
BASIC SAFETY RULES .....	6
CLOTHING .....	9
ACCESSORIES .....	10
LOAD .....	10
<b>ARRANGEMENT</b>	
<b>OF THE MAIN ELEMENTS</b> <b>H50</b> <b>HC50</b> .....	12
<b>ARRANGEMENT</b>	
<b>OF THE MAIN ELEMENTS</b> <b>H125</b> <b>HC125</b> .....	14
<b>ARRANGEMENT OF THE CONTROLS /</b>	
<b>INSTRUMENTS AND INDICATORS</b> .....	16
INSTRUMENT AND INDICATOR TABLE .....	17
<b>MAIN INDEPENDENT</b>	
<b>CONTROLS</b> <b>H50</b> <b>H125</b> .....	18
CONTROLS ON THE LEFT SIDE	
OF THE HANDLEBAR .....	18
CONTROLS ON THE RIGHT SIDE	
OF THE HANDLEBAR .....	19
<b>MAIN INDEPENDENT</b>	
<b>CONTROLS</b> <b>HC50</b> <b>HC125</b> .....	20
CONTROLS ON THE LEFT SIDE	
OF THE HANDLEBAR .....	20
CONTROLS ON THE RIGHT SIDE	
OF THE HANDLEBAR .....	21
IGNITION SWITCH .....	22
STEERING LOCK .....	22
<b>AUXILIARY EQUIPMENT</b> .....	23
UNLOCKING / LOCKING THE SADDLE .....	23
CRASH HELMET /	
GLOVE COMPARTMENT .....	23
ANTI-THEFT HOOK .....	23
TOOL KIT .....	24
BAG HOOK .....	24
GLOVE COMPARTMENT .....	24
<b>MAIN COMPONENTS</b> .....	25
FUEL .....	25
LUBRICANTS .....	26
BRAKE FLUID - recommendations .....	27
FRONT BRAKE DISC .....	28
REAR DRUM BRAKE .....	29
TYRES .....	30
AUTOMATIC	
LIGHT SWITCHING VERSION <b>ASD</b> .....	31
<b>H50</b> <b>HC50</b> CATALYTIC SILENCER  .....	32
EXHAUST SILENCER .....	32

<b>INSTRUCTIONS FOR USE</b> .....	33
PRELIMINARY	
CHECKING OPERATIONS .....	33
STARTING .....	34
DEPARTURE AND DRIVE .....	37
RUNNING-IN .....	39
STOPPING .....	40
PARKING .....	41
POSITIONING THE VEHICLE	
ON THE STAND .....	42
SUGGESTIONS TO PREVENT THEFT .....	42
<b>MAINTENANCE</b> .....	43
REGULAR SERVICE	
INTERVALS CHART <b>H50</b> <b>HC50</b> .....	44
REGULAR SERVICE	
INTERVALS CHART <b>H125</b> <b>HC125</b> .....	45
IDENTIFICATION DATA .....	46
CHECKING THE ENGINE OIL LEVEL	
AND TOPPING UP <b>H125</b> <b>HC125</b> .....	47
AIR CLEANER <b>H50</b> <b>HC50</b> .....	48
AIR CLEANER <b>H125</b> <b>HC125</b> .....	49
CHECKING THE BRAKE PAD WEAR .....	50
CHECKING THE SHOE WEAR .....	51
INSPECTING THE FRONT	
AND REAR SUSPENSIONS .....	51
CHECKING THE STEERING .....	52
CHECKING	
THE ENGINE FULCRUM AXIS .....	52
REMOVING THE FRONT COVER .....	53
REMOVING	
THE LOWER HANDLEBAR COVER .....	54
REMOVING	
THE HEADLIGHT METAL RING .....	54
PARTIAL REMOVAL	
OF THE UPPER HANDLEBAR COVER .....	55
REMOVING THE REAR-VIEW MIRRORS .....	56
PARTIAL REMOVAL	
OF THE DASHBOARD .....	56
REMOVING THE CENTRAL	
INSPECTION COVER .....	57
REMOVING THE RIGHT AND LEFT	
INSPECTION COVERS .....	57
REMOVING	
THE BATTERY COVER <b>H50</b> <b>HC50</b> .....	57
CHECHING THE STAND .....	58
CHECKING THE SWITCHES .....	58
IDLING ADJUSTMENT .....	59

ADJUSTING	
THE ACCELERATOR CONTROL .....	60
SPARK PLUG .....	60
BATTERY	
LONG INACTIVITY OF THE BATTERY .....	62
CHECKING AND CLEANING	
THE TERMINALS .....	63
REMOVING THE BATTERY <b>H50</b> <b>HC50</b> .....	64
REMOVING THE BATTERY <b>H125</b> <b>HC125</b> .....	64
CHECKING THE ELECTROLYTE LEVEL .....	64
RECHARGING THE BATTERY .....	65
INSTALLING THE BATTERY <b>H50</b> <b>HC50</b> .....	65
INSTALLING THE BATTERY <b>H125</b> <b>HC125</b> .....	65
CHANGING THE FUSES .....	66
ADJUSTING	
THE VERTICAL HEADLIGHT BEAM .....	67
BULBS .....	67
CHANGING	
THE HEADLIGHT BULBS <b>H50</b> .....	68
CHANGING	
THE HEADLIGHT BULBS <b>H125</b> .....	69
CHANGING	
THE HEADLIGHT BULBS <b>HC50</b> .....	70
CHANGING	
THE HEADLIGHT BULBS <b>HC125</b> .....	71
CHANGING THE FRONT AND REAR	
DIRECTION INDICATOR BULBS .....	72
CHANGING	
THE DASHBOARD BULBS <b>H50</b> <b>H125</b> .....	73
CHANGING THE DASHBOARD BULBS .....	74
CHANGING THE REAR LIGHT BULB .....	75
CHANGING	
THE NUMBER PLATE BULB <b>H125</b> <b>HC125</b> .....	76
<b>TRANSPORT</b> .....	76
DRAINING THE FUEL TANK .....	77
<b>CLEANING</b> .....	78
LONG PERIODS OF INACTIVITY .....	79
<b>TECHNICAL DATA</b> .....	80
LUBRICANT CHART <b>H50</b> <b>HC50</b> .....	84
LUBRICANT CHART <b>H125</b> <b>HC125</b> .....	85
Importers .....	88-89
WIRING DIAGRAM Habana 50 .....	90
WIRING DIAGRAM - Habana 50  .....	92
WIRING DIAGRAM Habana Custom 50 .....	94
WIRING DIAGRAM Habana 125 .....	96