


12. FRAME COVERS

FRAME COVERS

SERVICE INFORMATION..... 12-2
FRAME COVERS REMOVAL/INSTALLATION 12-3

12. FRAME COVERS

ASSEMBLY DRAWING

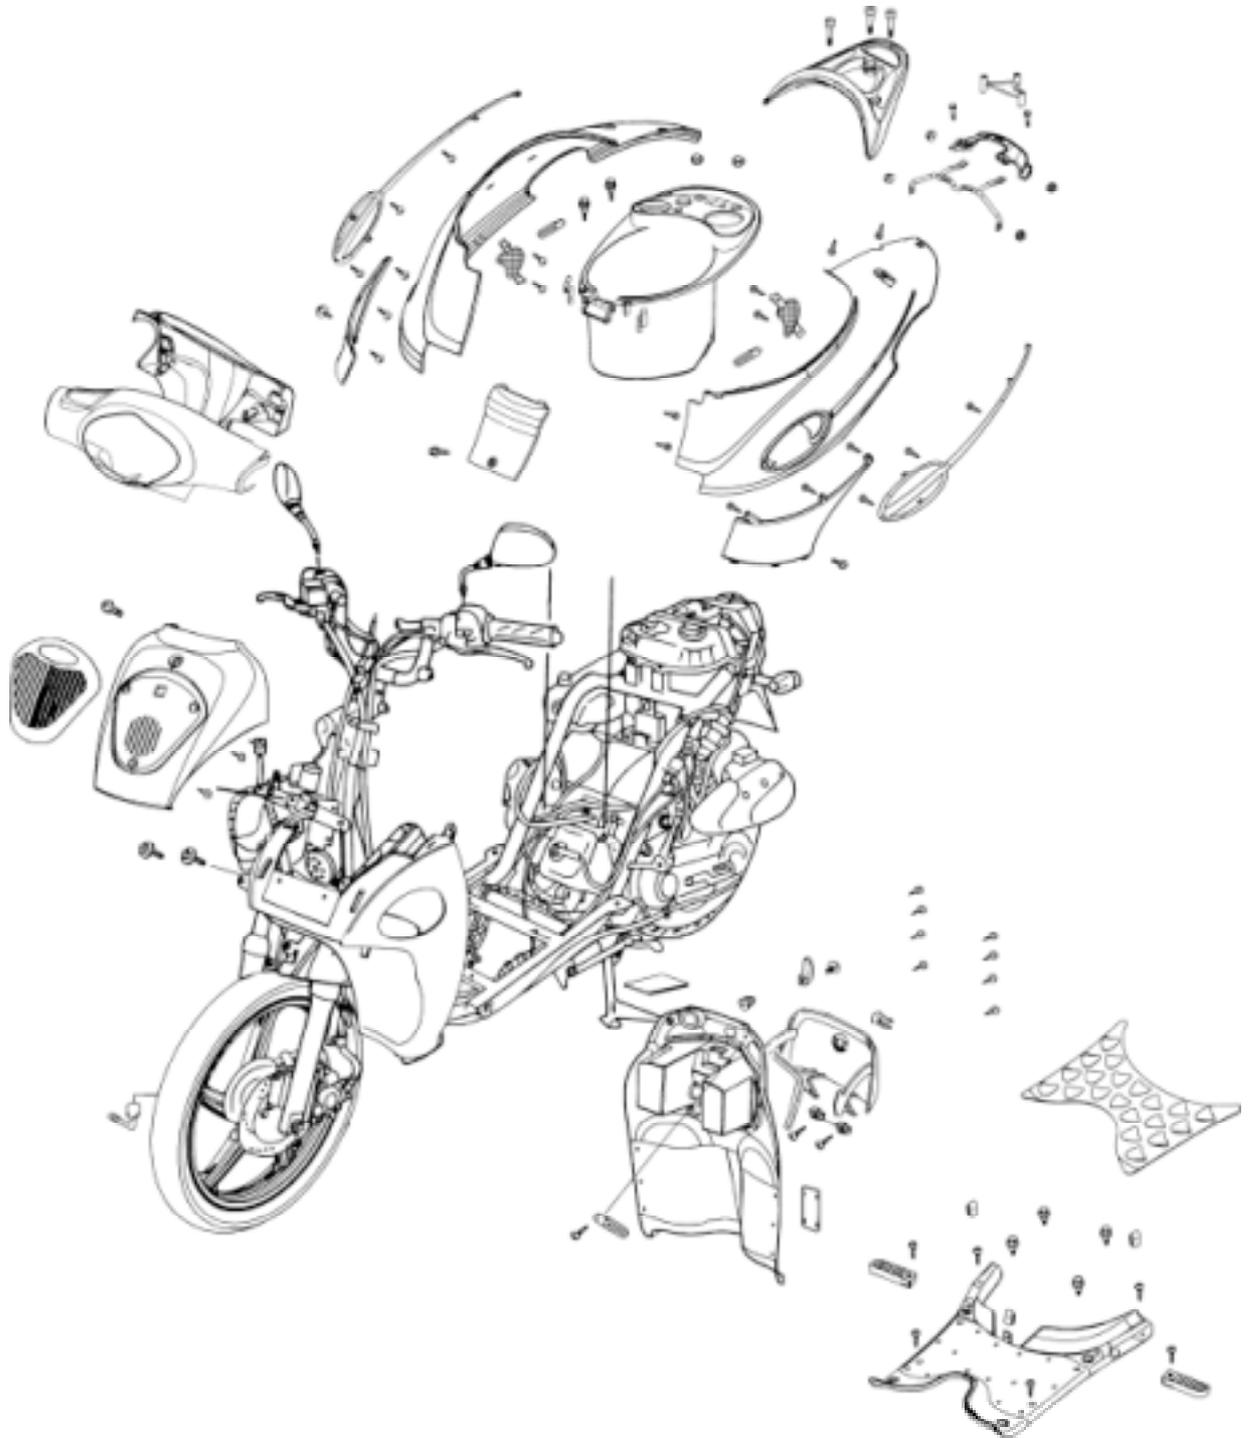

12. FRAME COVERS

SERVICE INFORMATION

- When removing frame covers, use care not to pull them by force because the cover joint claws may be damaged.

Items Related for Removal

- Handlebar front cover ——— Headlight wire
- Front cover ———
- Handlebar rear cover ——— Speedometer cable and instrument light wire connectors, etc.
- Frame body cover ——— Met-in box, rear carrier, rear fender.
- Floor board ——— frame body cover.
- Front tool box ——— Front cover, battery, floor board .

12. FRAME COVERS

FRAME COVERS REMOVAL

FRONT COVER REMOVAL

Remove the screw the front cover.
Remove the two screws on the back of the front cover.
Push the two inside claws of the downside front cover to float the front cover.
Remove the front cover downward.
The installation sequence is the reverse of removal.


* During removal, be careful not to pull the joint claws forcibly.

Front Cover



Screw

Screws

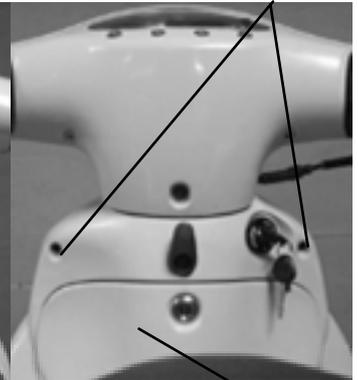

Front Tool Box

HANDLEBAR FRONT/REAR COVER REMOVAL


First remove the one screws attaching the handlebar front cover.
Remove the handlebar front cover.
Disconnect the headlight wire connector.
Remove the handlebar rear cover:
Remove the four screws and bolt attaching the handlebar rear cover.
Disconnect the speedometer cable and instrument light wire connectors.
Remove the handlebar rear cover.
The installation sequence is the reverse of removal.

Screws



Handlebar Rear Cover

Screws

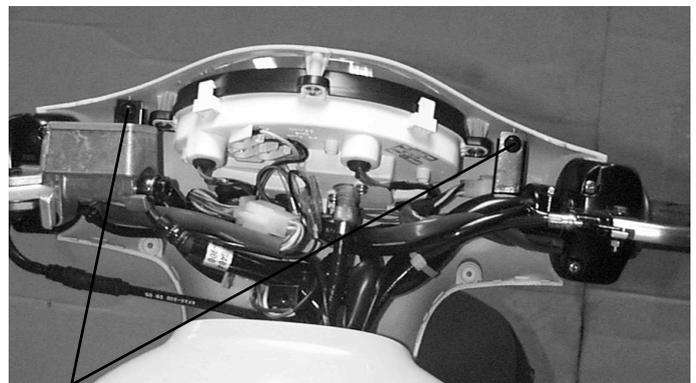


Screws

12. FRAME COVERS

FLOOR BOARD REMOVAL


Remove the rear carrier. (⇒12-5)
Remove the frame body cover. (⇒12-6)
Remove the front cover. (⇒12-3)
Remove the four bolts attaching and six screws the floor board to remove the floor board.
The installation sequence is the reverse of removal.

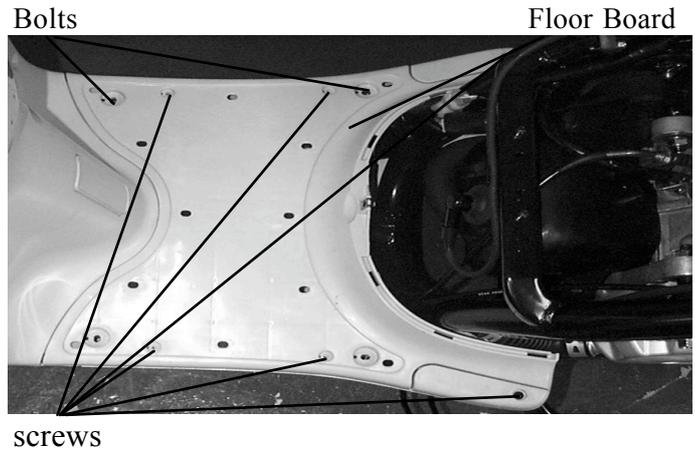

FRONT TOOL BOX REMOVAL


Remove the rear carrier. (⇒12-5)
Remove the frame body cover. (⇒12-6)
Remove the floor board. (⇒12-4)
Open the front tool box and remove the battery.
Remove the switch covers.
Remove the nut attaching and six screws the front tool box.
Remove the front tool box.
The installation sequence is the reverse of removal.

* When removing the battery, first disconnect the battery negative (-) cable and then the positive (+) cable.
When taking the front tool box, pull them up and backward from downside not to damage the claws.

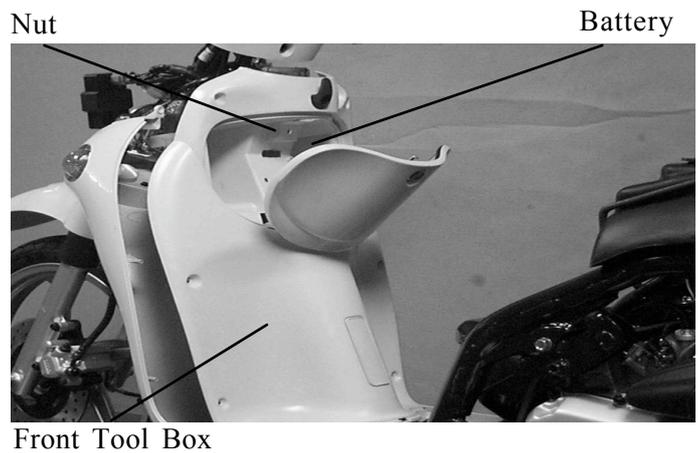

BOTTOM COVER REMOVAL


Remove the floor board. (⇒12-4)
Remove the three screws each side of the bottom cover.
Remove the bolt attaching the side stand.
Remove the bottom cover.
The installation sequence is the reverse of removal.

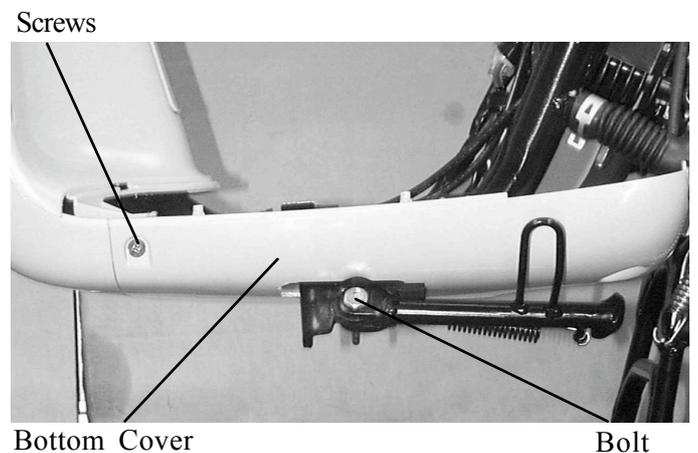

12. FRAME COVERS


MET-IN BOX REMOVAL:

Open the seat.
Remove the two bolts, two nuts attaching the met-in box.
Remove the oil tank cap, rubber packing and fuel tank cap.
Remove the met-in box.
The installation sequence is the reverse of removal .

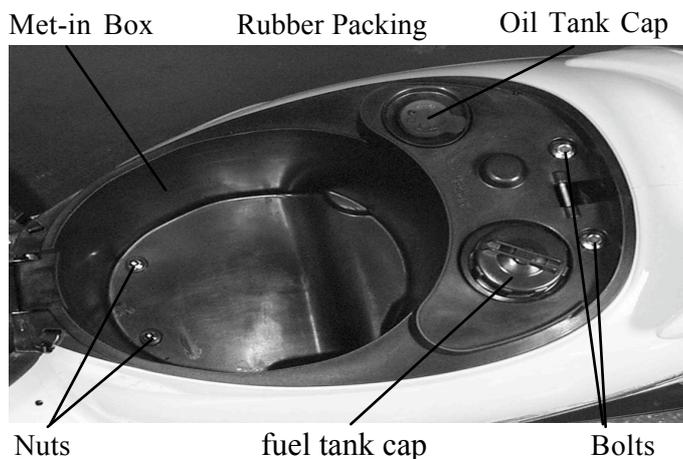


REAR CARRIER REMOVAL

Remove the three bolts attaching the rear carrier.
Remove the rear carrier.
The installation sequence is the reverse of removal.

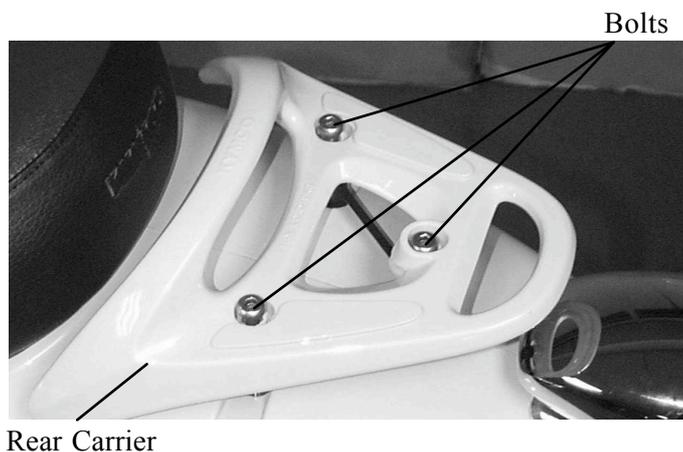

REAR FENDER REMOVAL

Remove the two screws the rear fender.
Remove the rear fender.
The installation sequence is the reverse of removal.

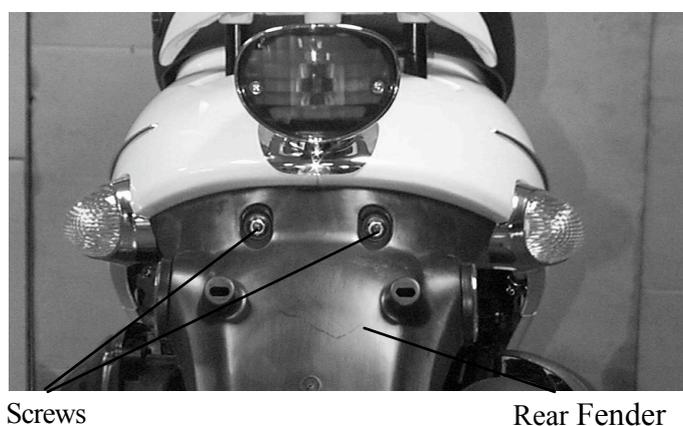

12. FRAME COVERS

FRAME BODY COVER REMOVAL

Remove the rear carrier. (⇒12-5)

Remove the rear fender. (⇒12-5)


Remove the met-in box. (⇒12-4)

Remove the rear brake cable.

Remove the bolt attaching the front center cover of the frame body cover.

Remove the frame body cover.

The installation sequence is the reverse of removal.

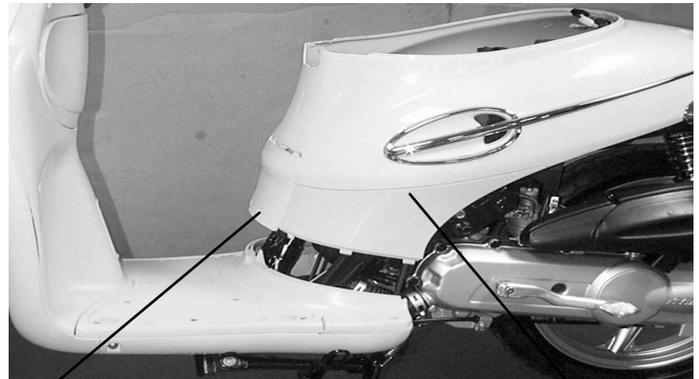

Bolt

frame body

FRONT FENDER REMOVAL

Remove the floor board. (⇒12-4)

Remove the front tool box.(⇒12-4)

Remove the handlebar. (⇒13-3)

Remove the front fork. (⇒13-19)

Remove two bolts attaching each side of the front fender.

Remove the front fender.

The installation sequence is the reverse of removal.



Front Fender

FRONT LOWER COVERS REMOVAL

Remove the rear brake cable.

Remove the frame body cover. (⇒12-5)

Remove the front tool box.(⇒12-4)

Remove the handlebar. (⇒13-3)

Remove the front fork. (⇒13-19)


First remove the front cover. (⇒12-3)

Remove the right and left bottom cover removing the two screws for each rail.

Remove the two bolts attaching each of the right and left front lower covers.

Remove the front lower covers.

The installation sequence is the reverse of removal.

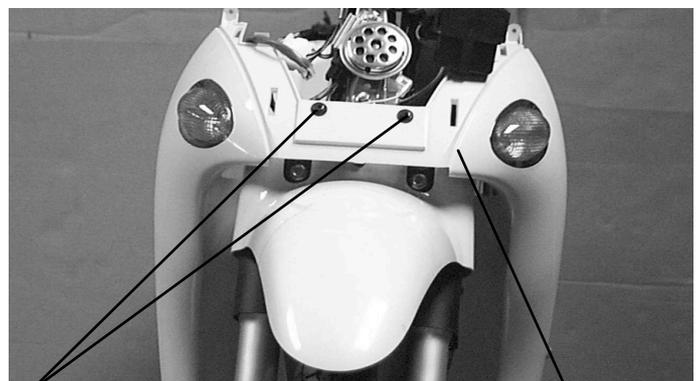

Bolts

Front Lower Cover