






**Honda XL650V Transalp Microfiche**

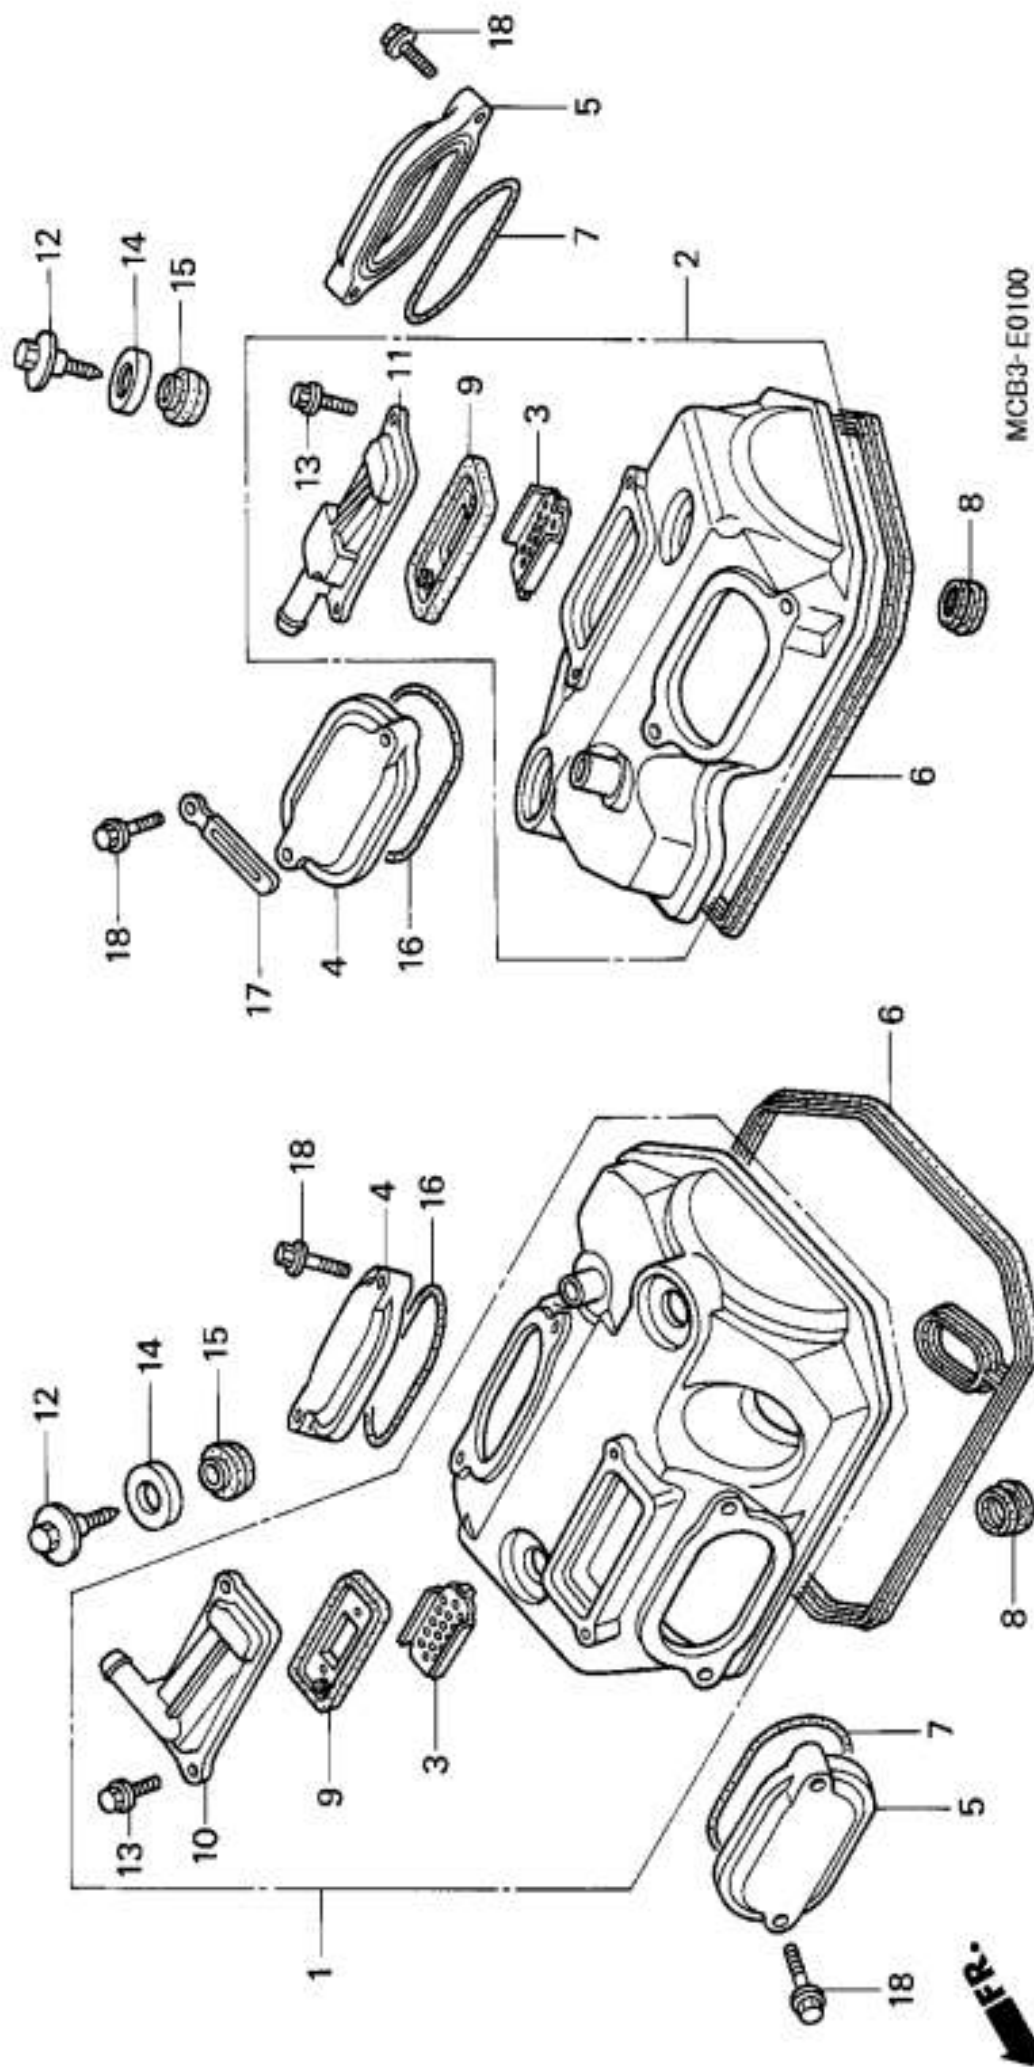


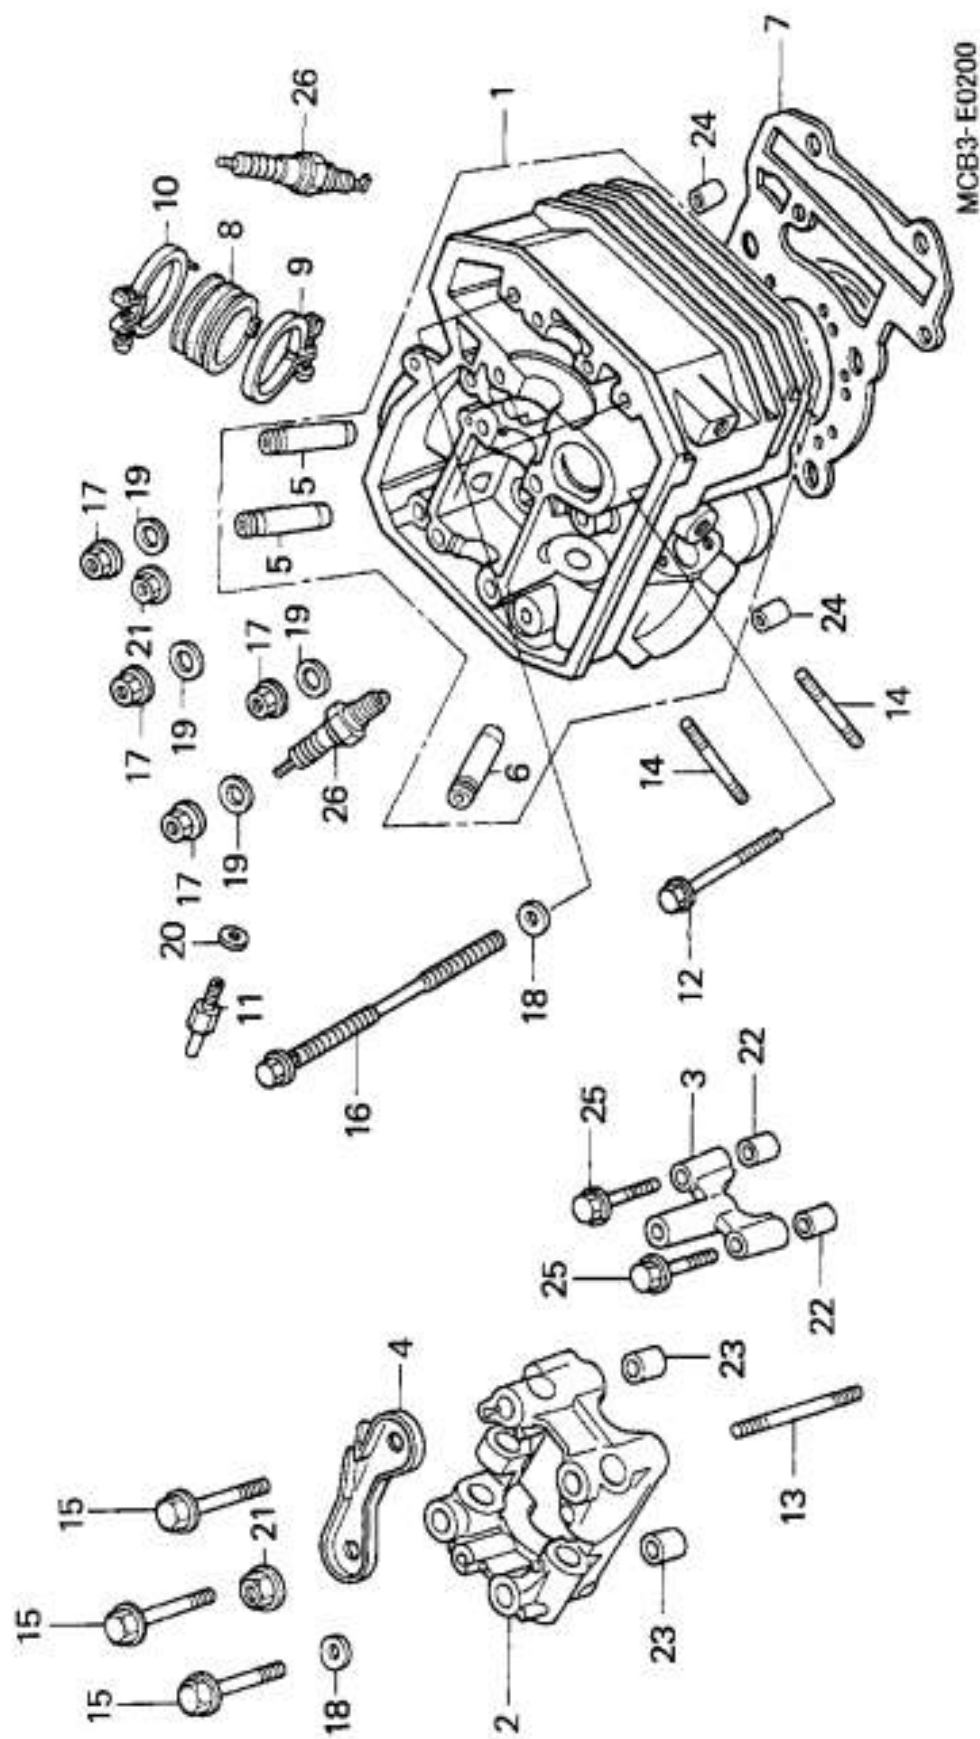


MCB3-E0200

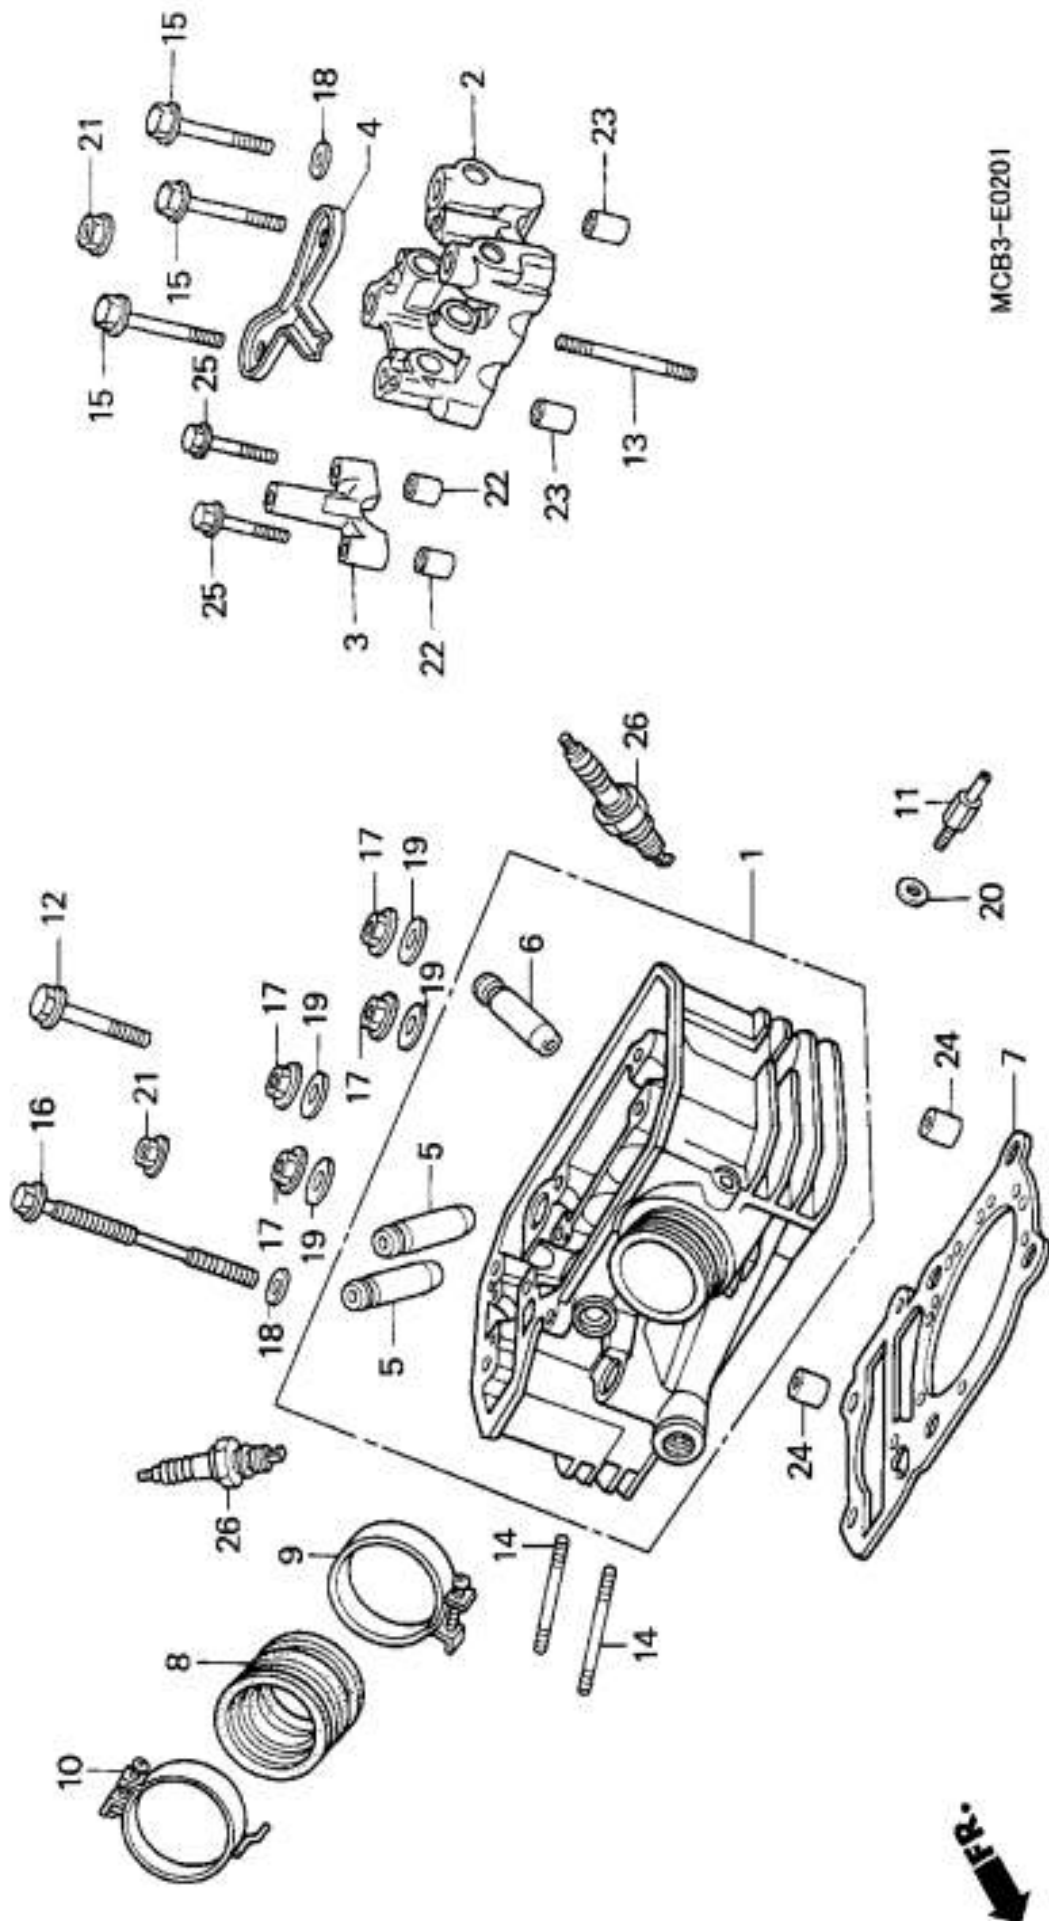


MCB3-E0201



FR.

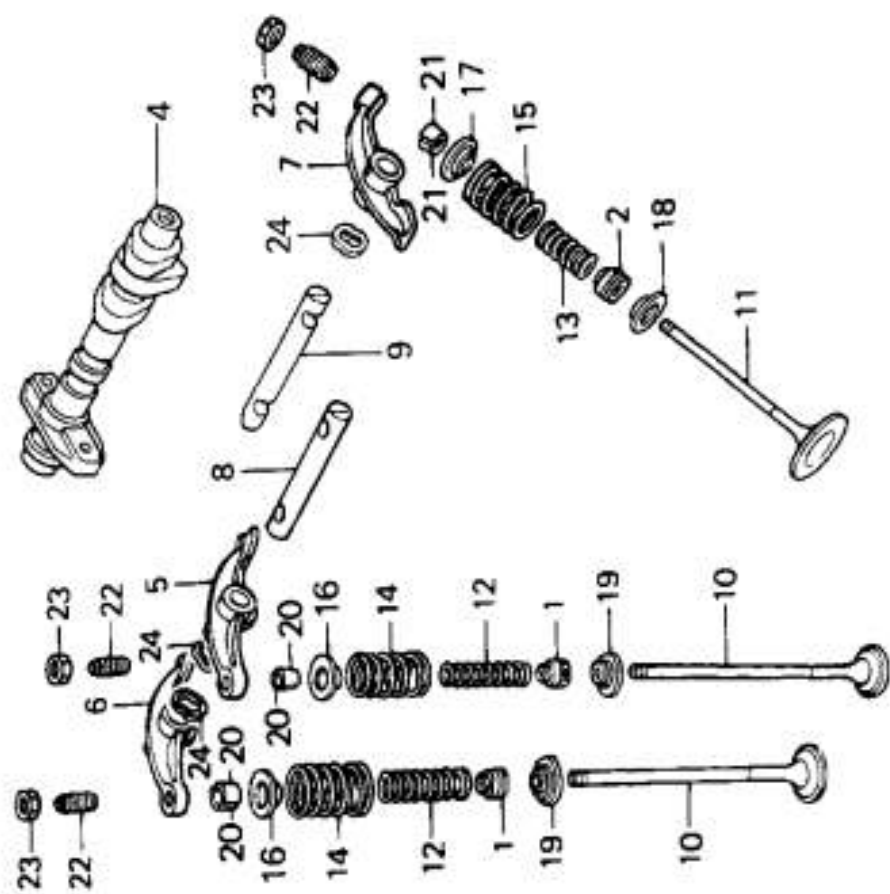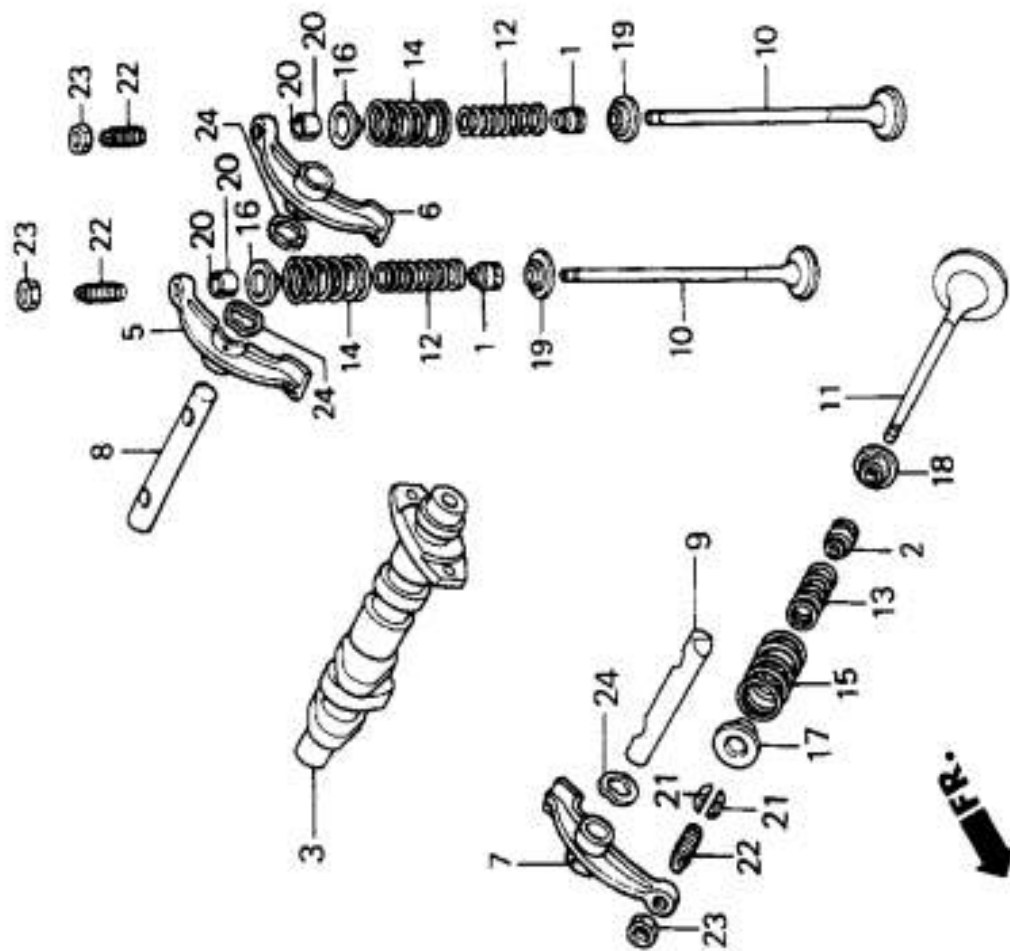


MCB3-E0300

MCB3-E0400

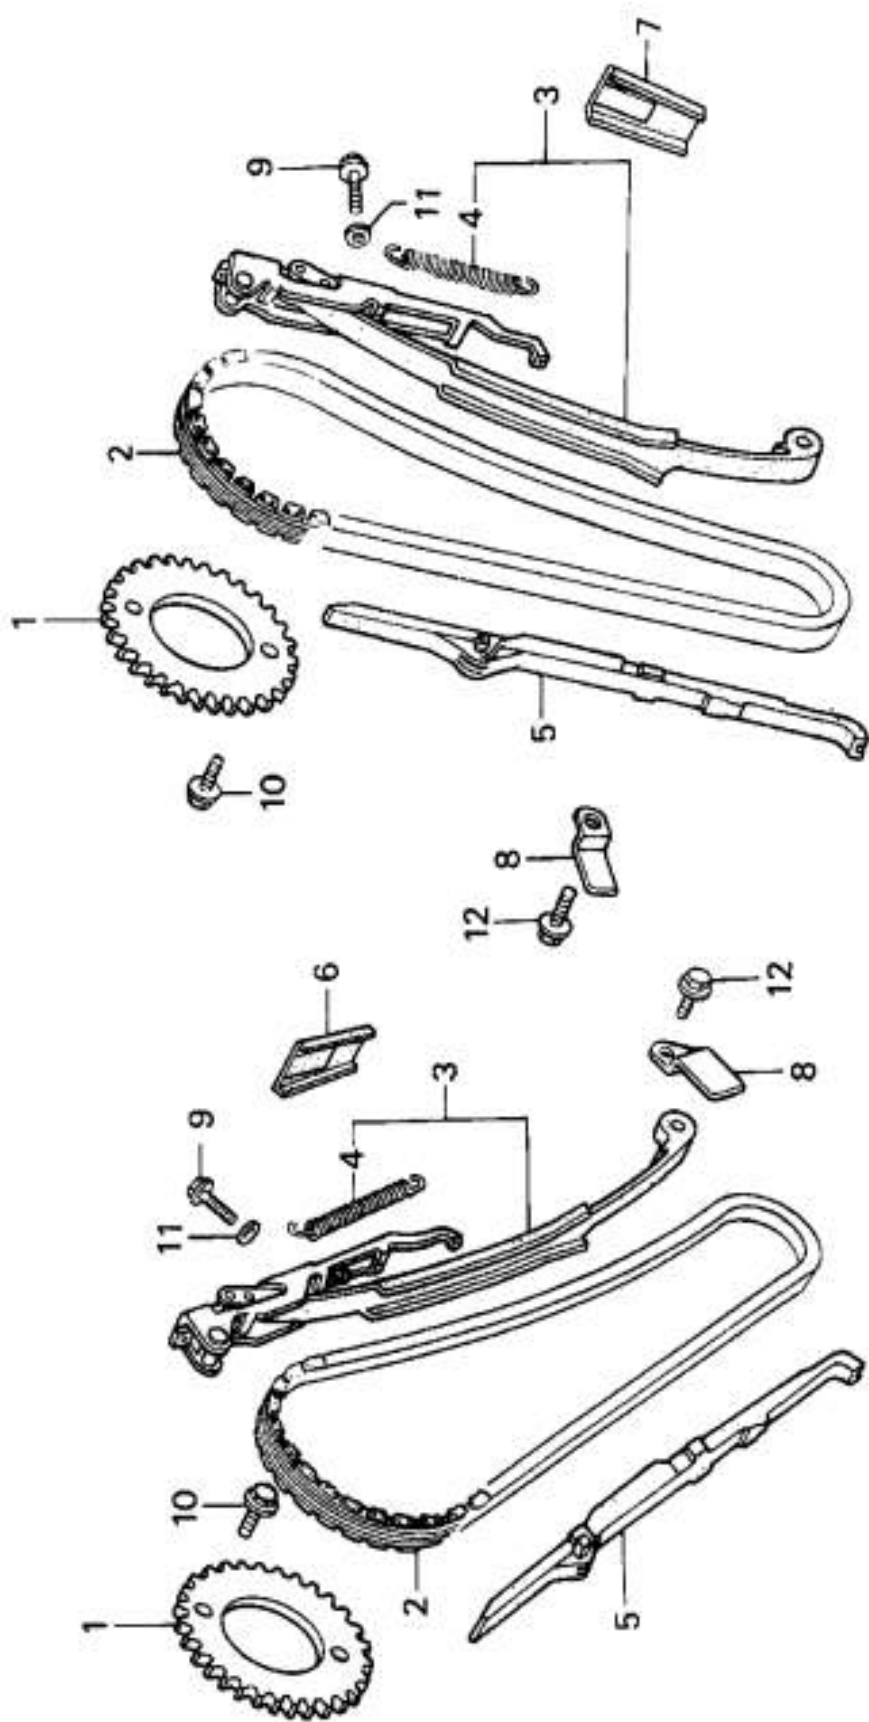


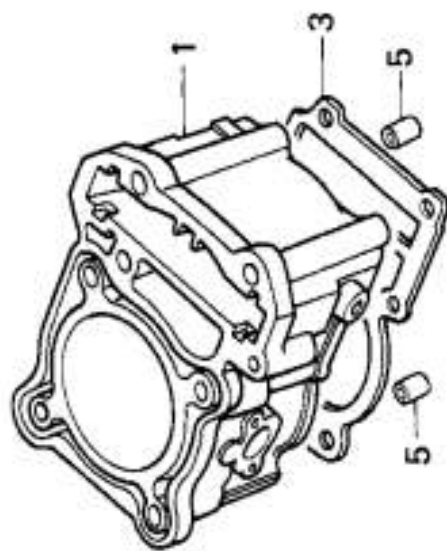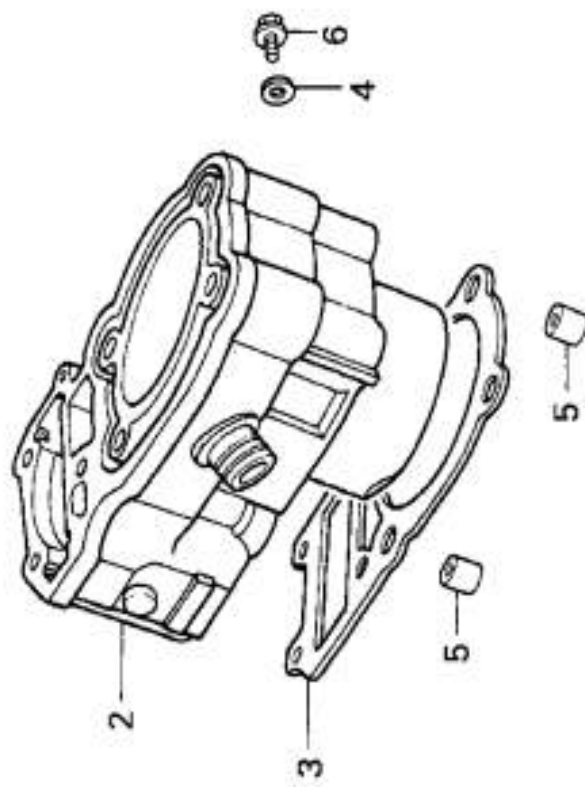


MCB3-E0500

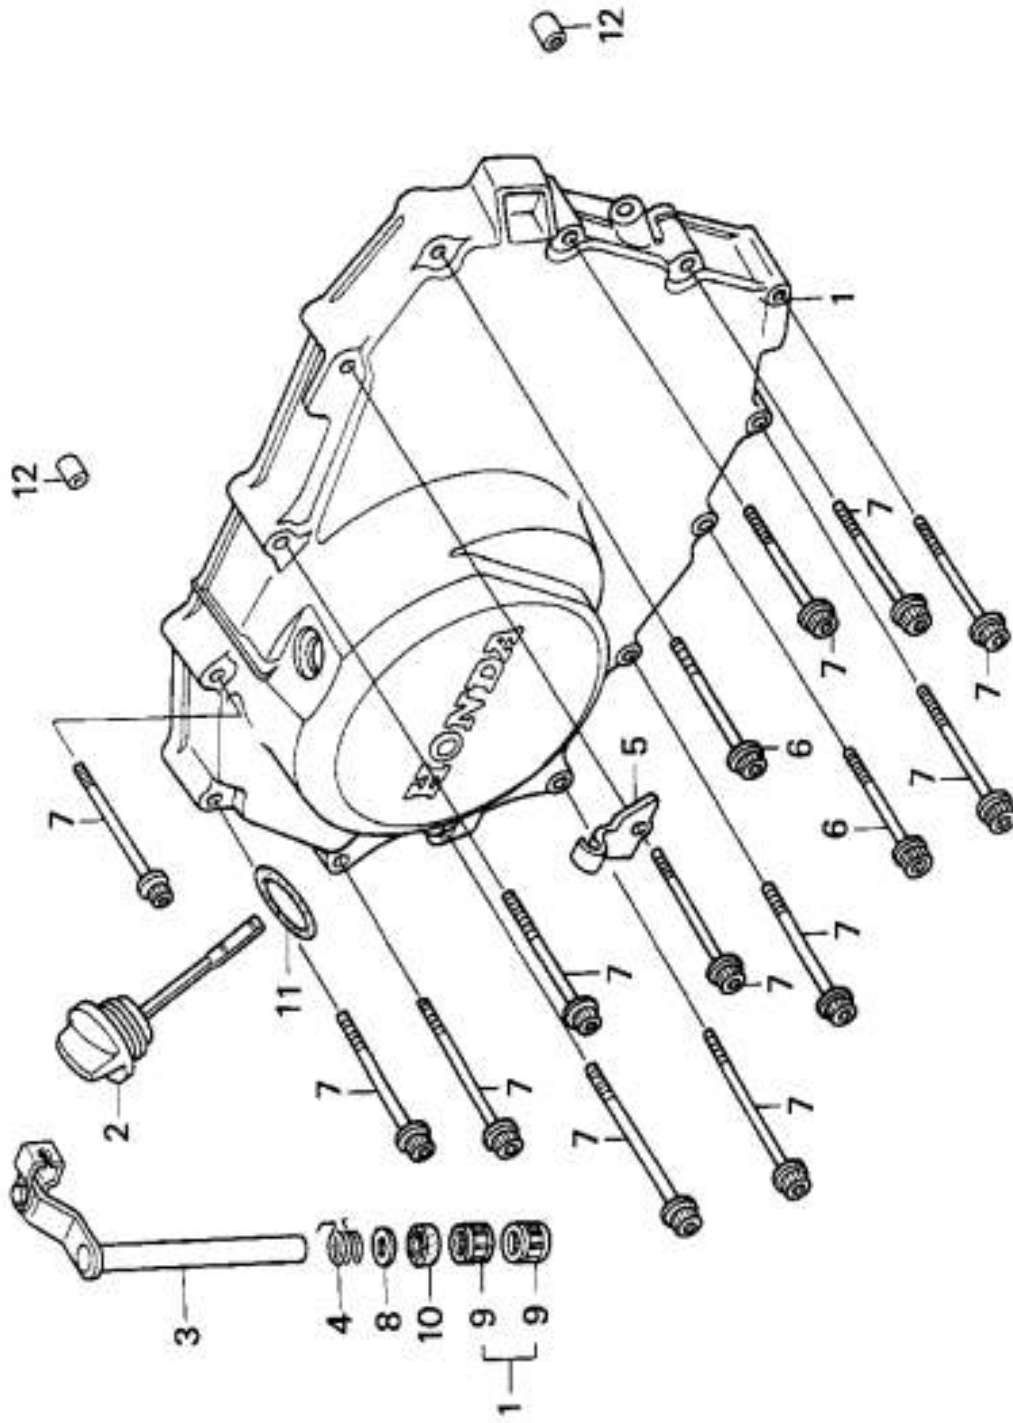



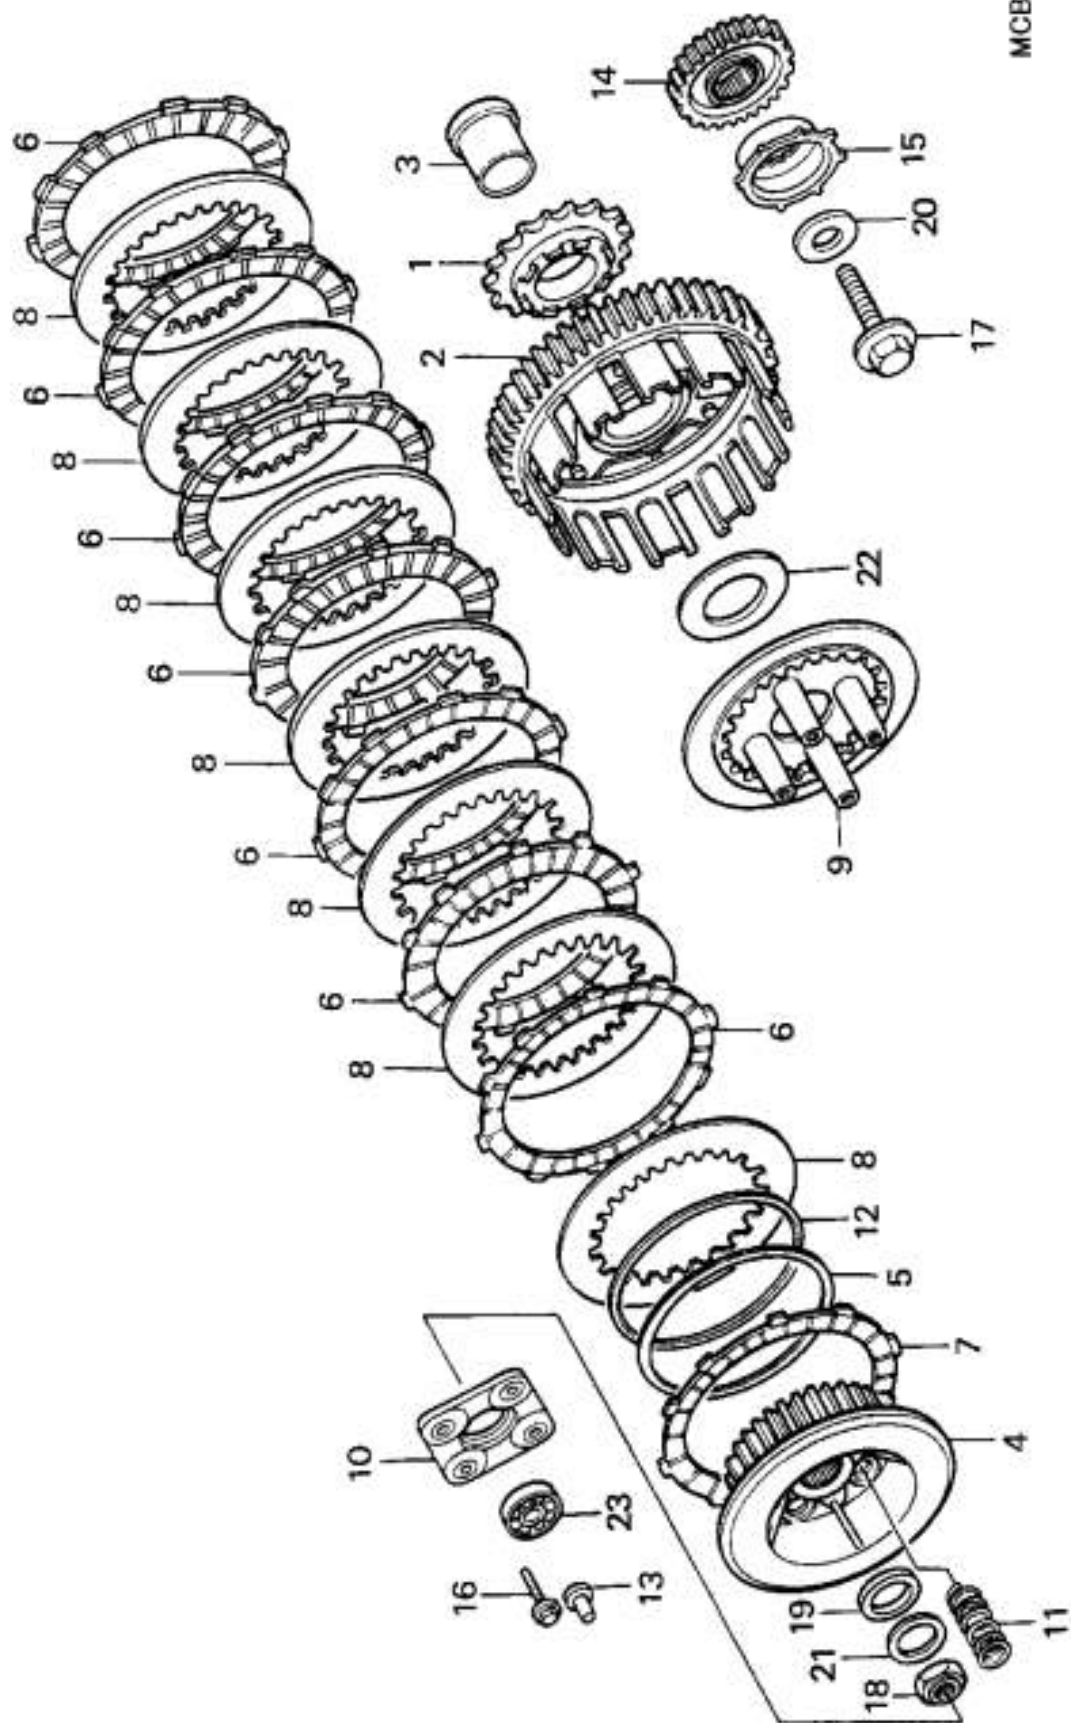


MCB3-E0700

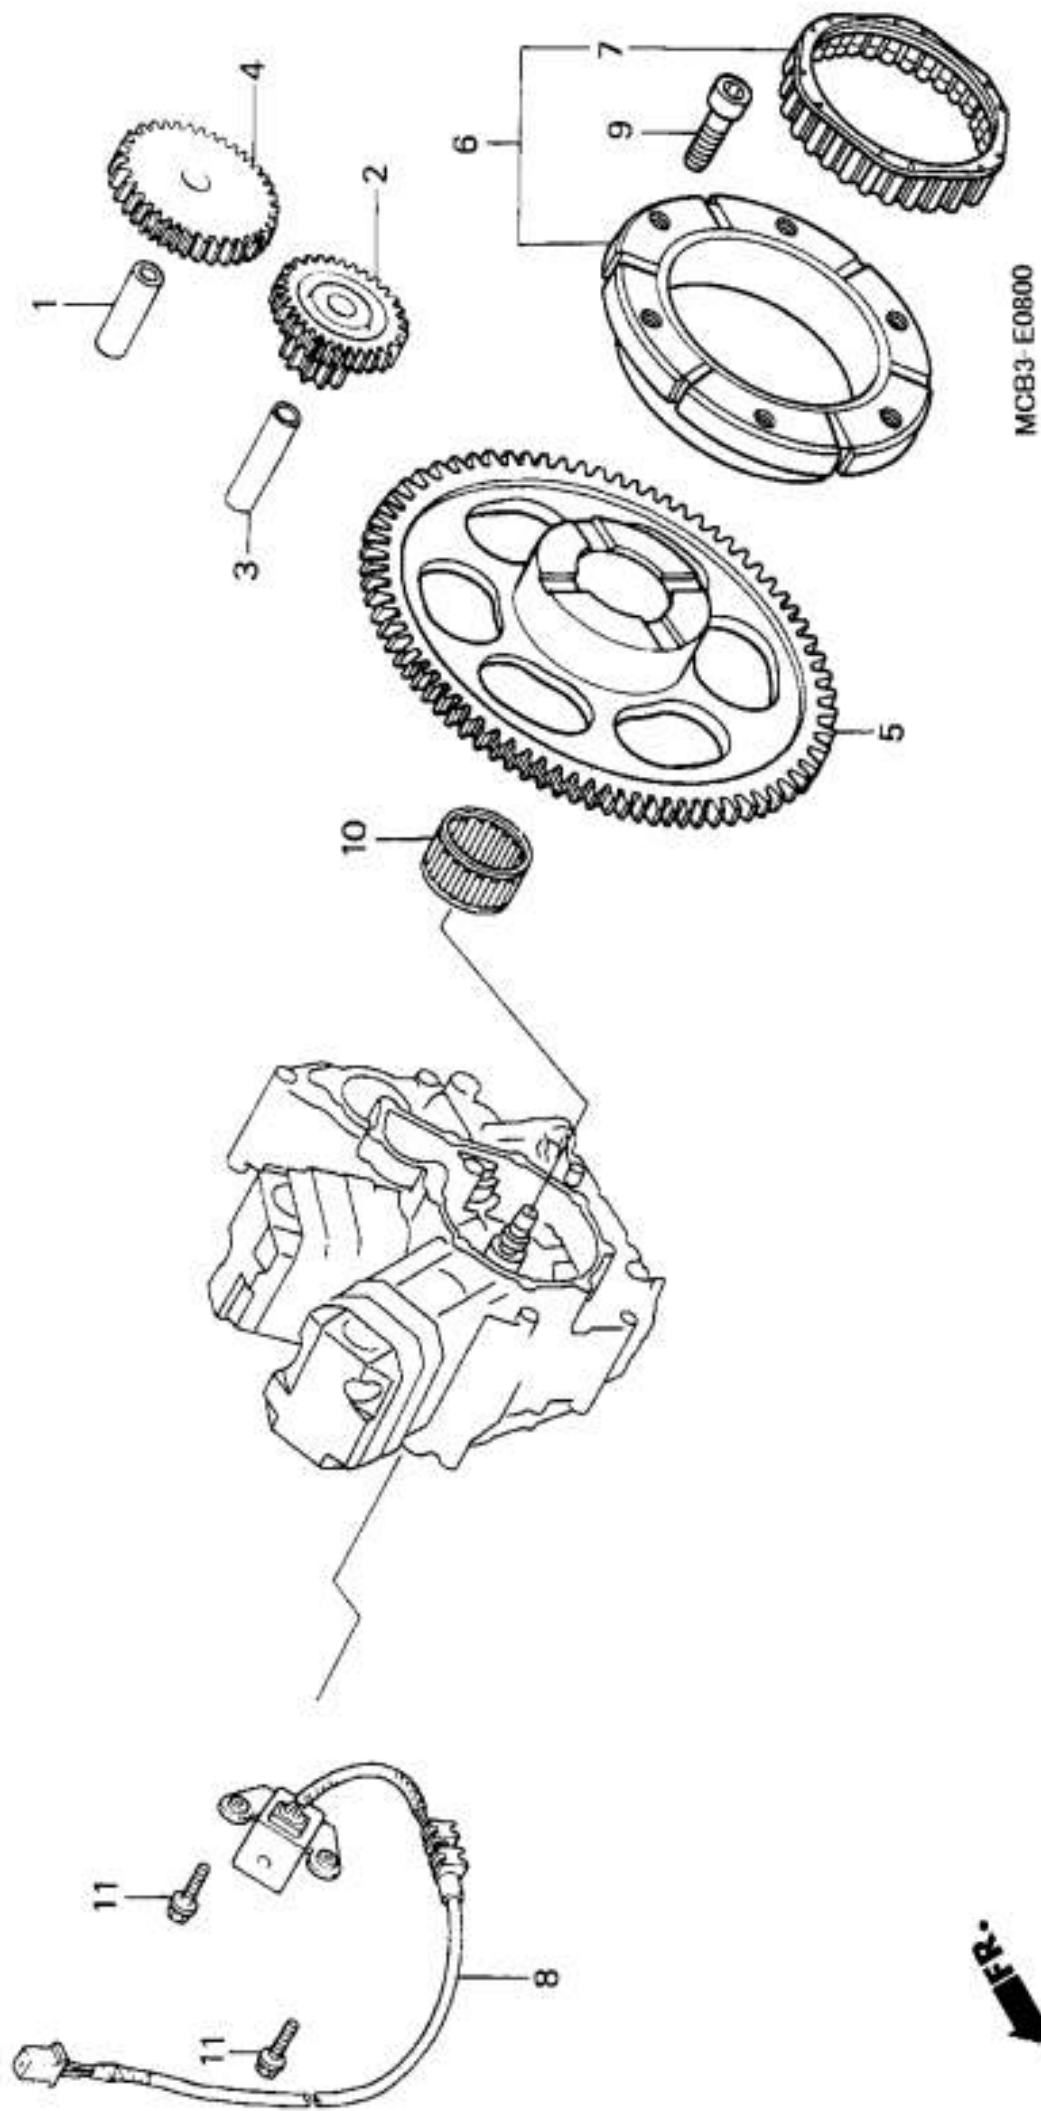


MCB3-E0800

FER.

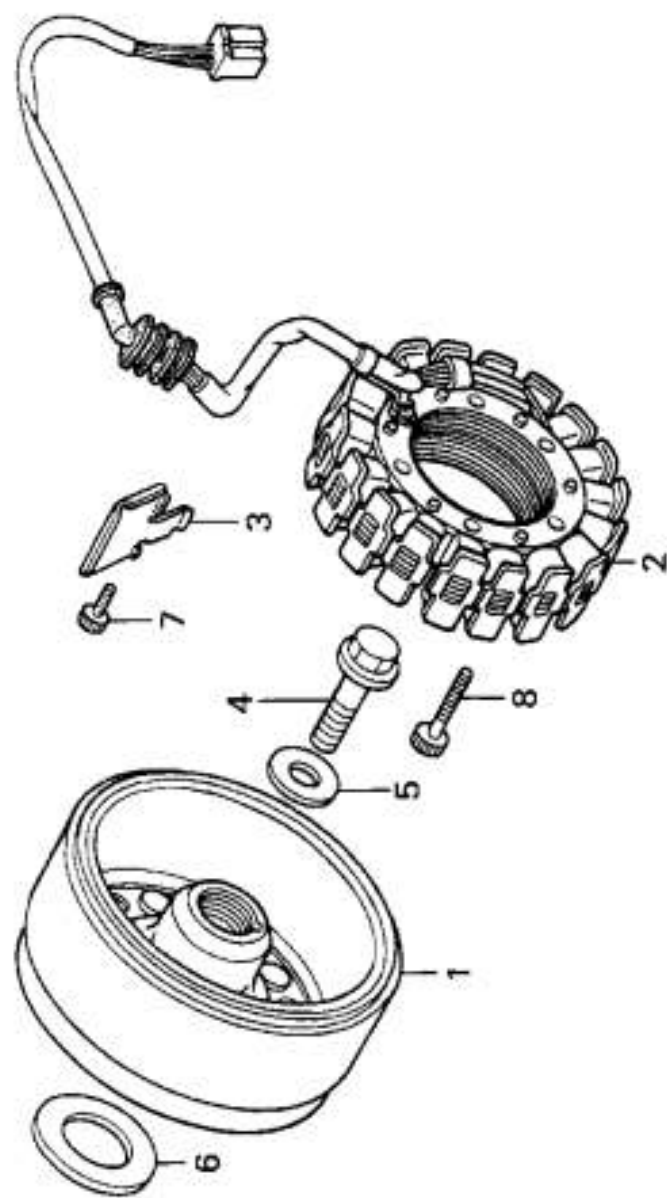


MCB3-E0900

MCB3-E1000

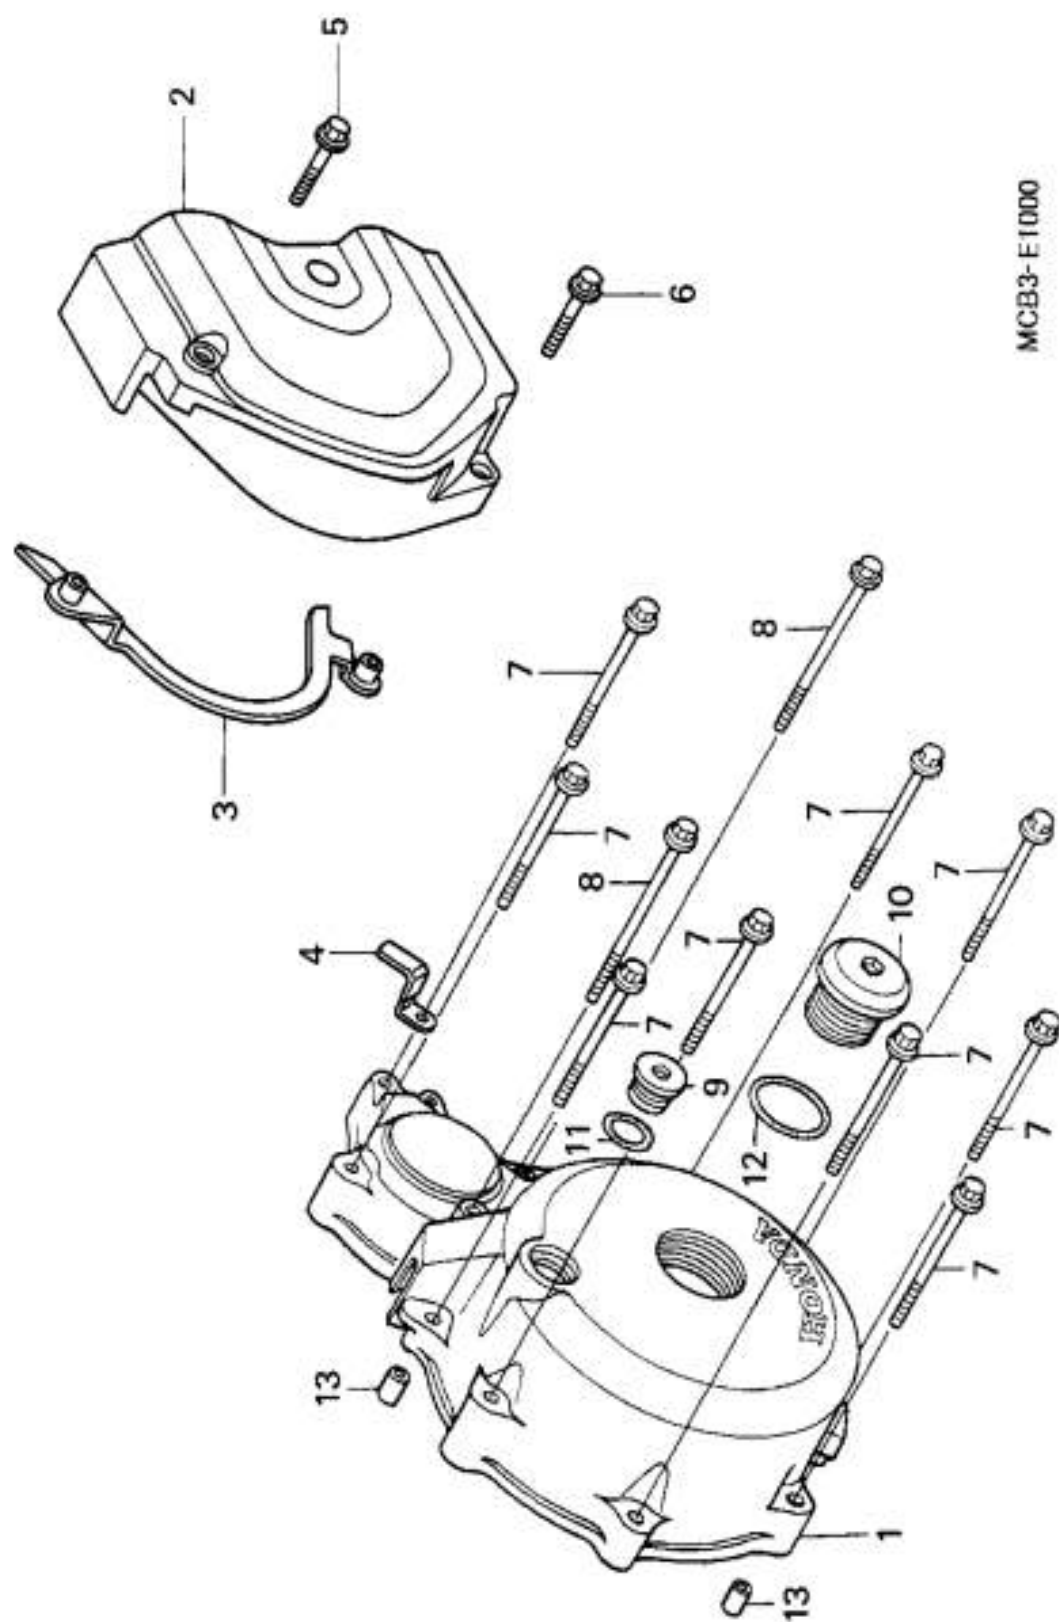


FR.


MCB3-E1100

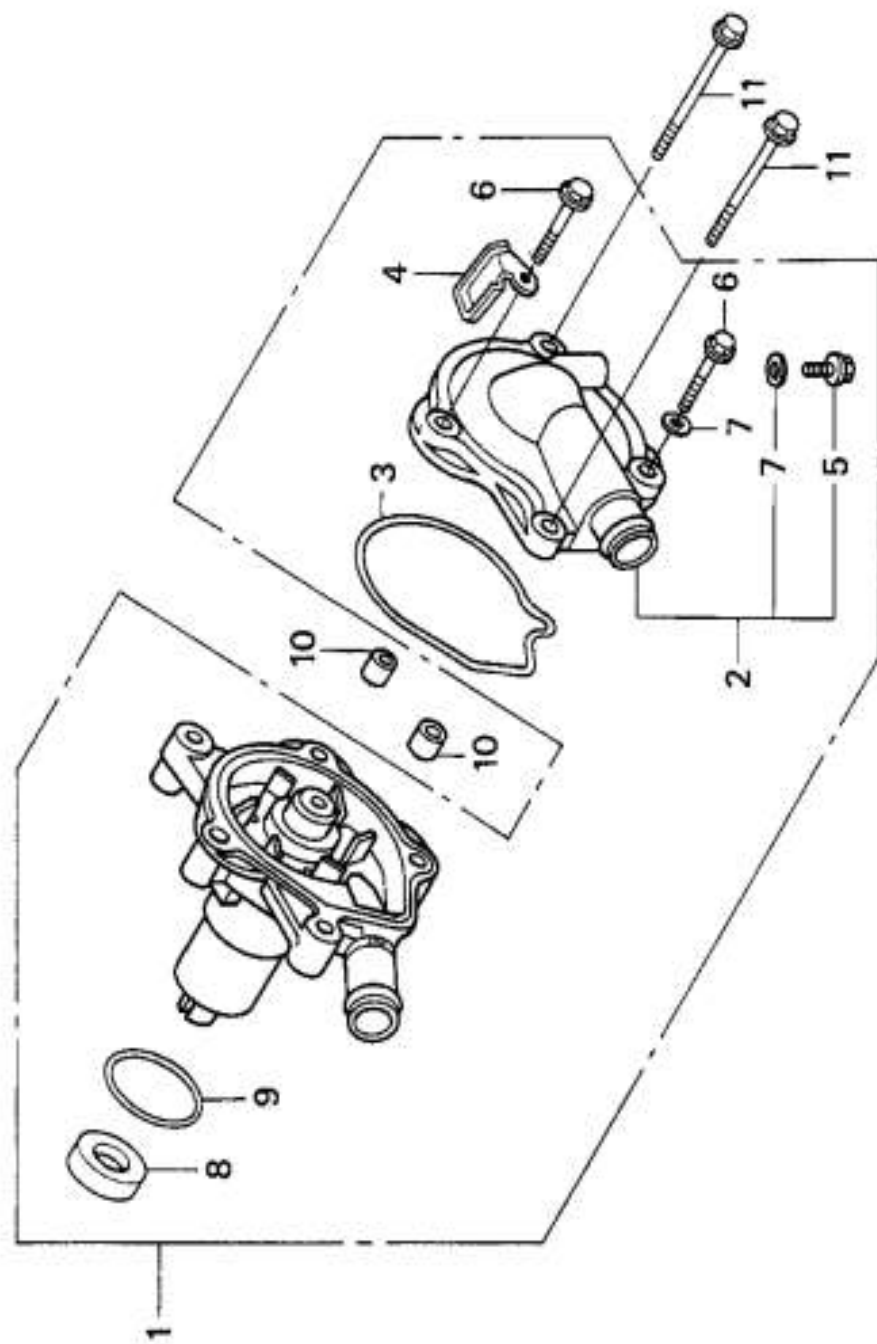


FR. 

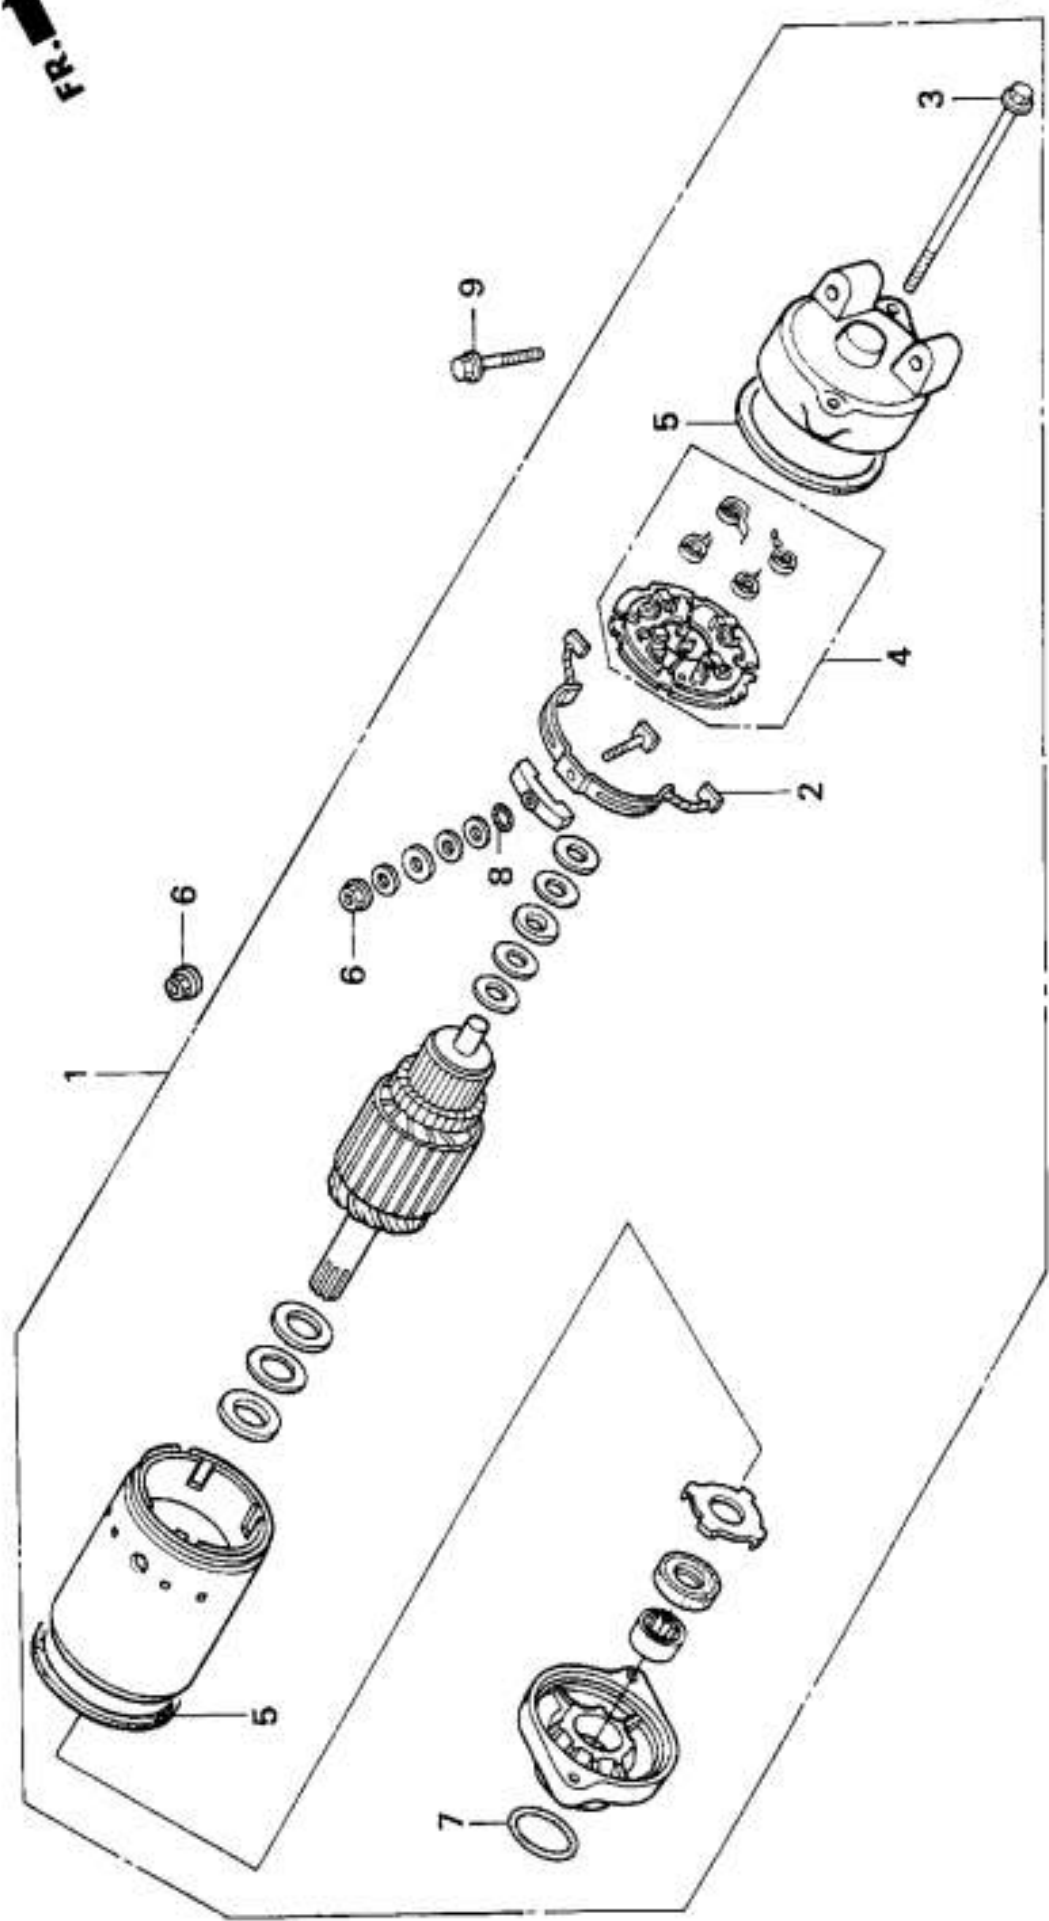

MCB3-E120X

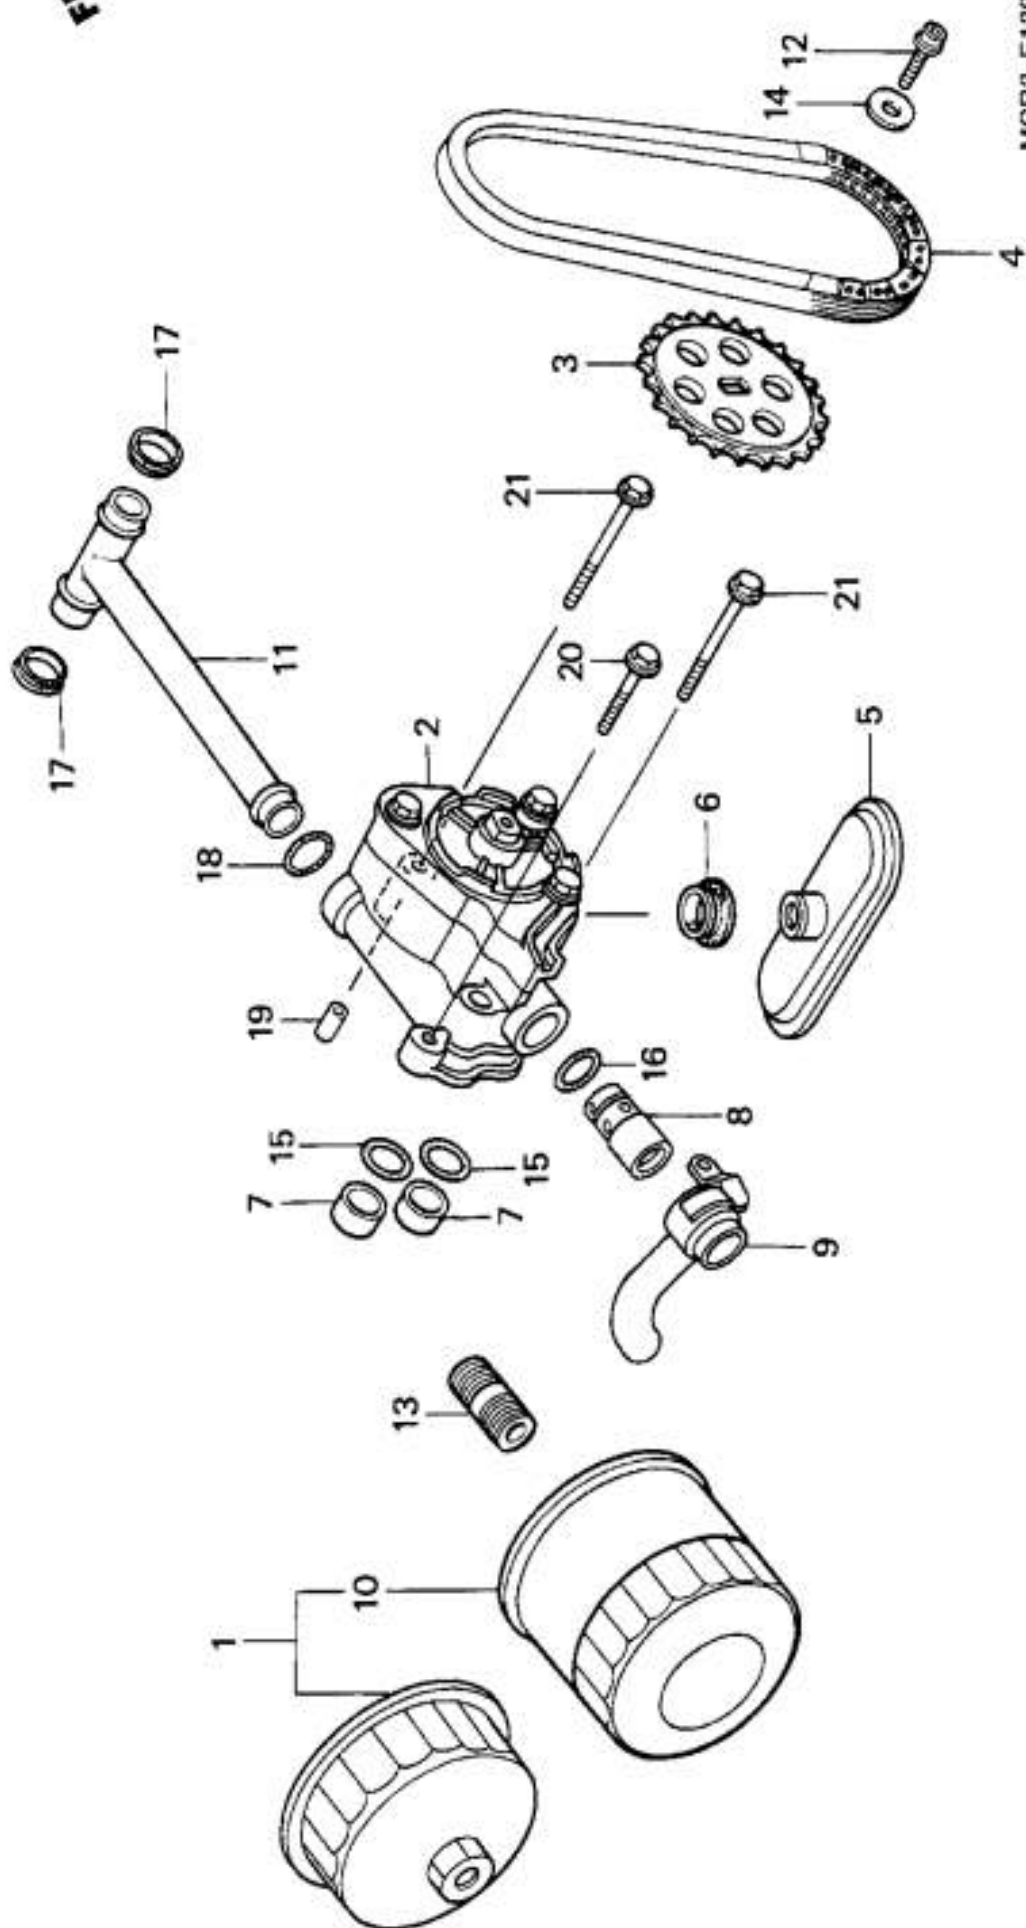


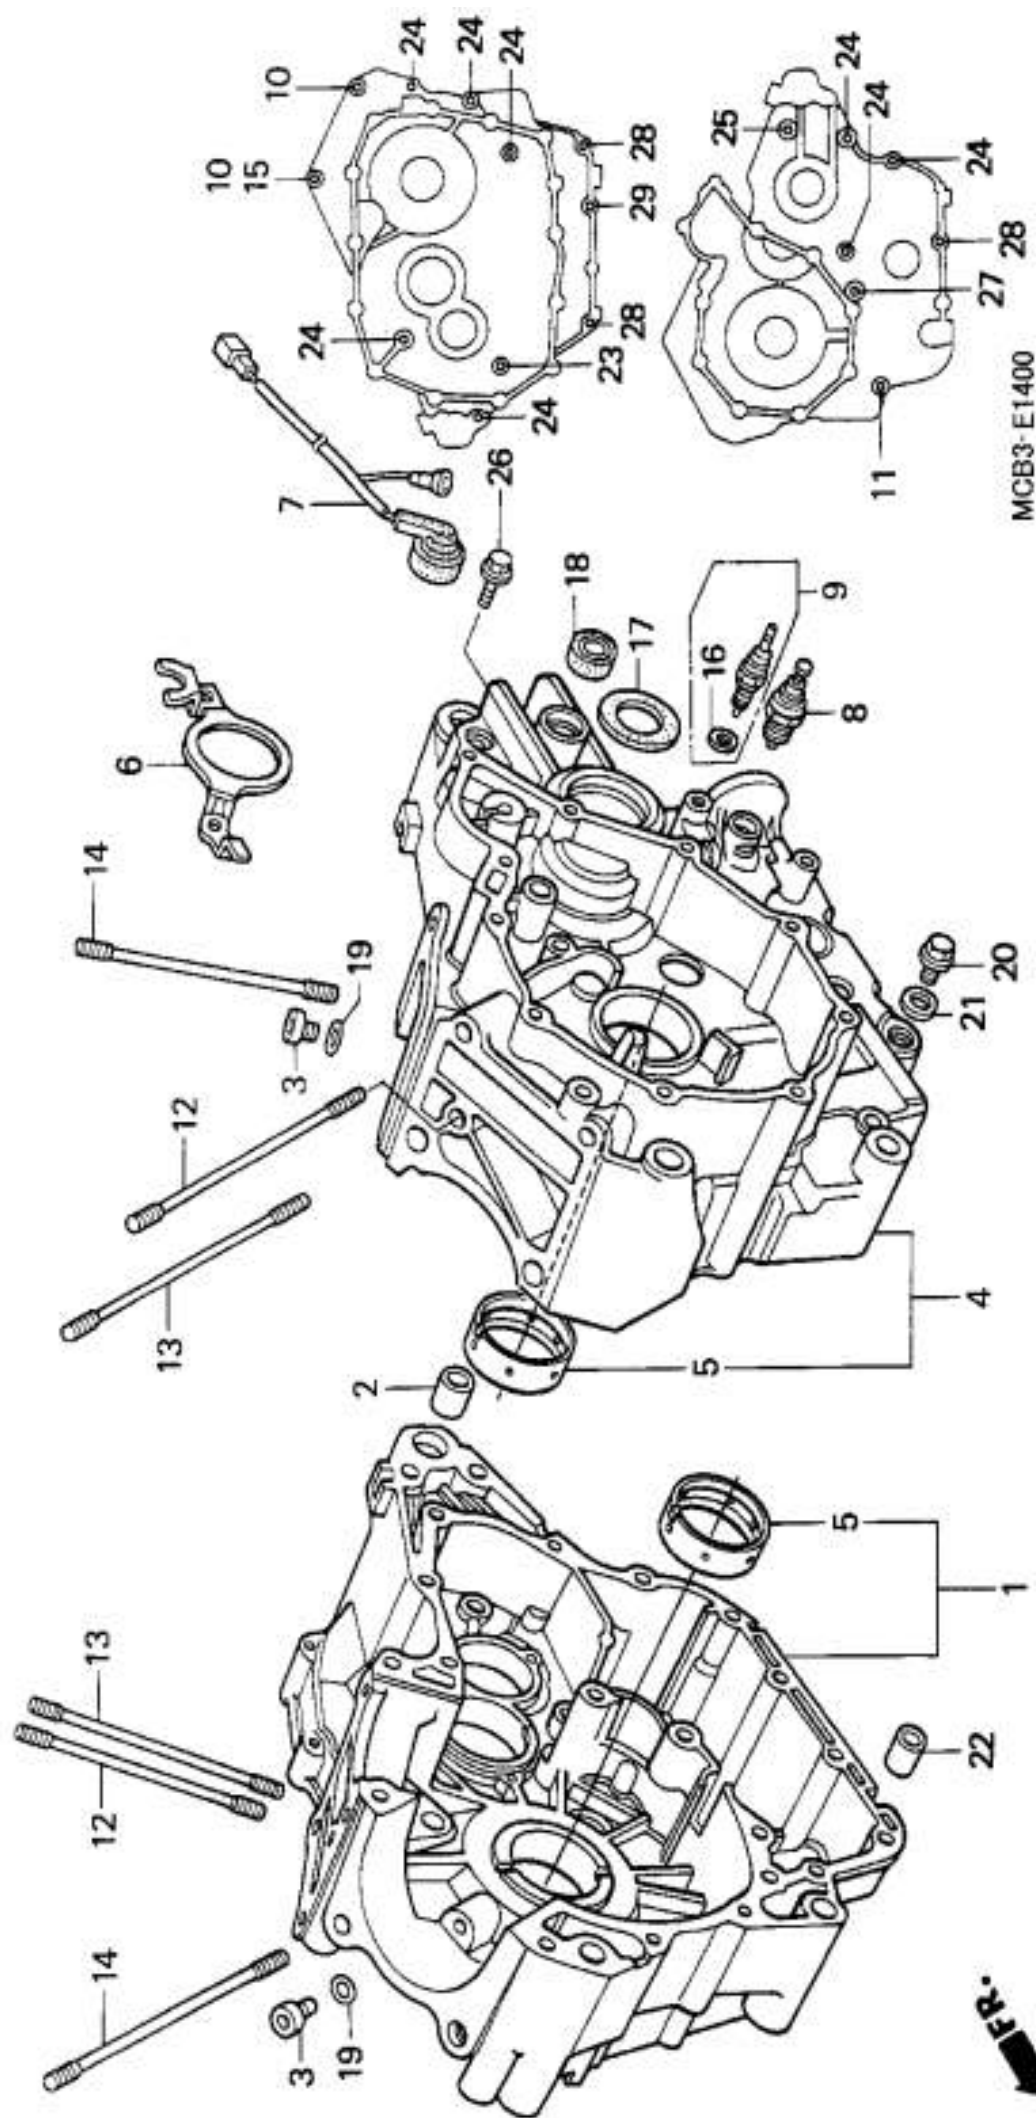

MCB3-E1400


FR.



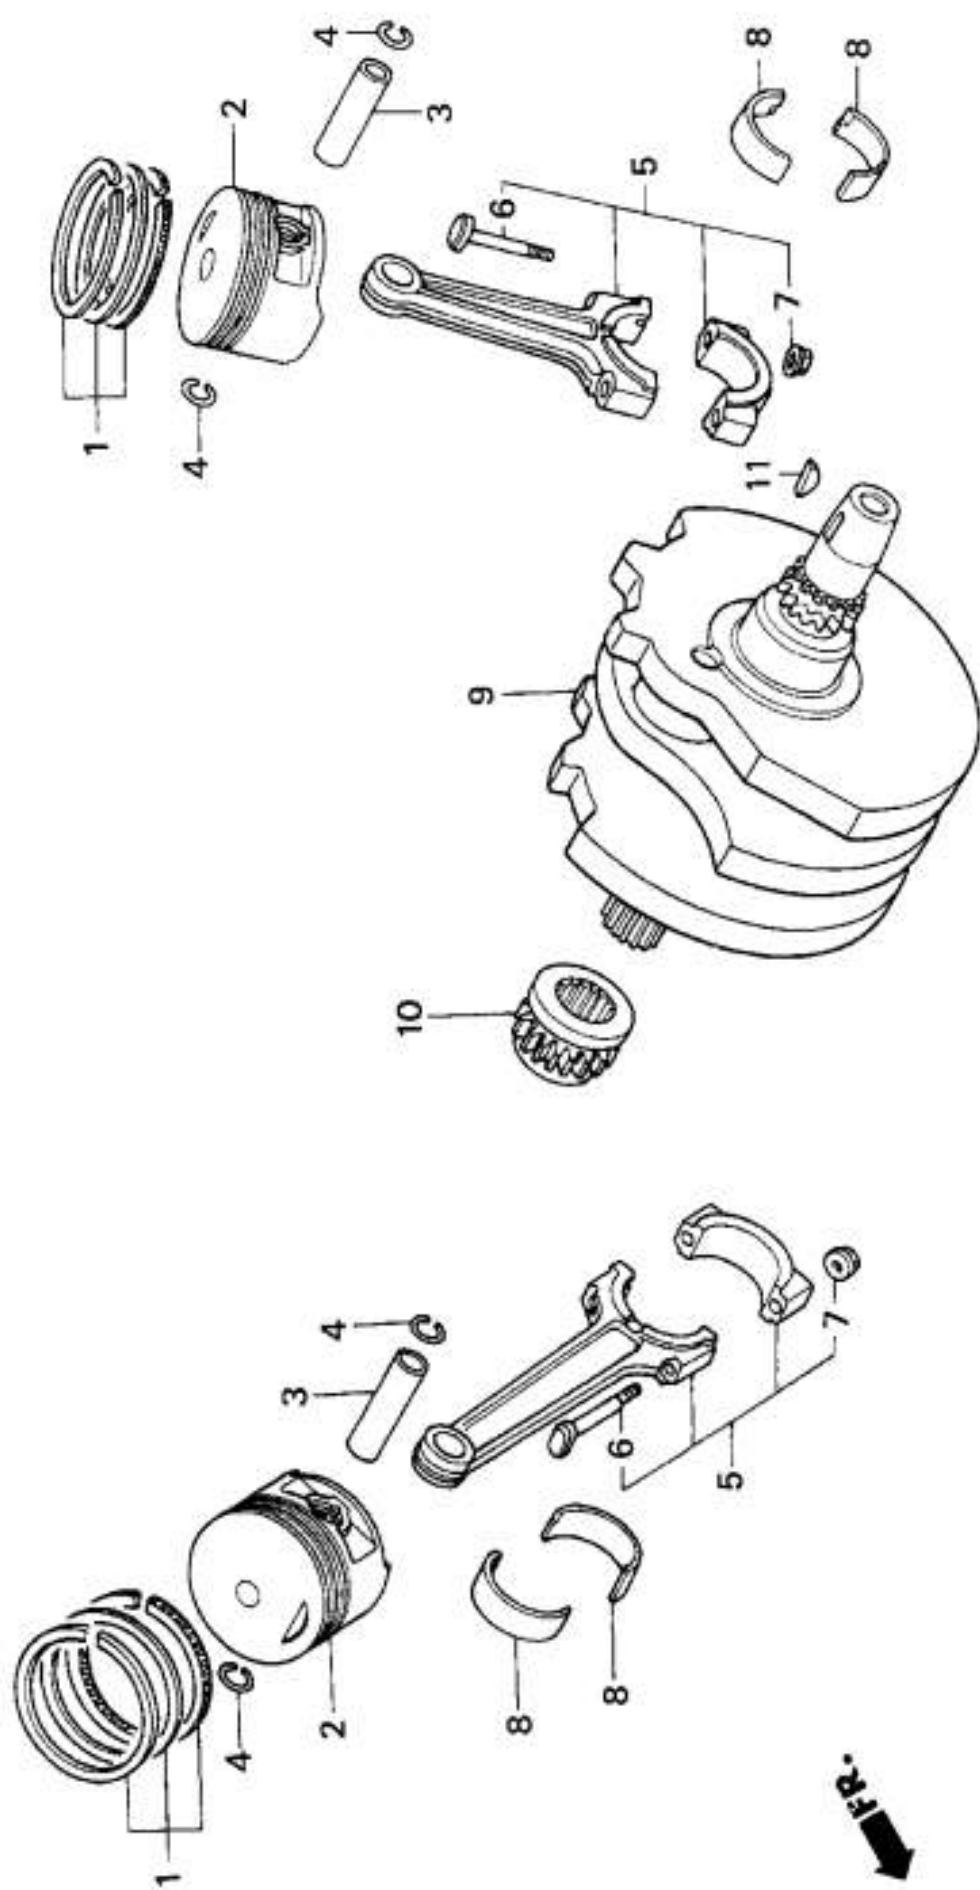


MCB3-E1500

FR.

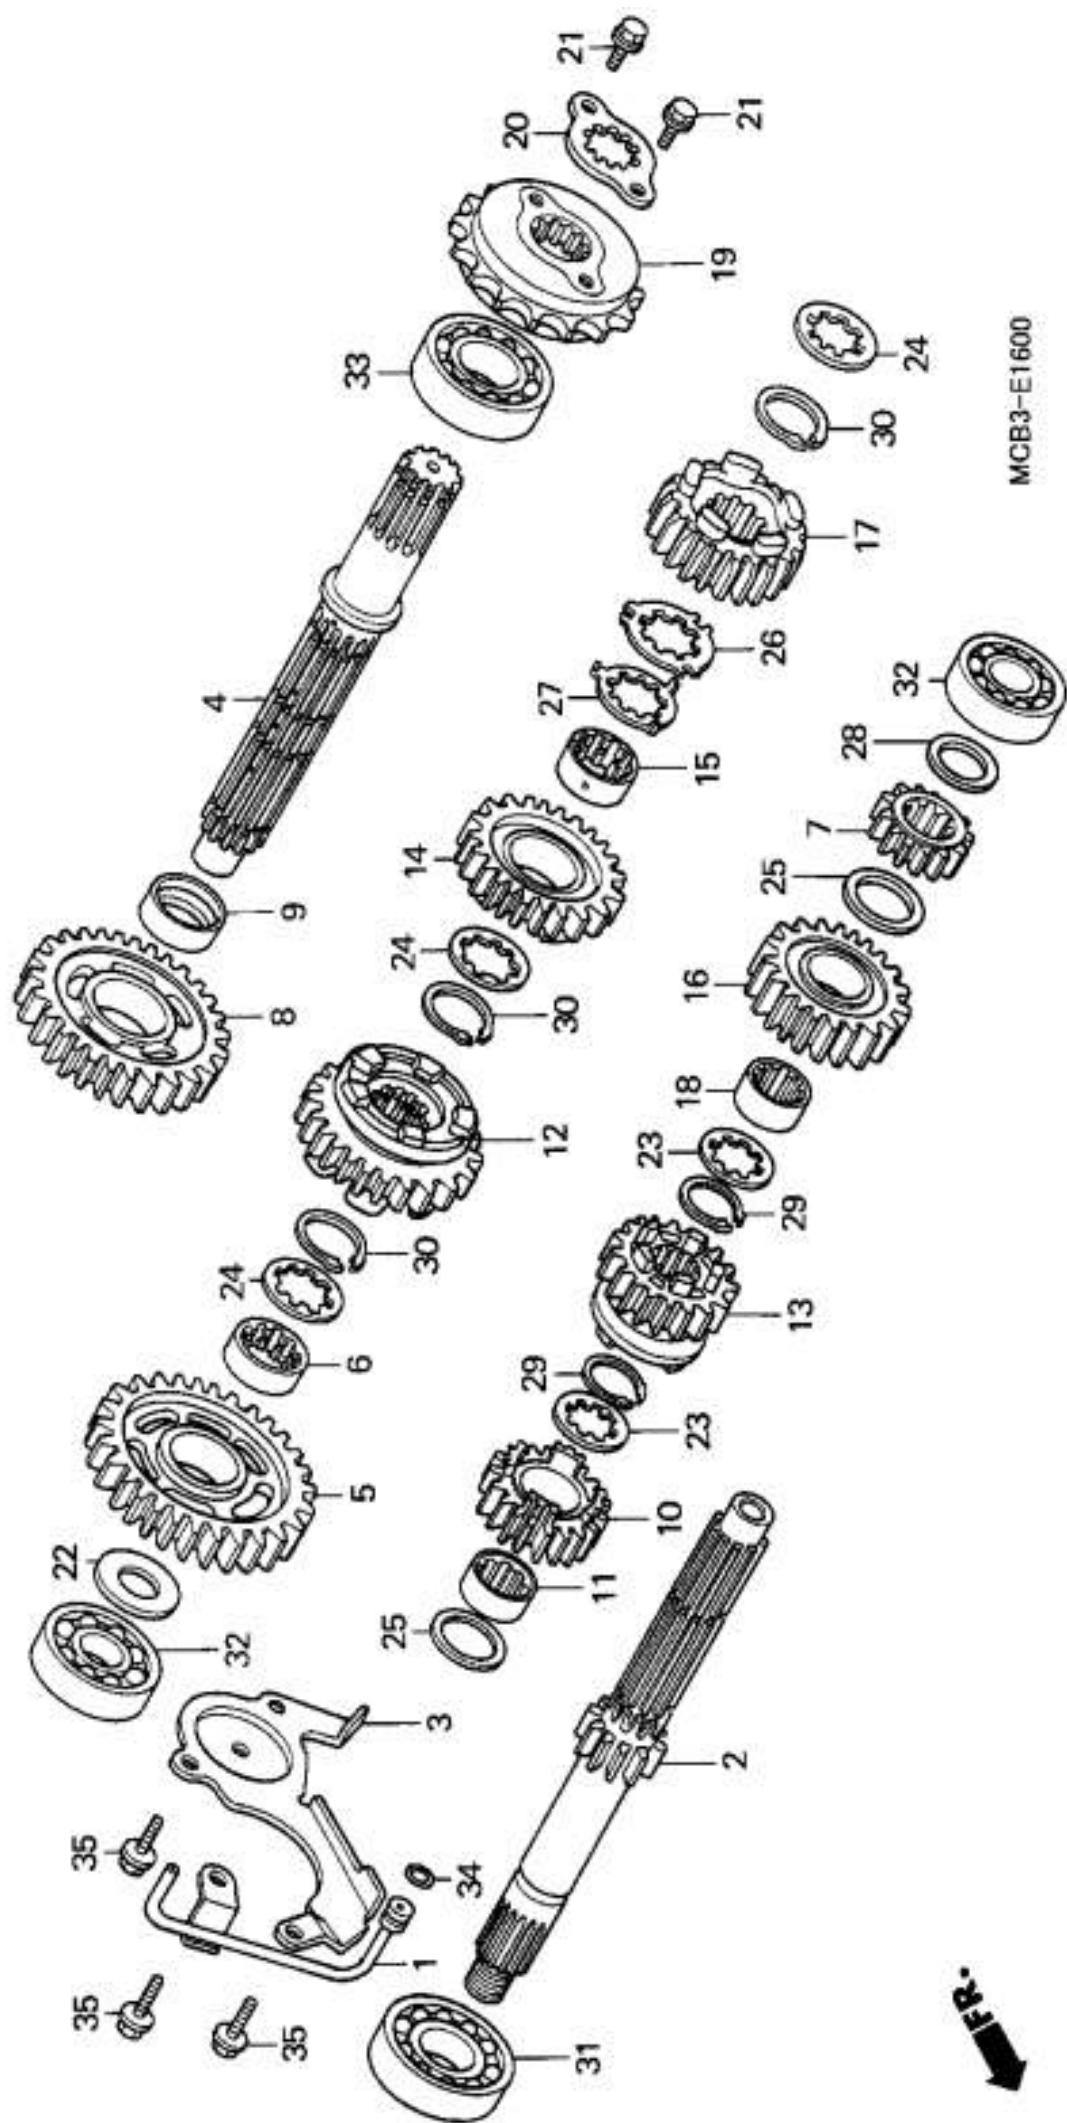


FR.

MCB3-E1600

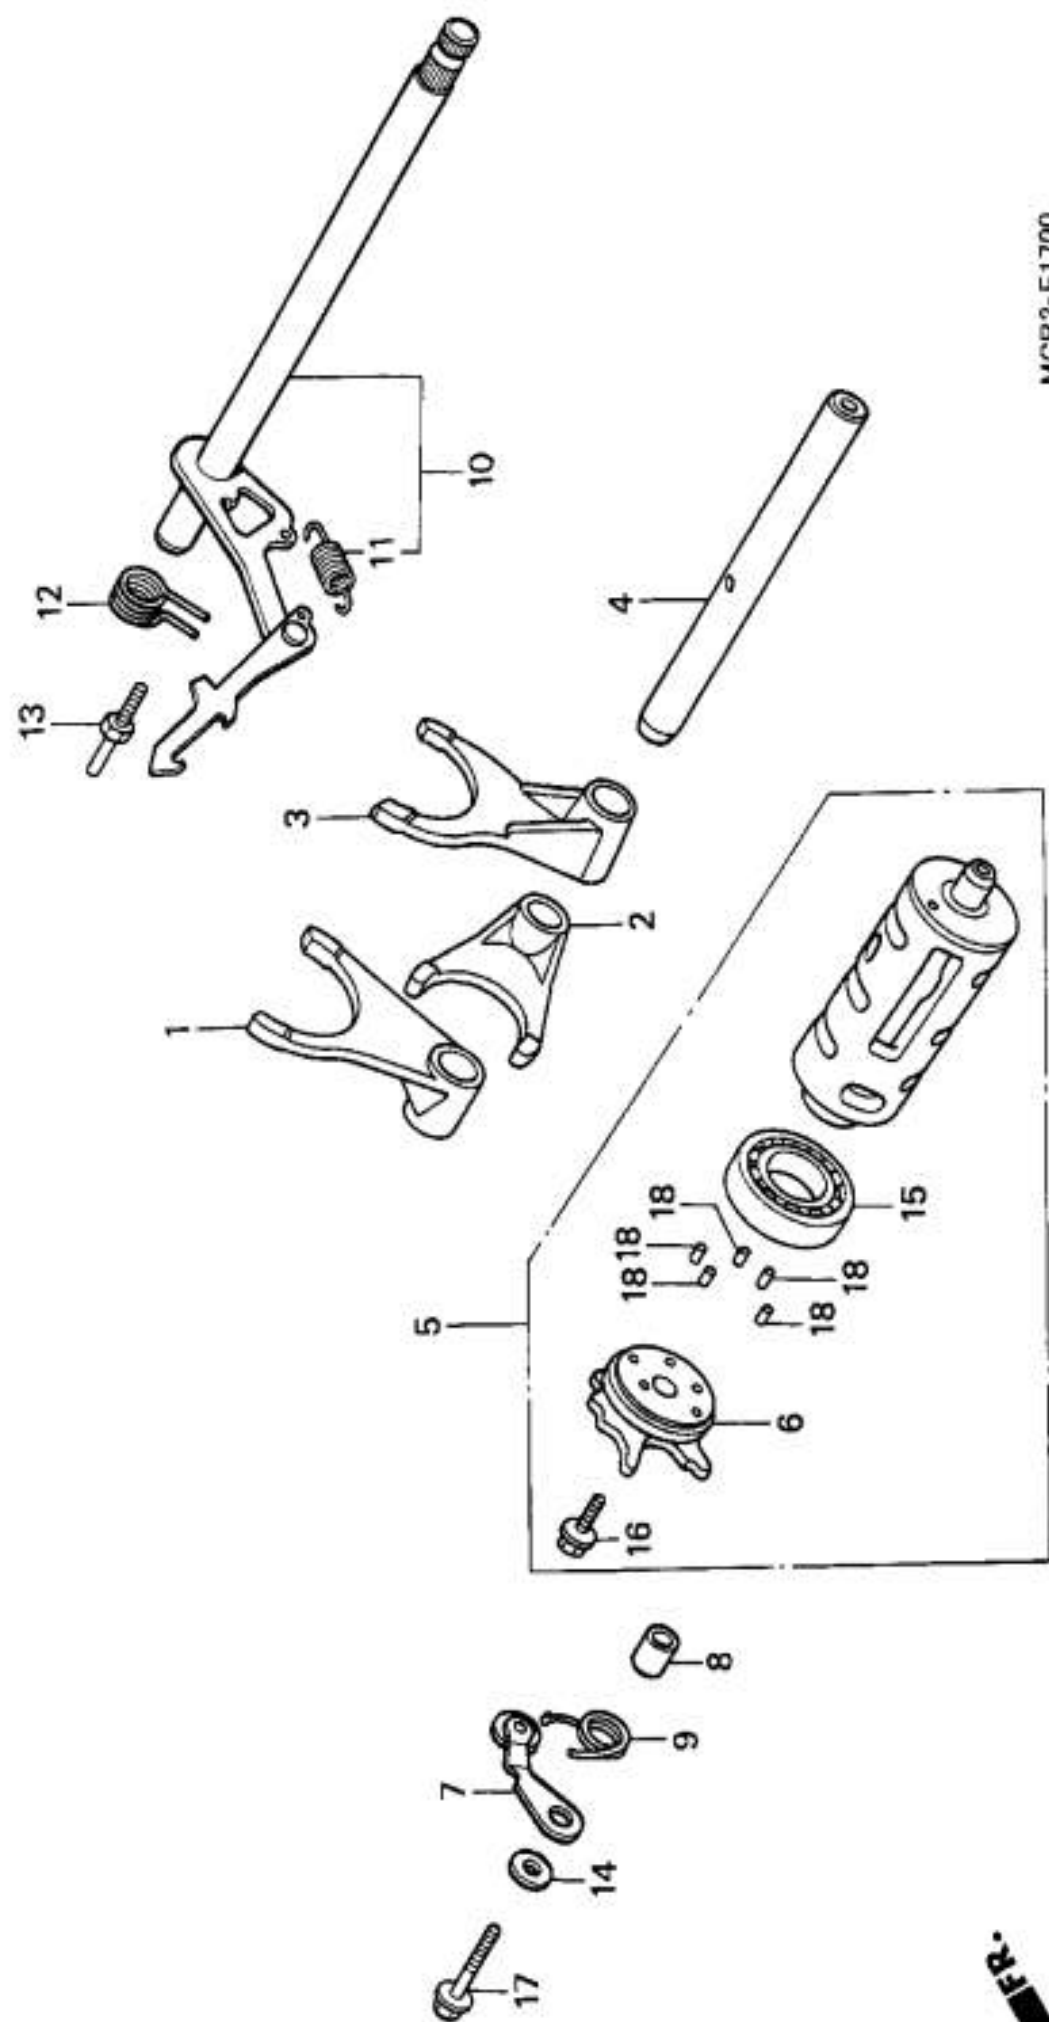


MCB3-E1700


FR.

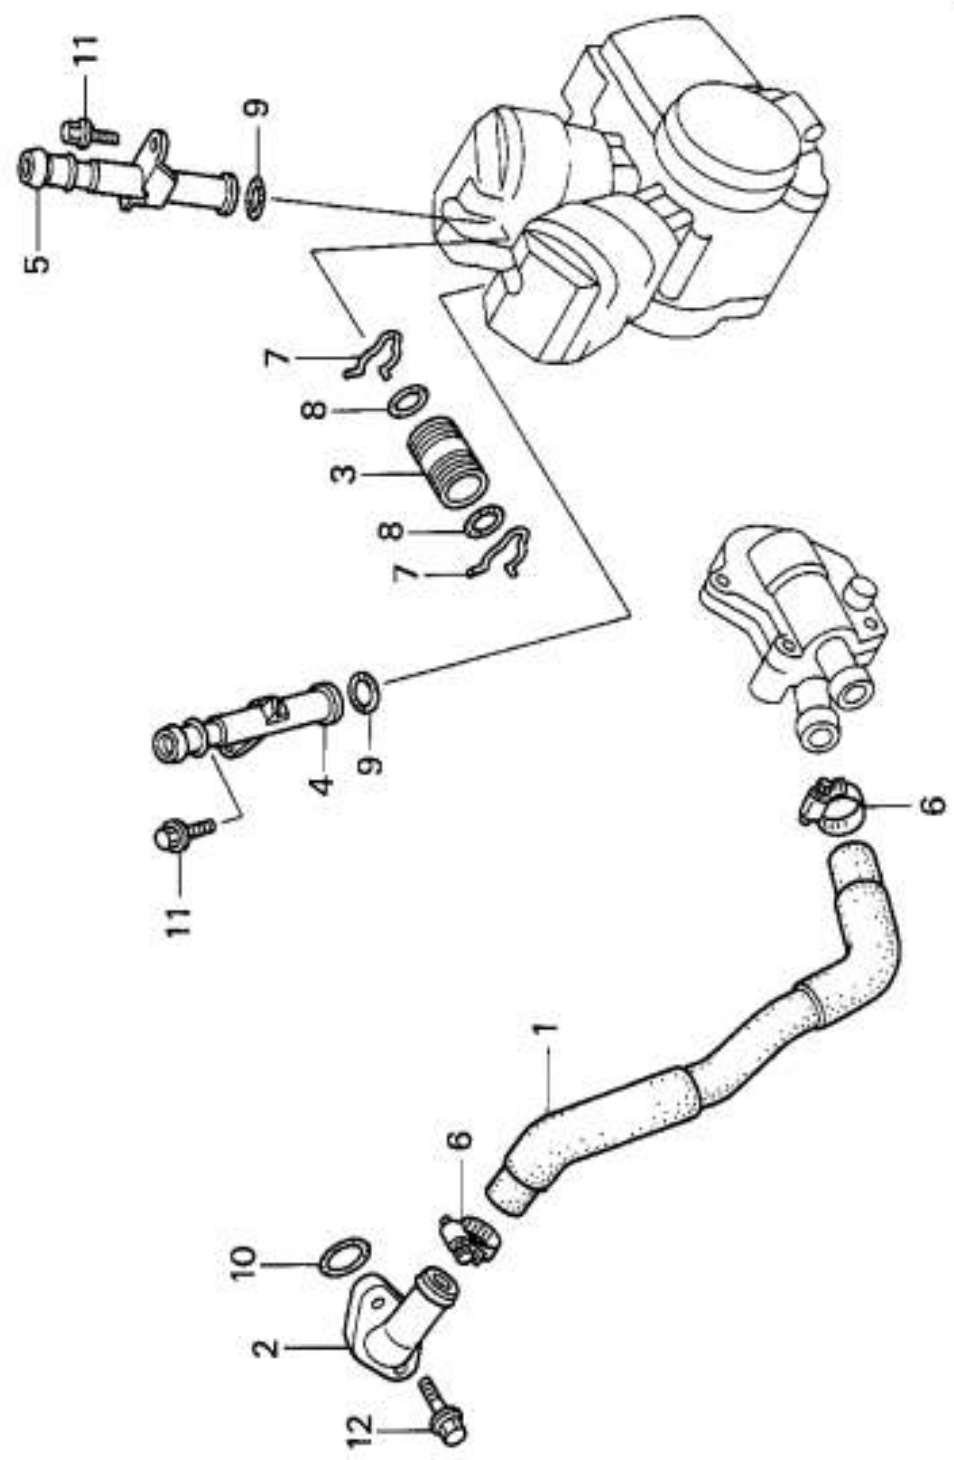

MCB3-E1900

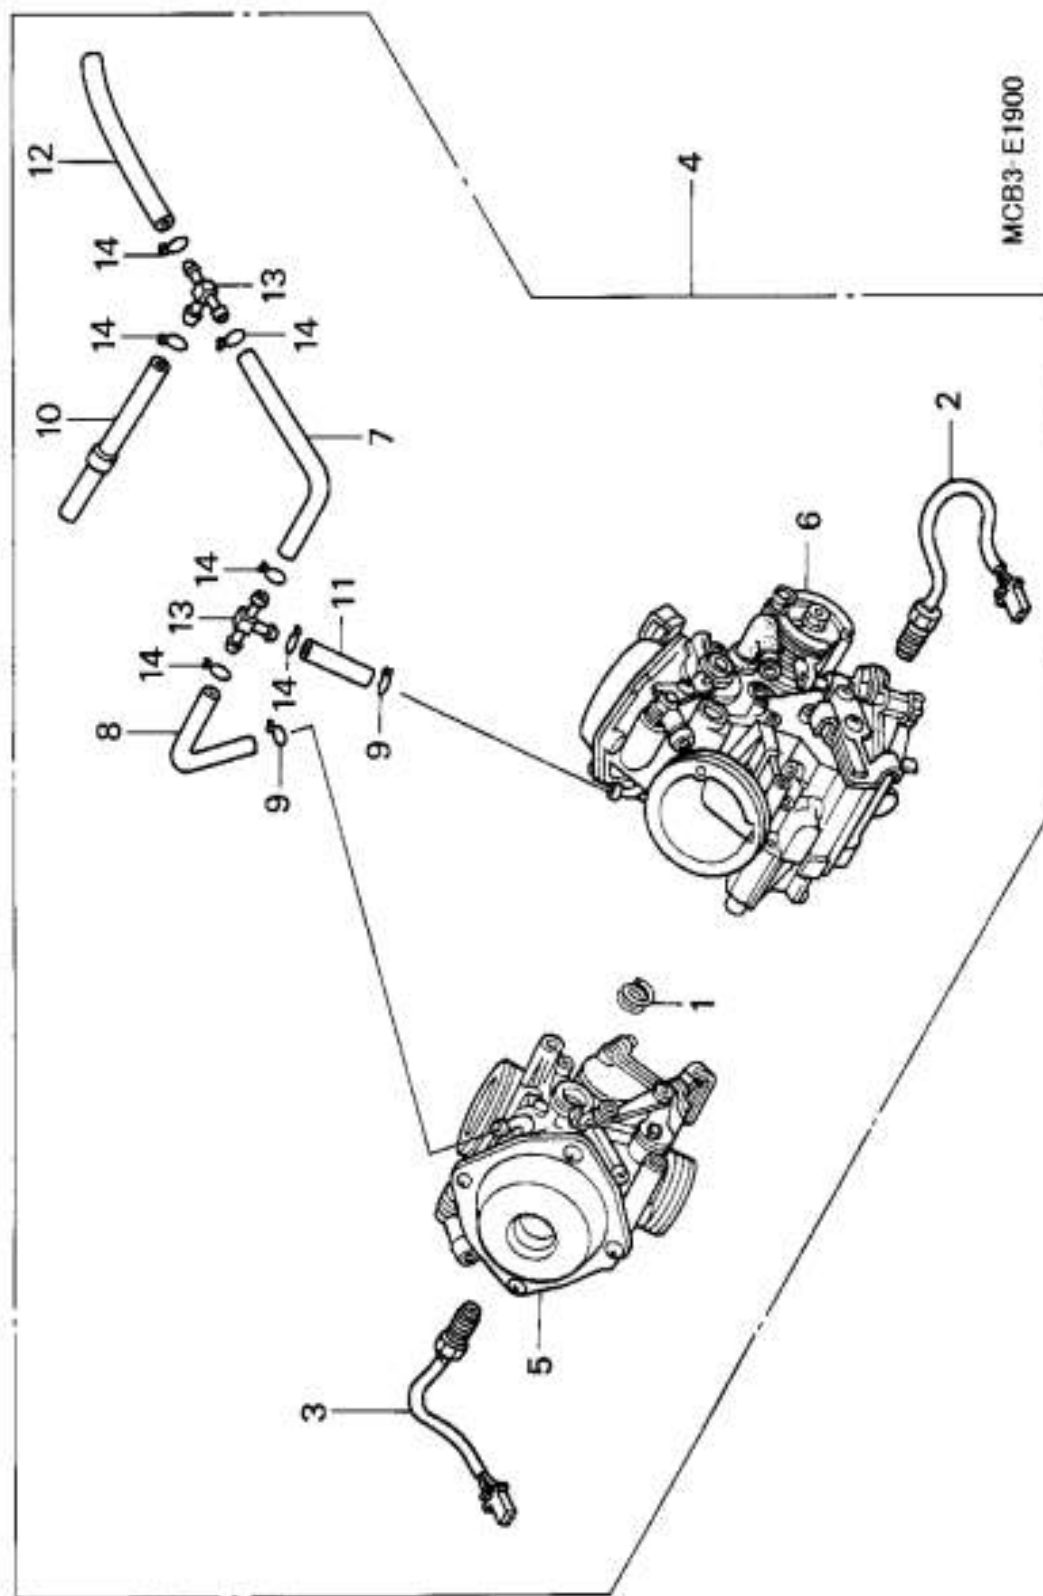


24-a

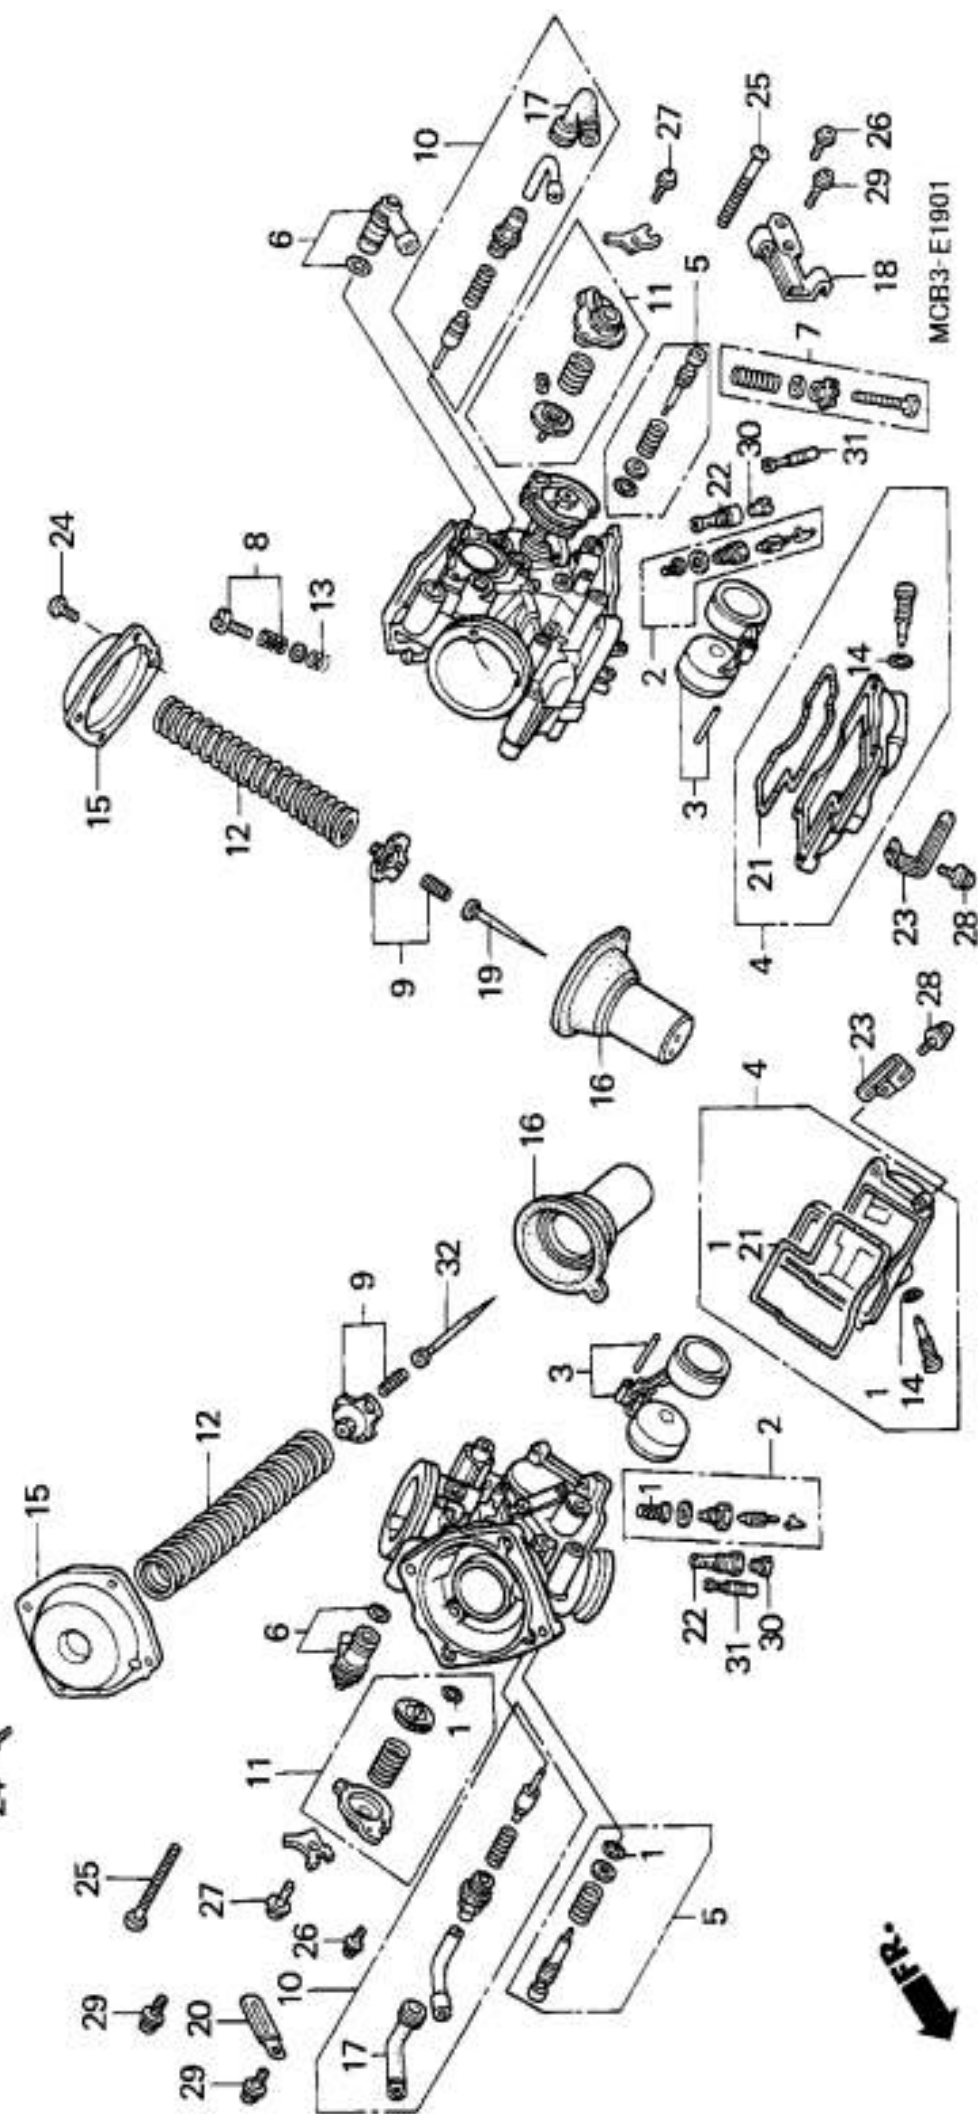


FR.

MCB3-E1901

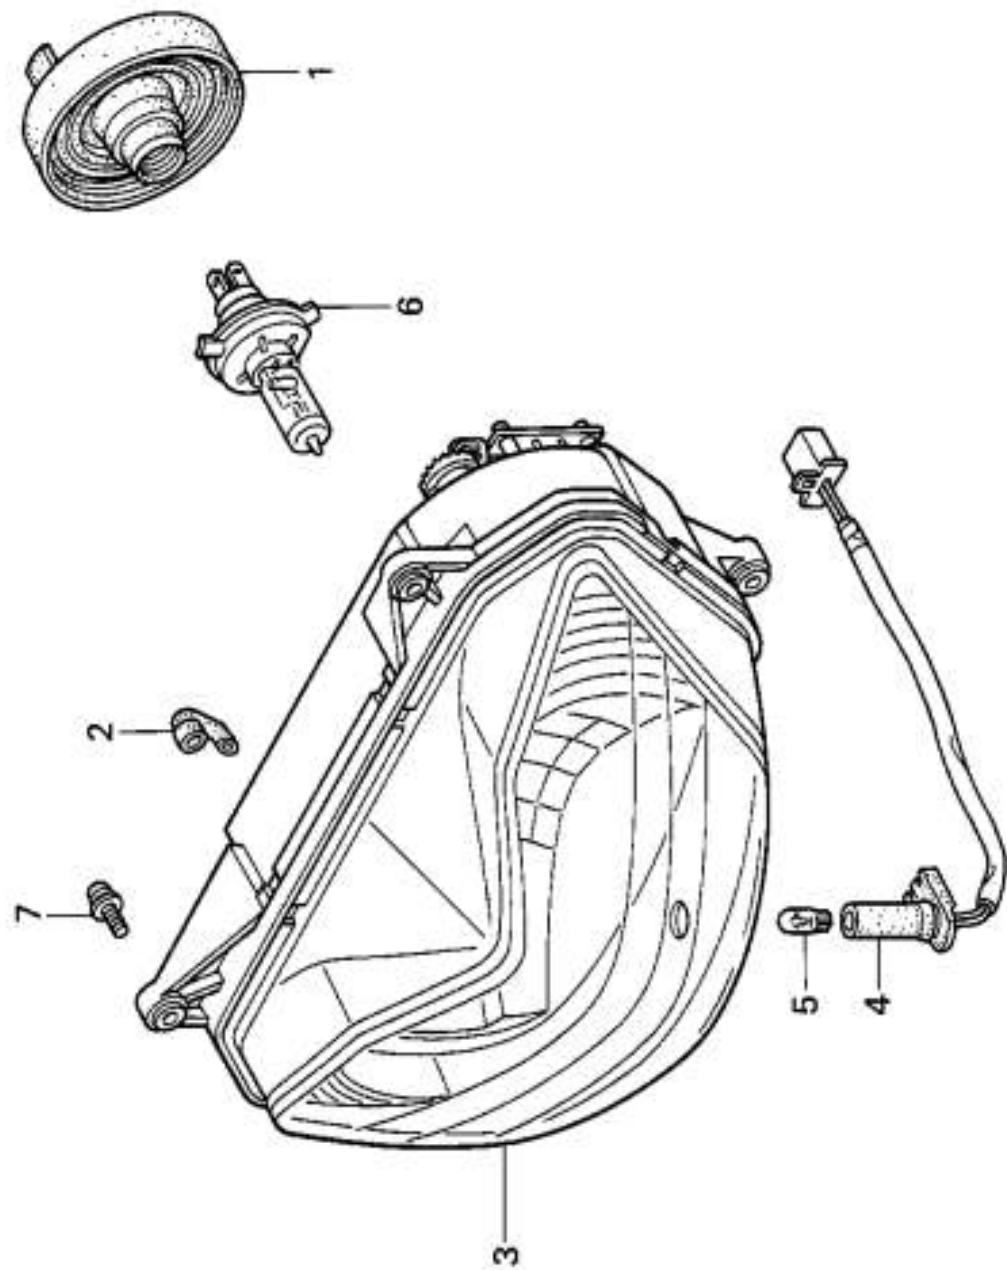



MCB3-F0100

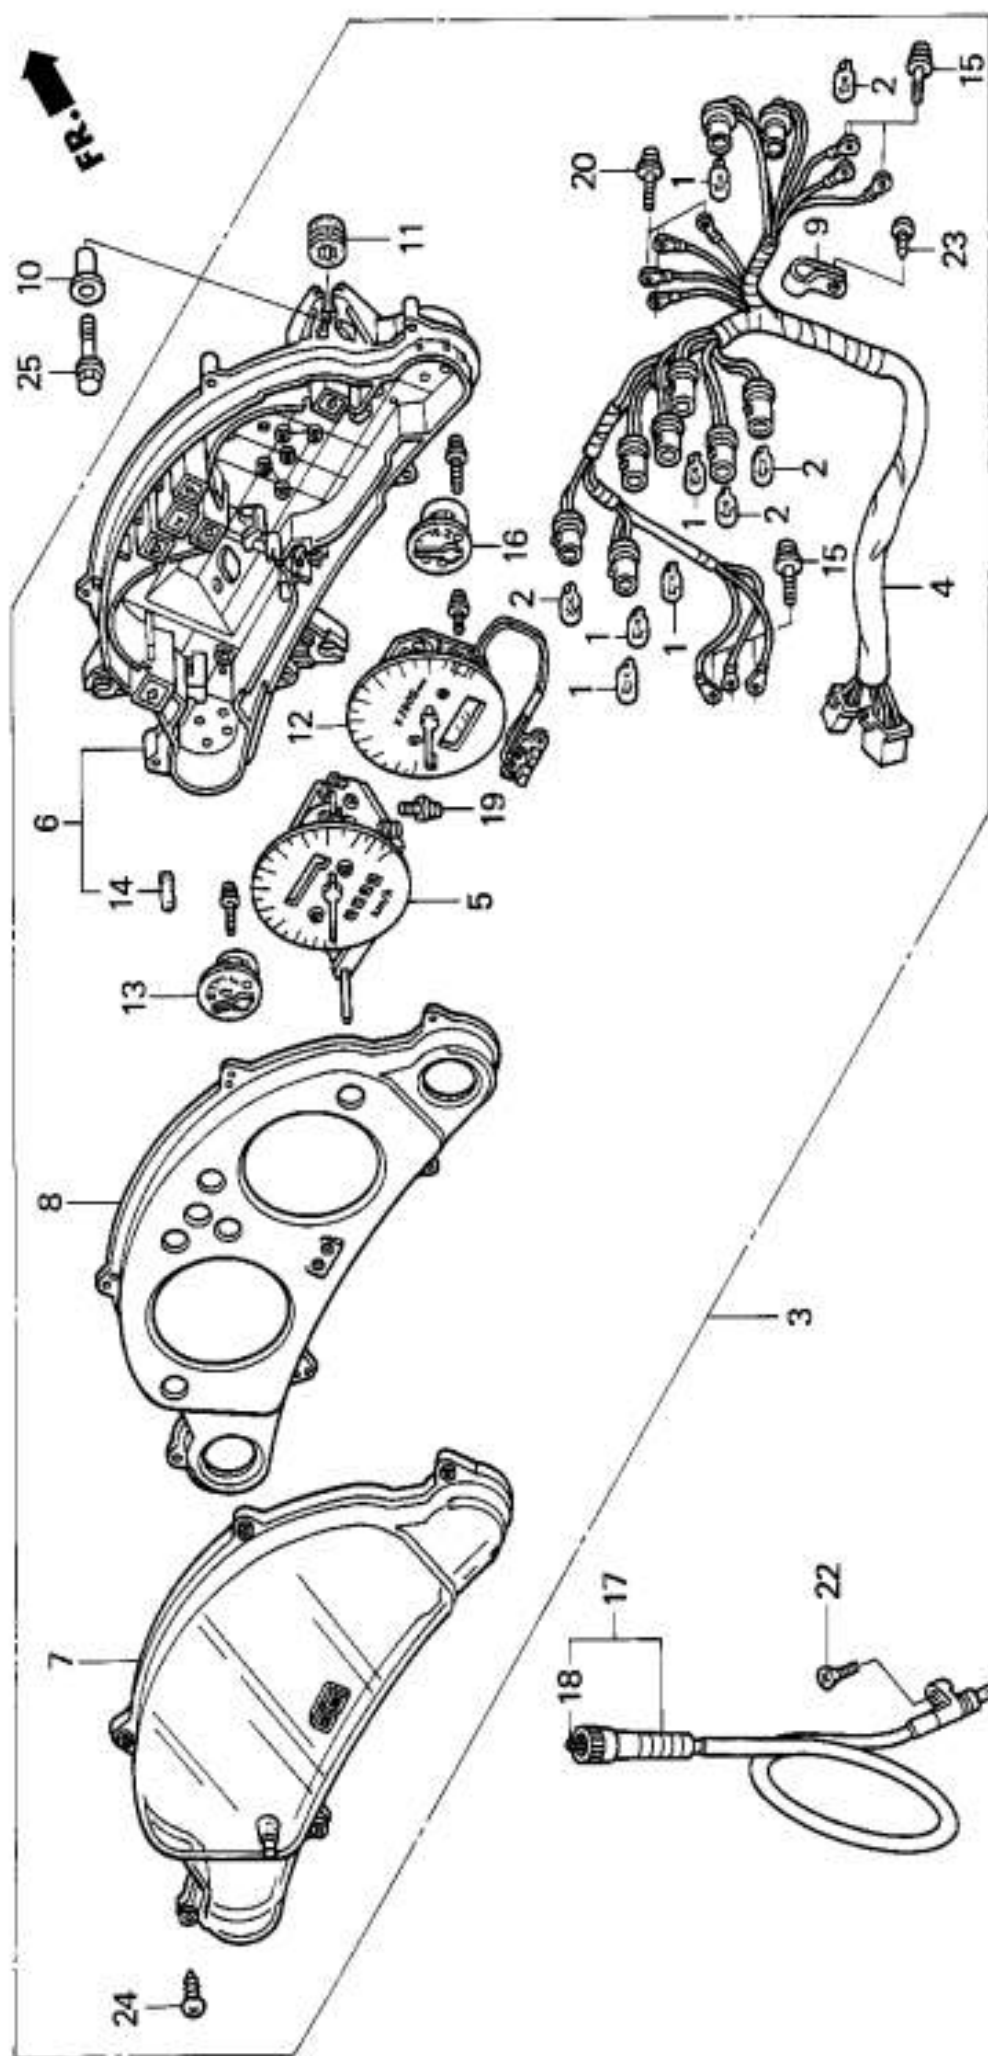


MCB3-F0200




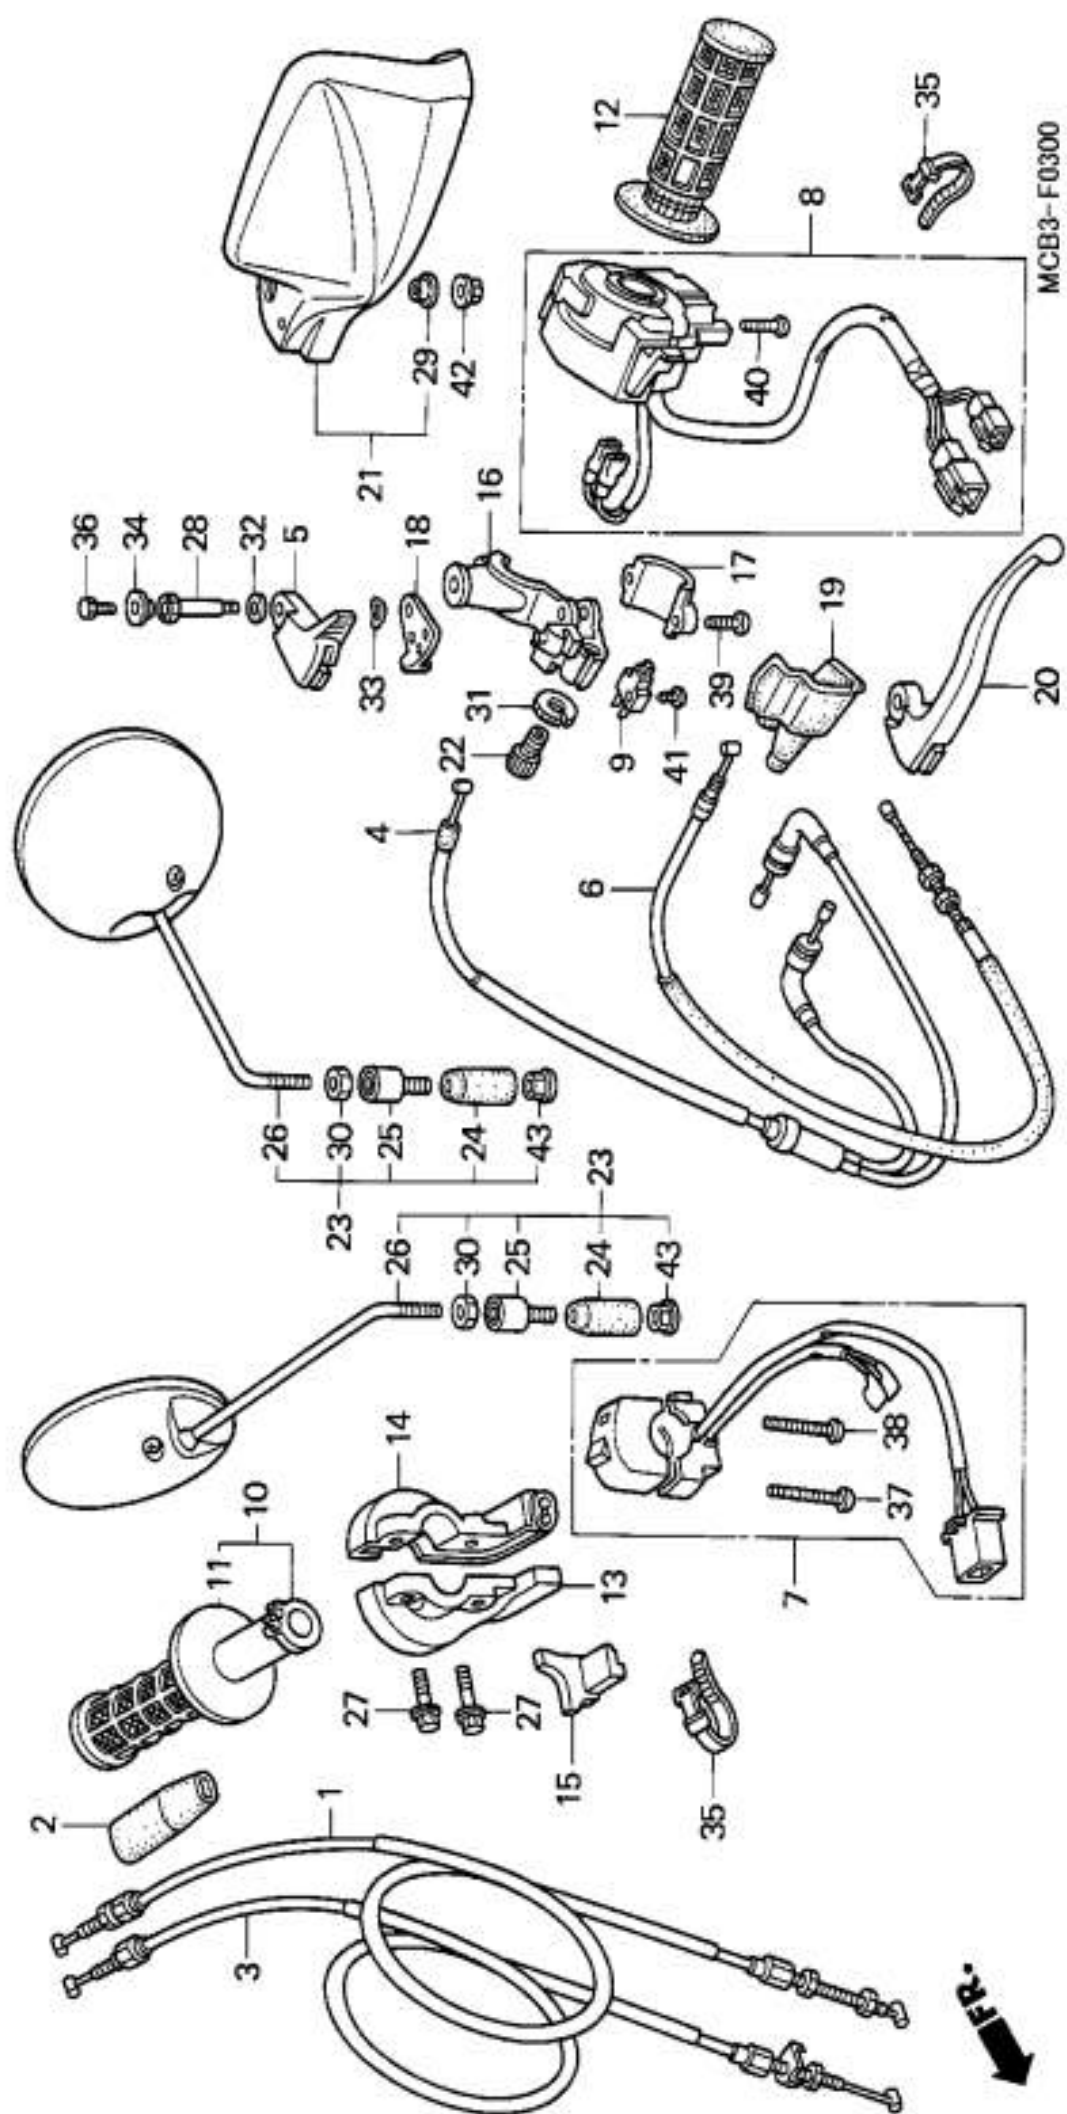

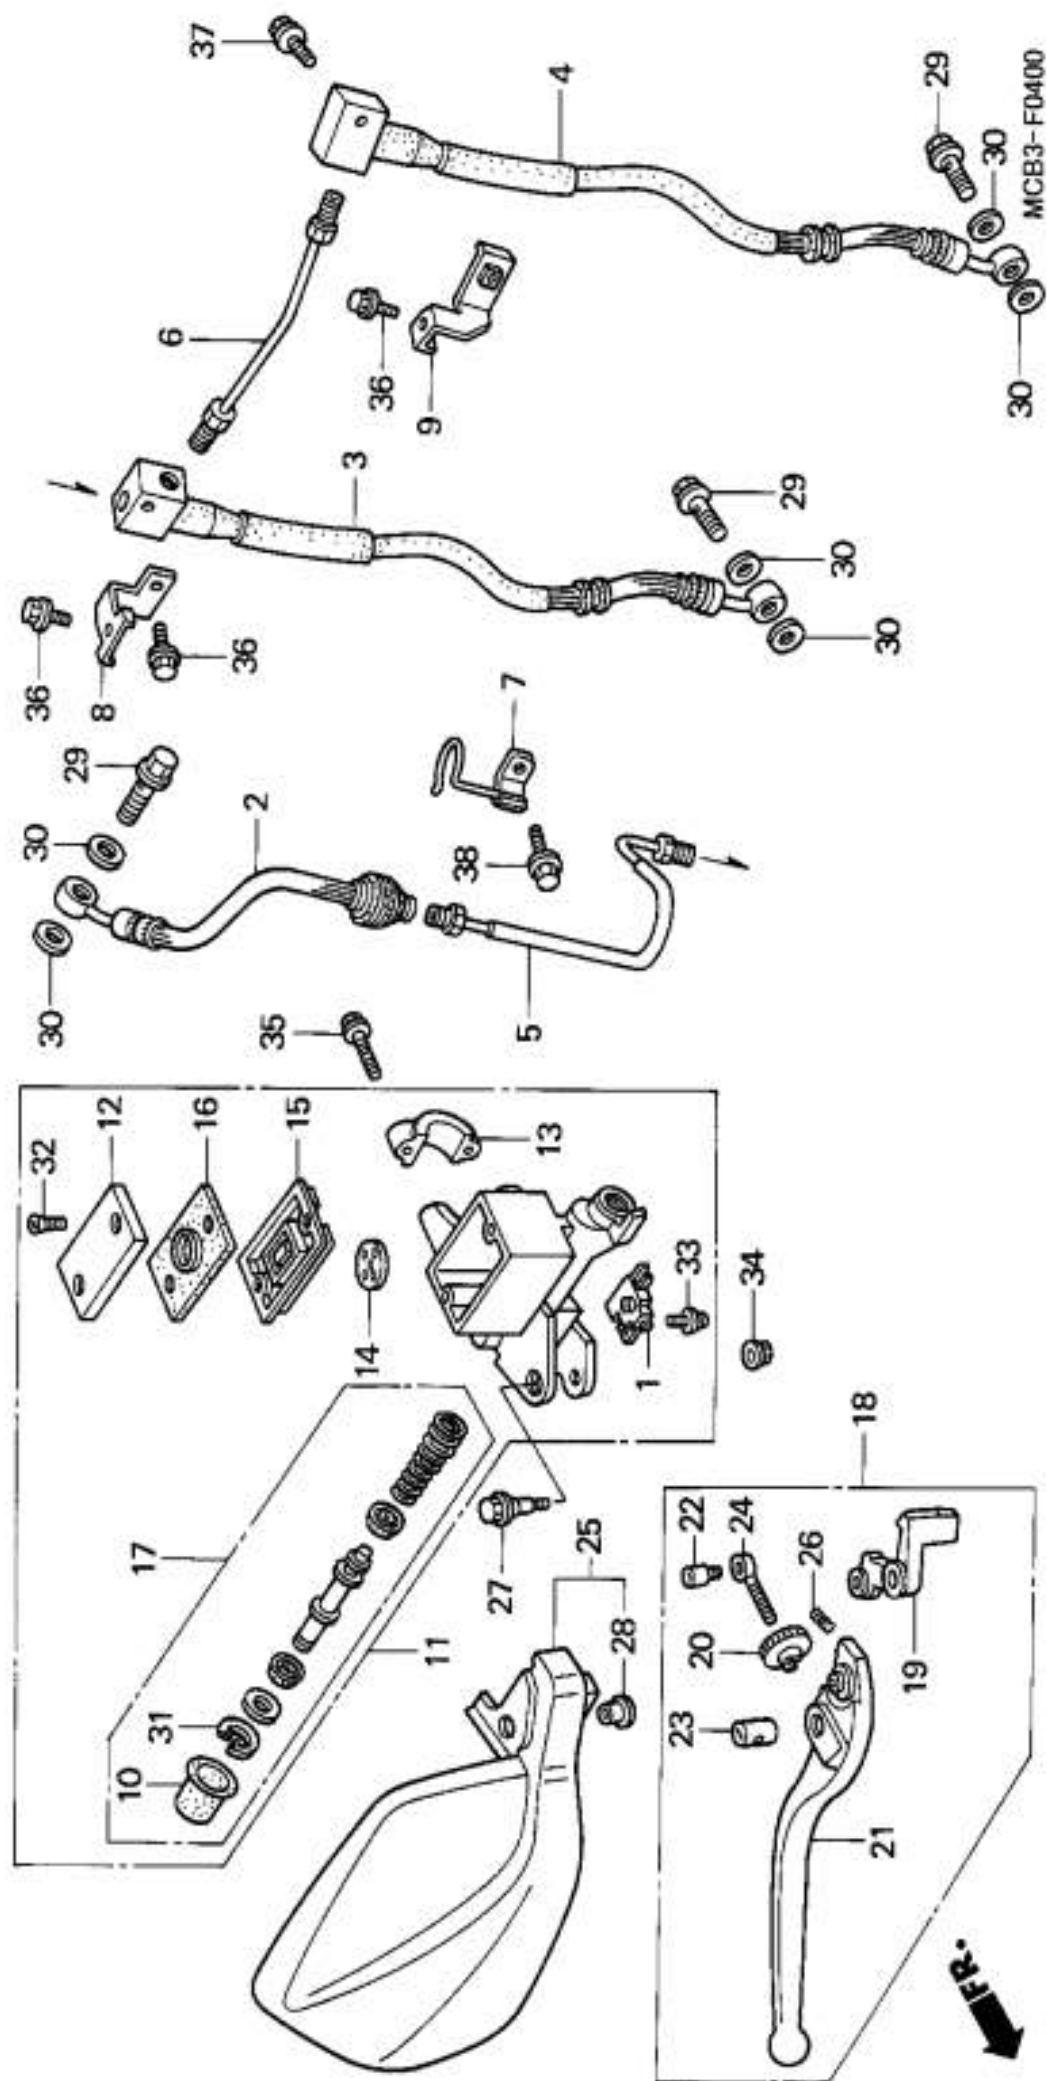

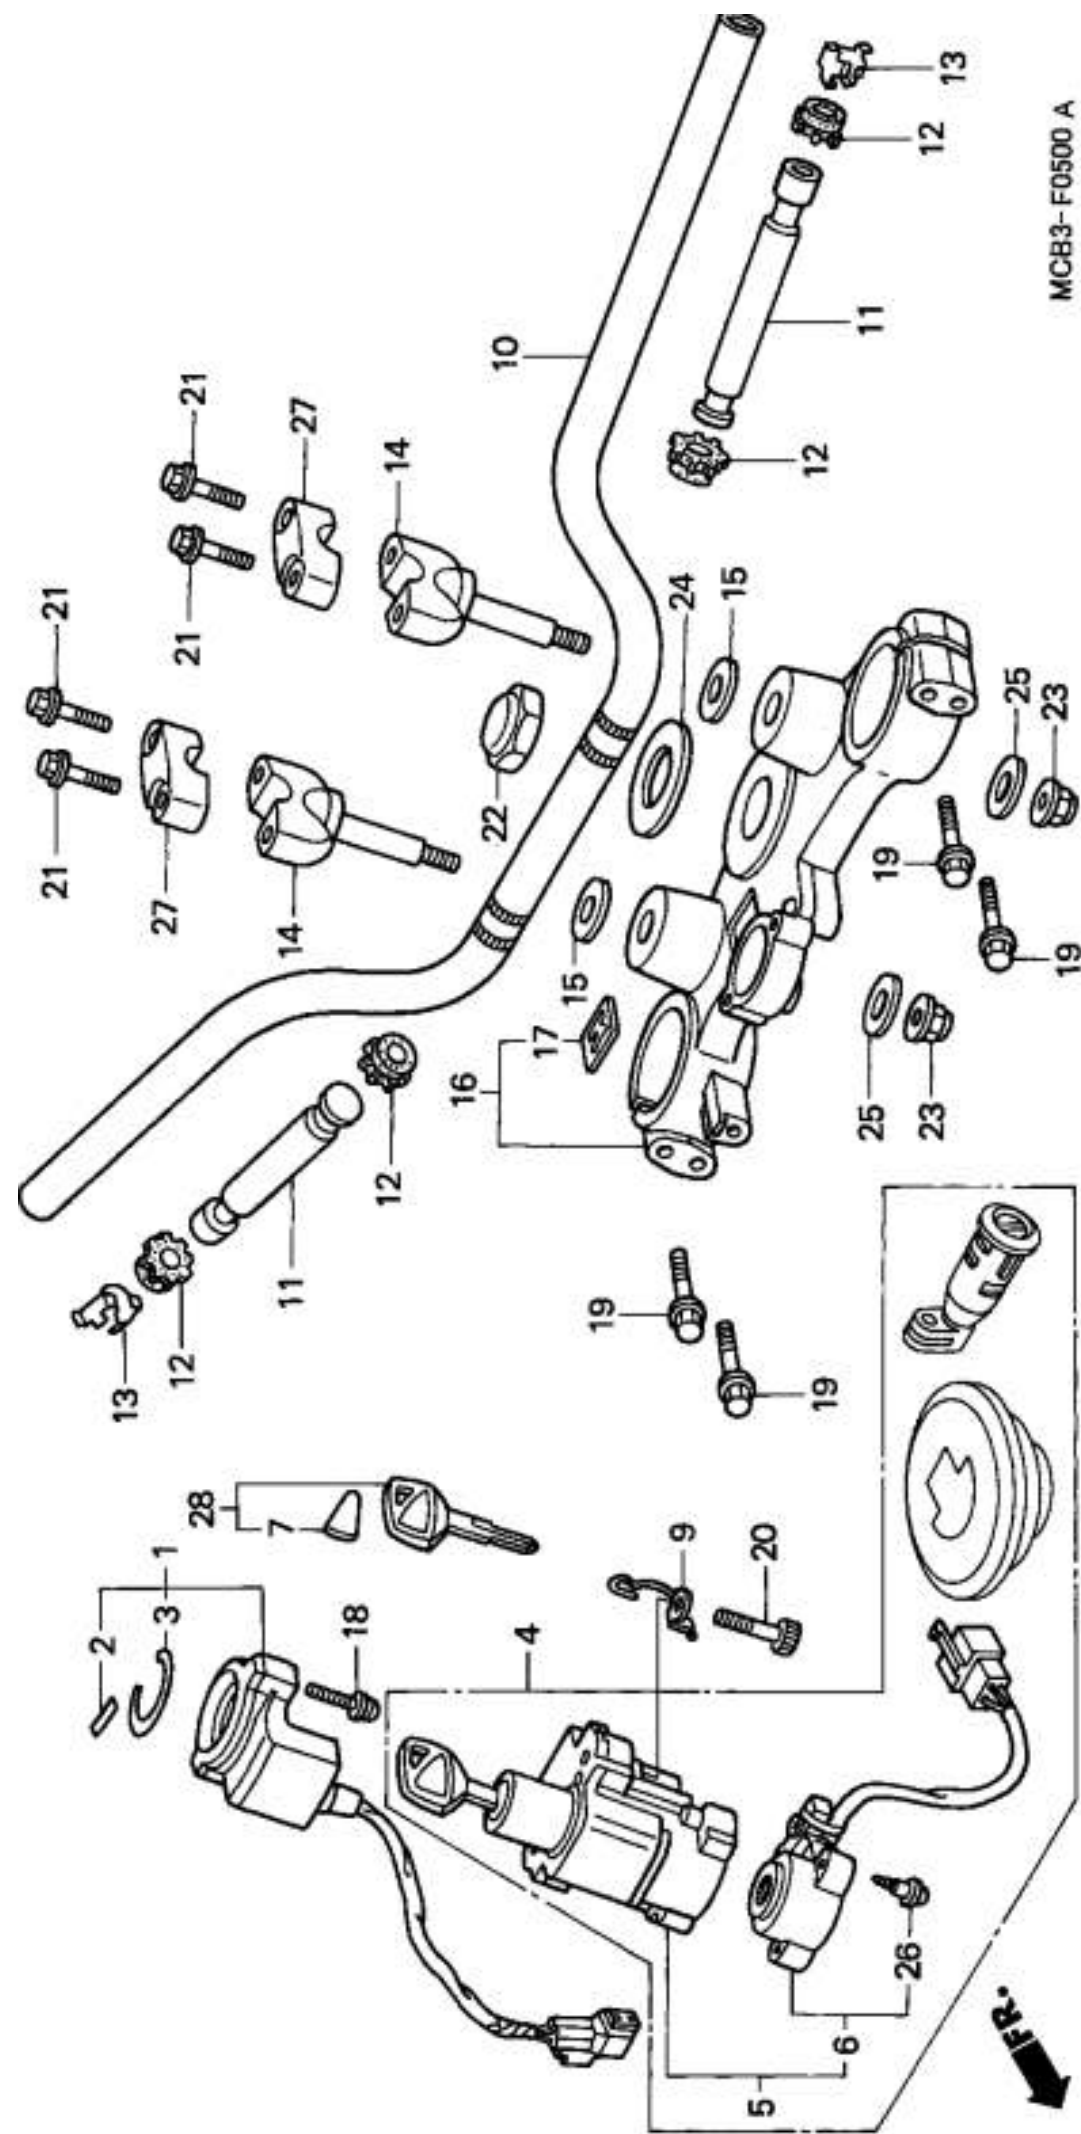



MCB3-F0500 A

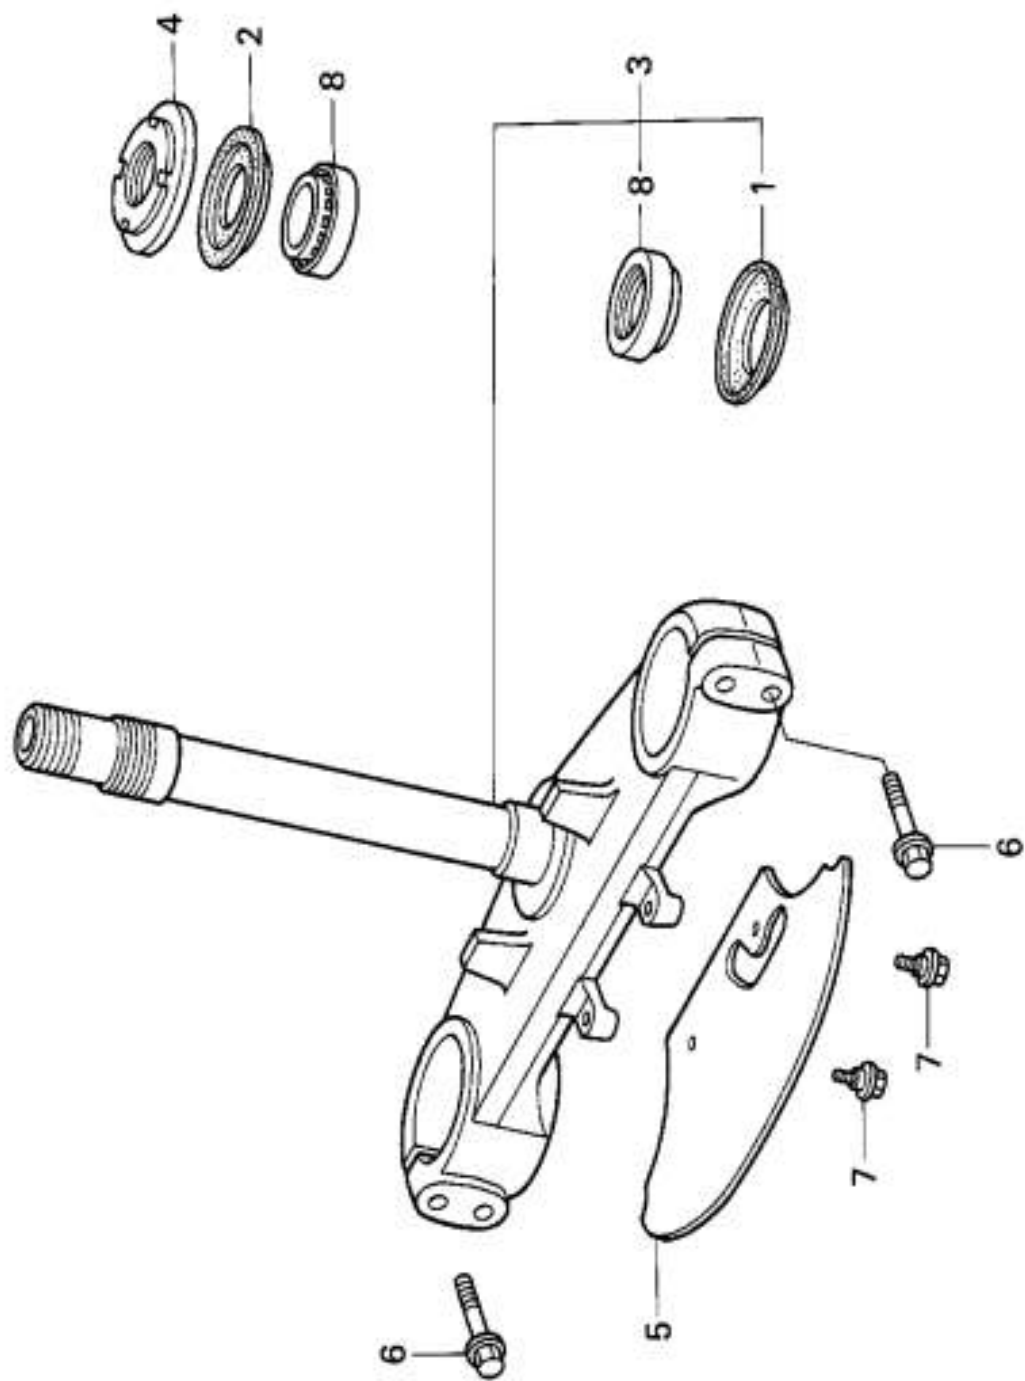


FR.


MCB3-F0600

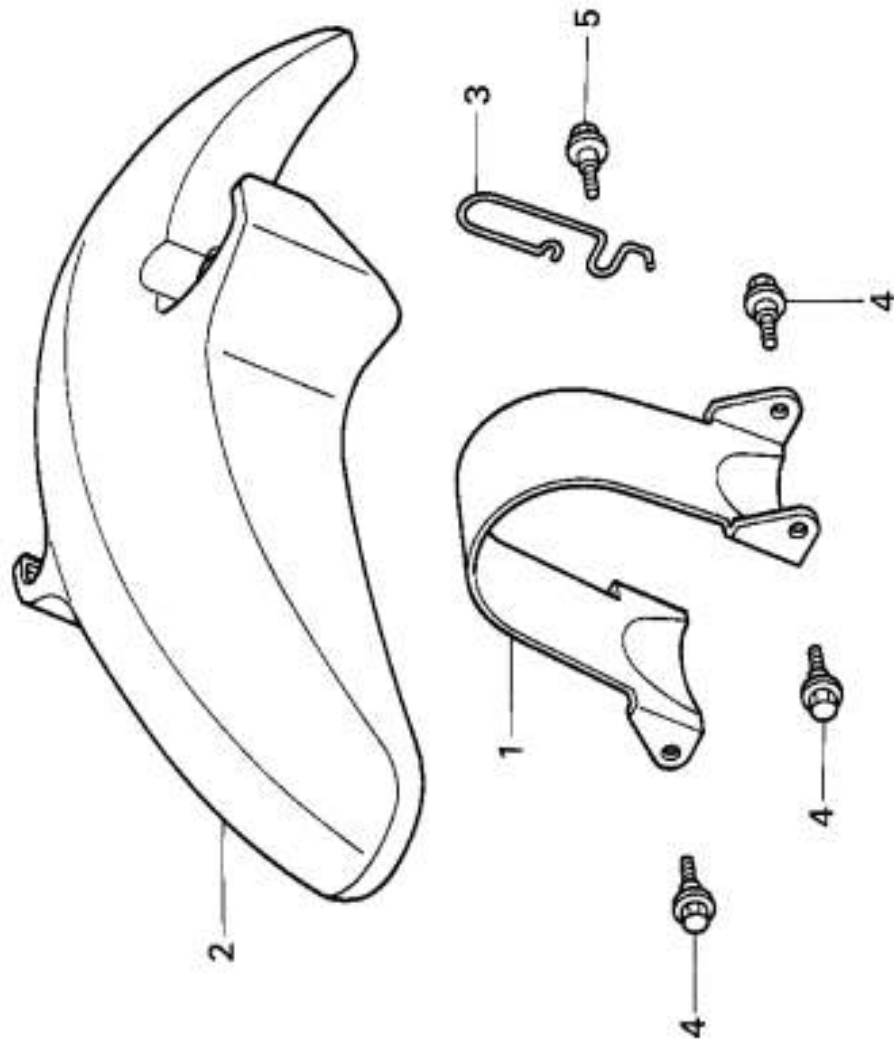

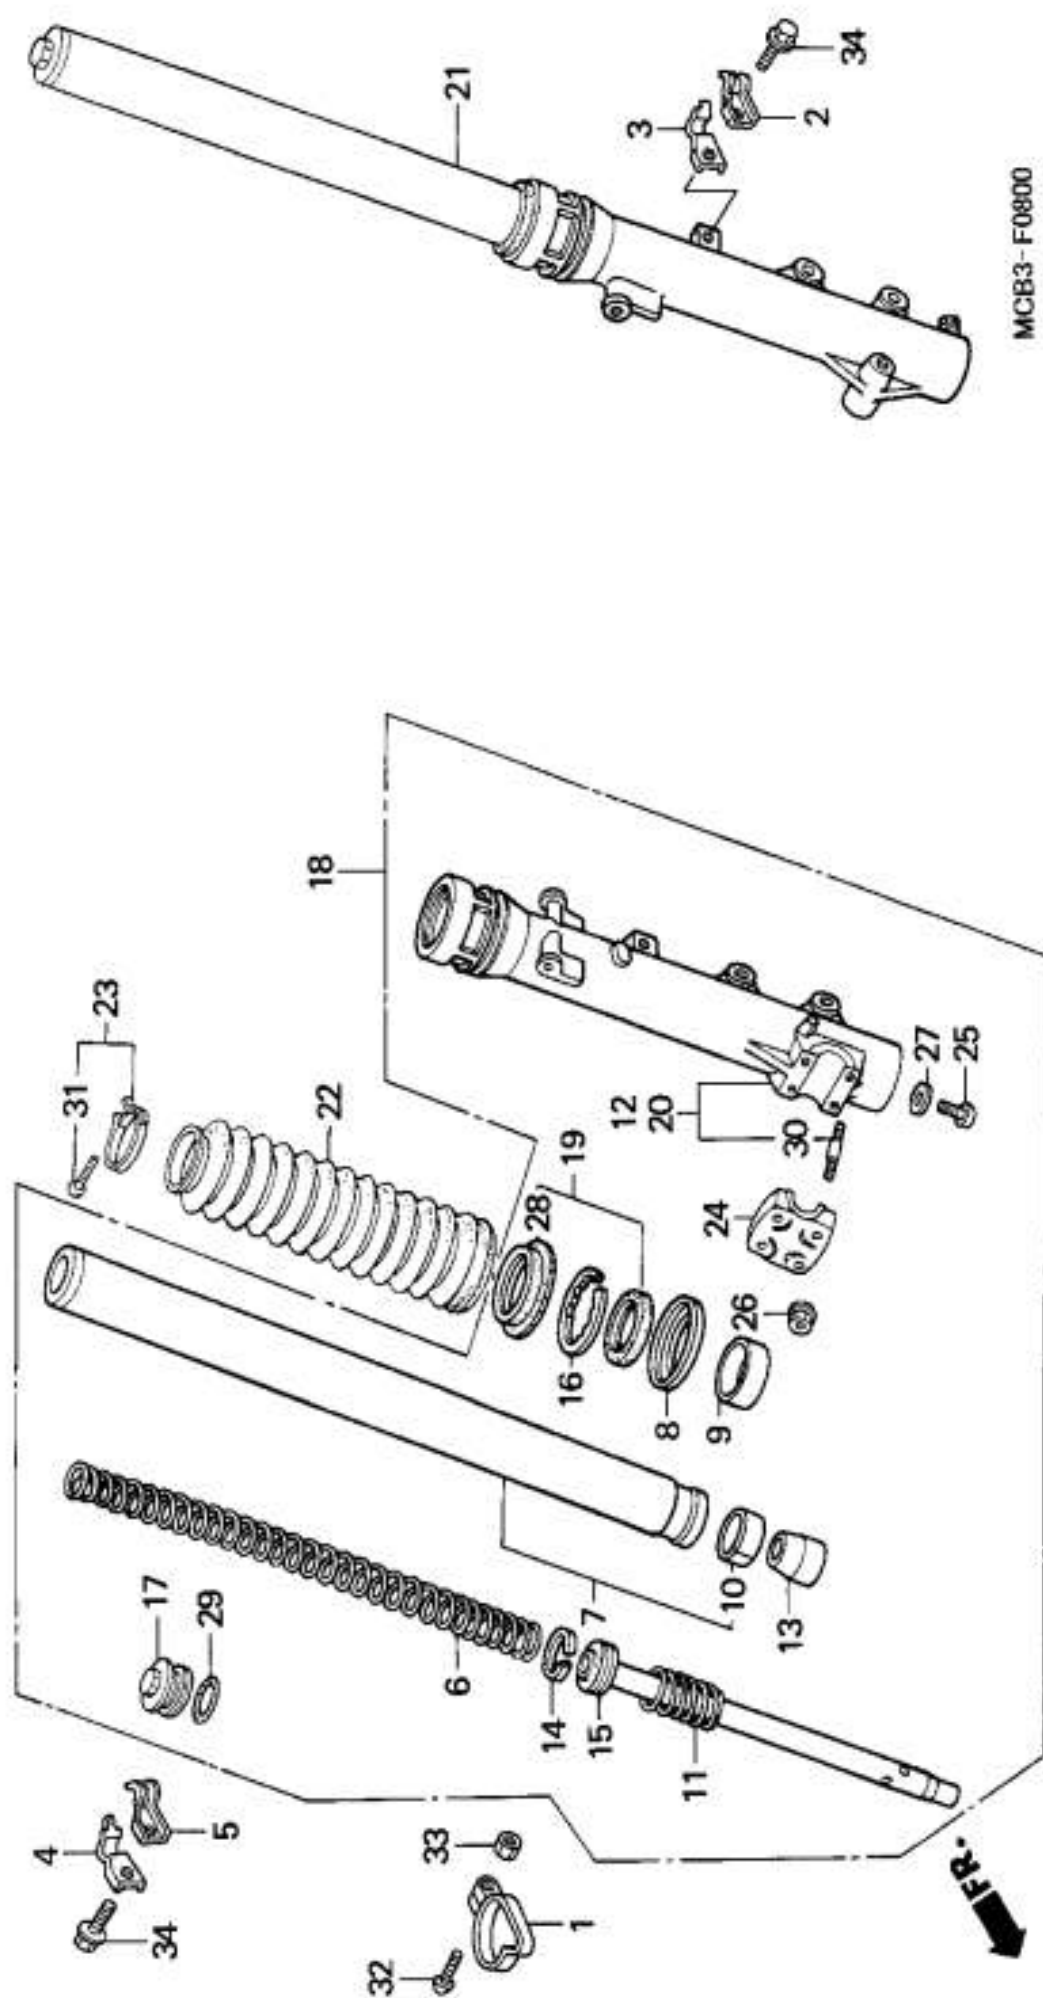


MCB3-F0800

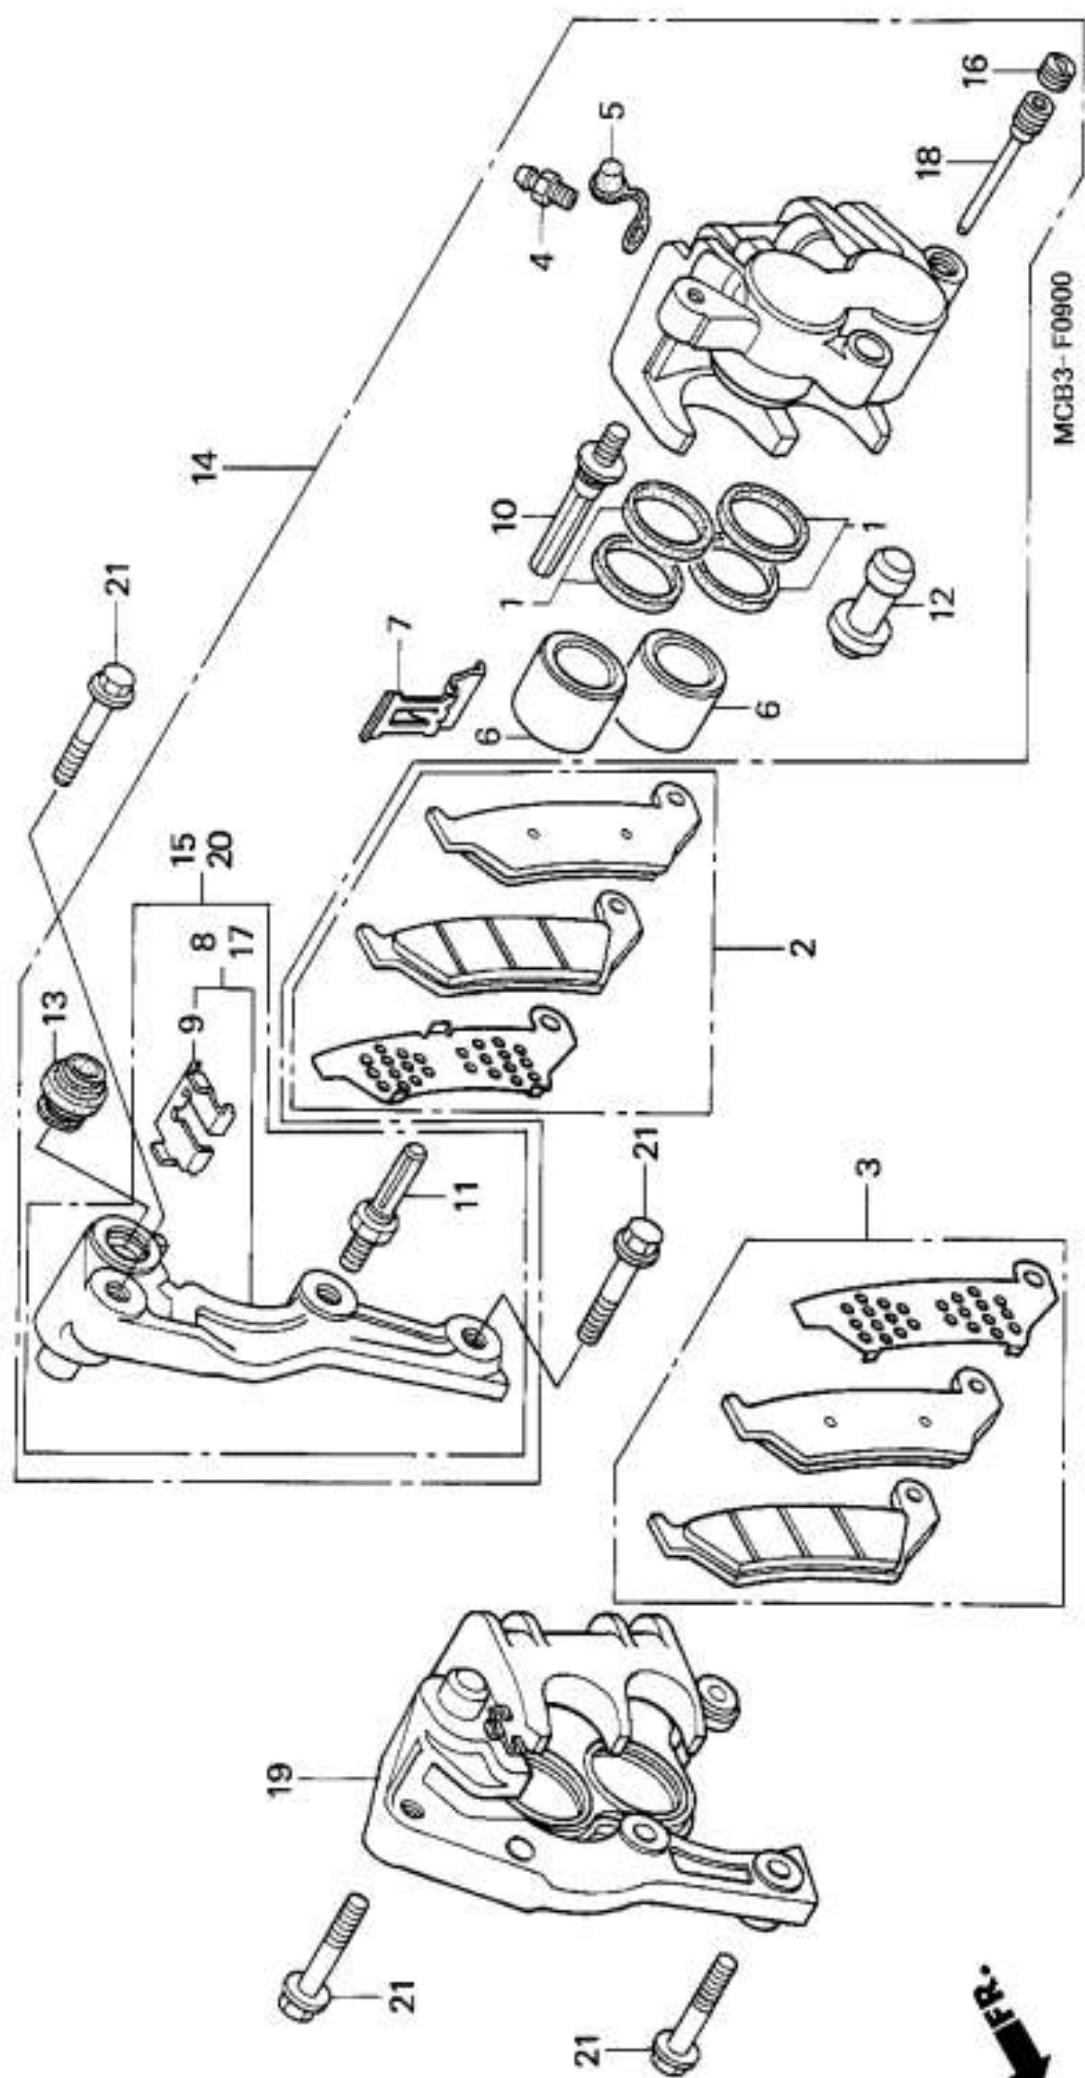


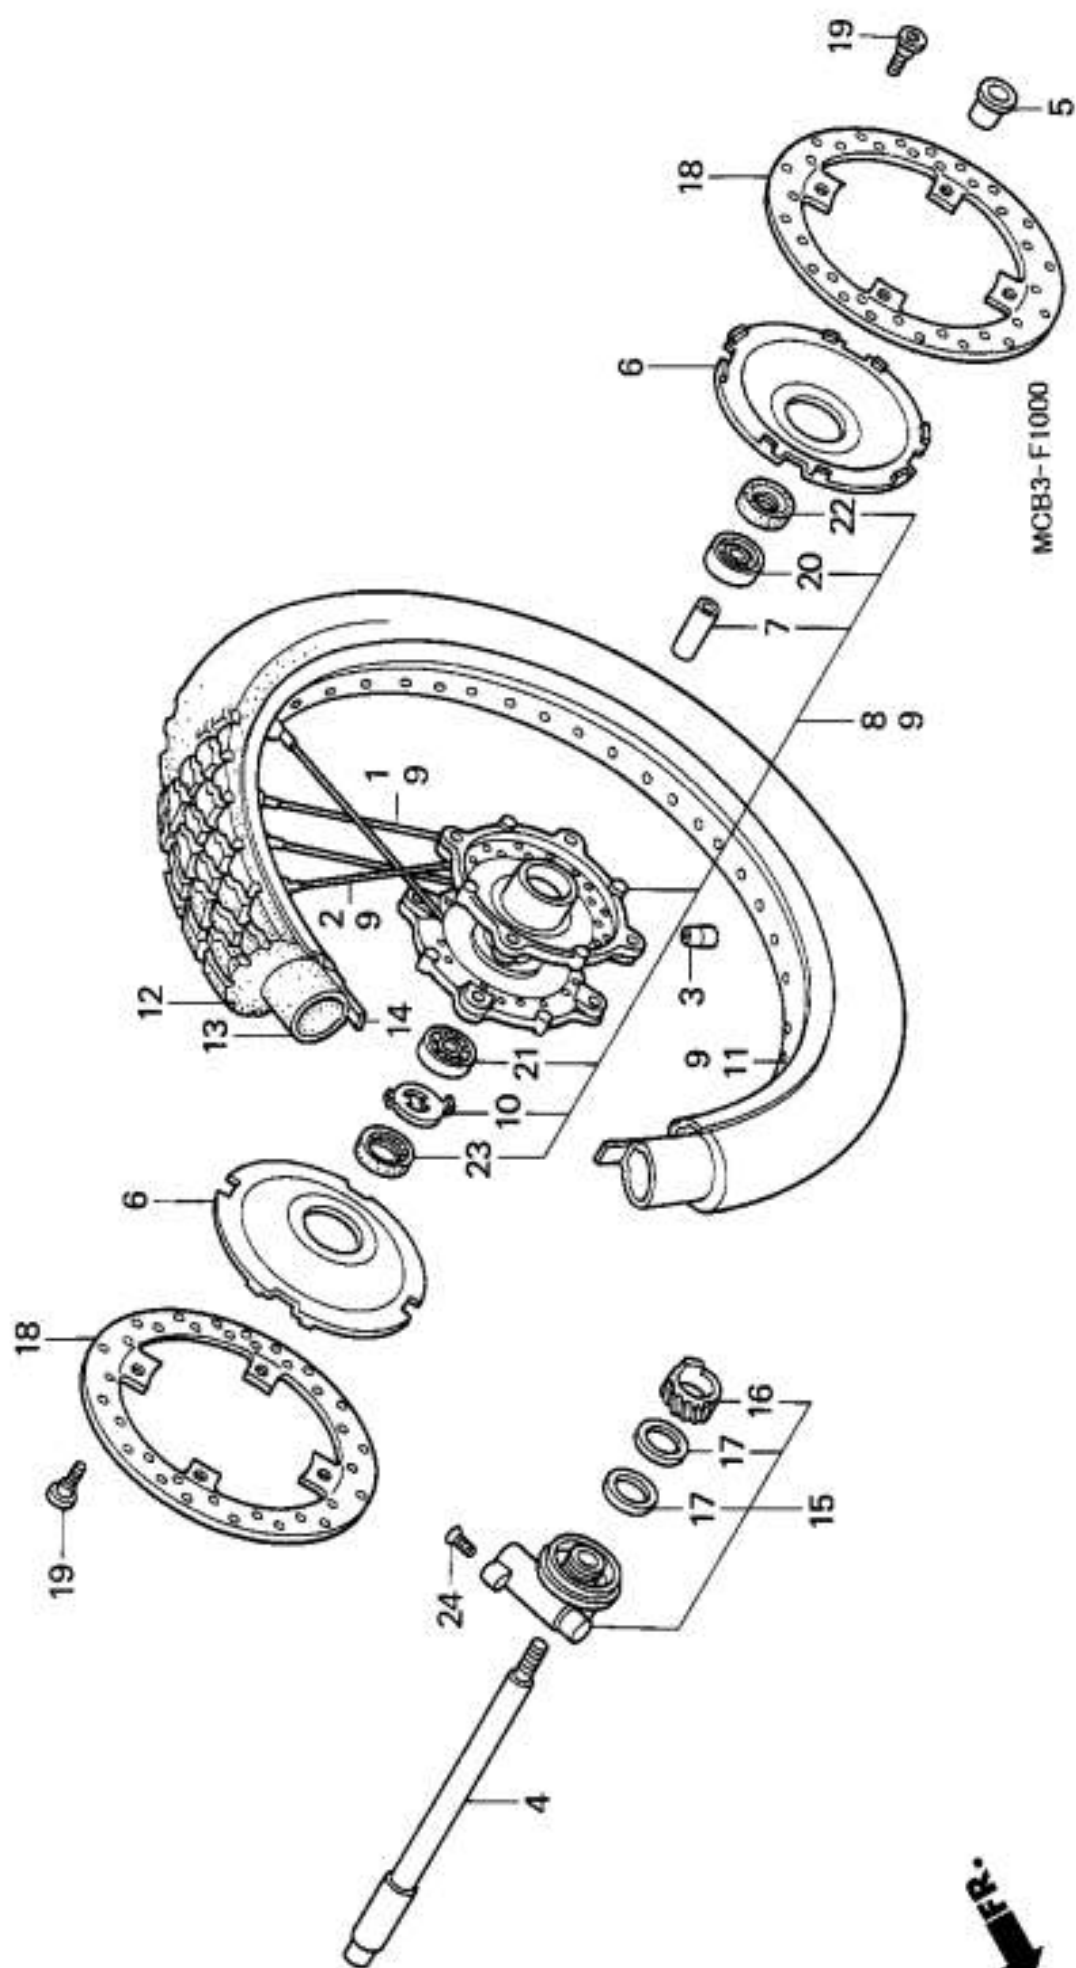


FR.



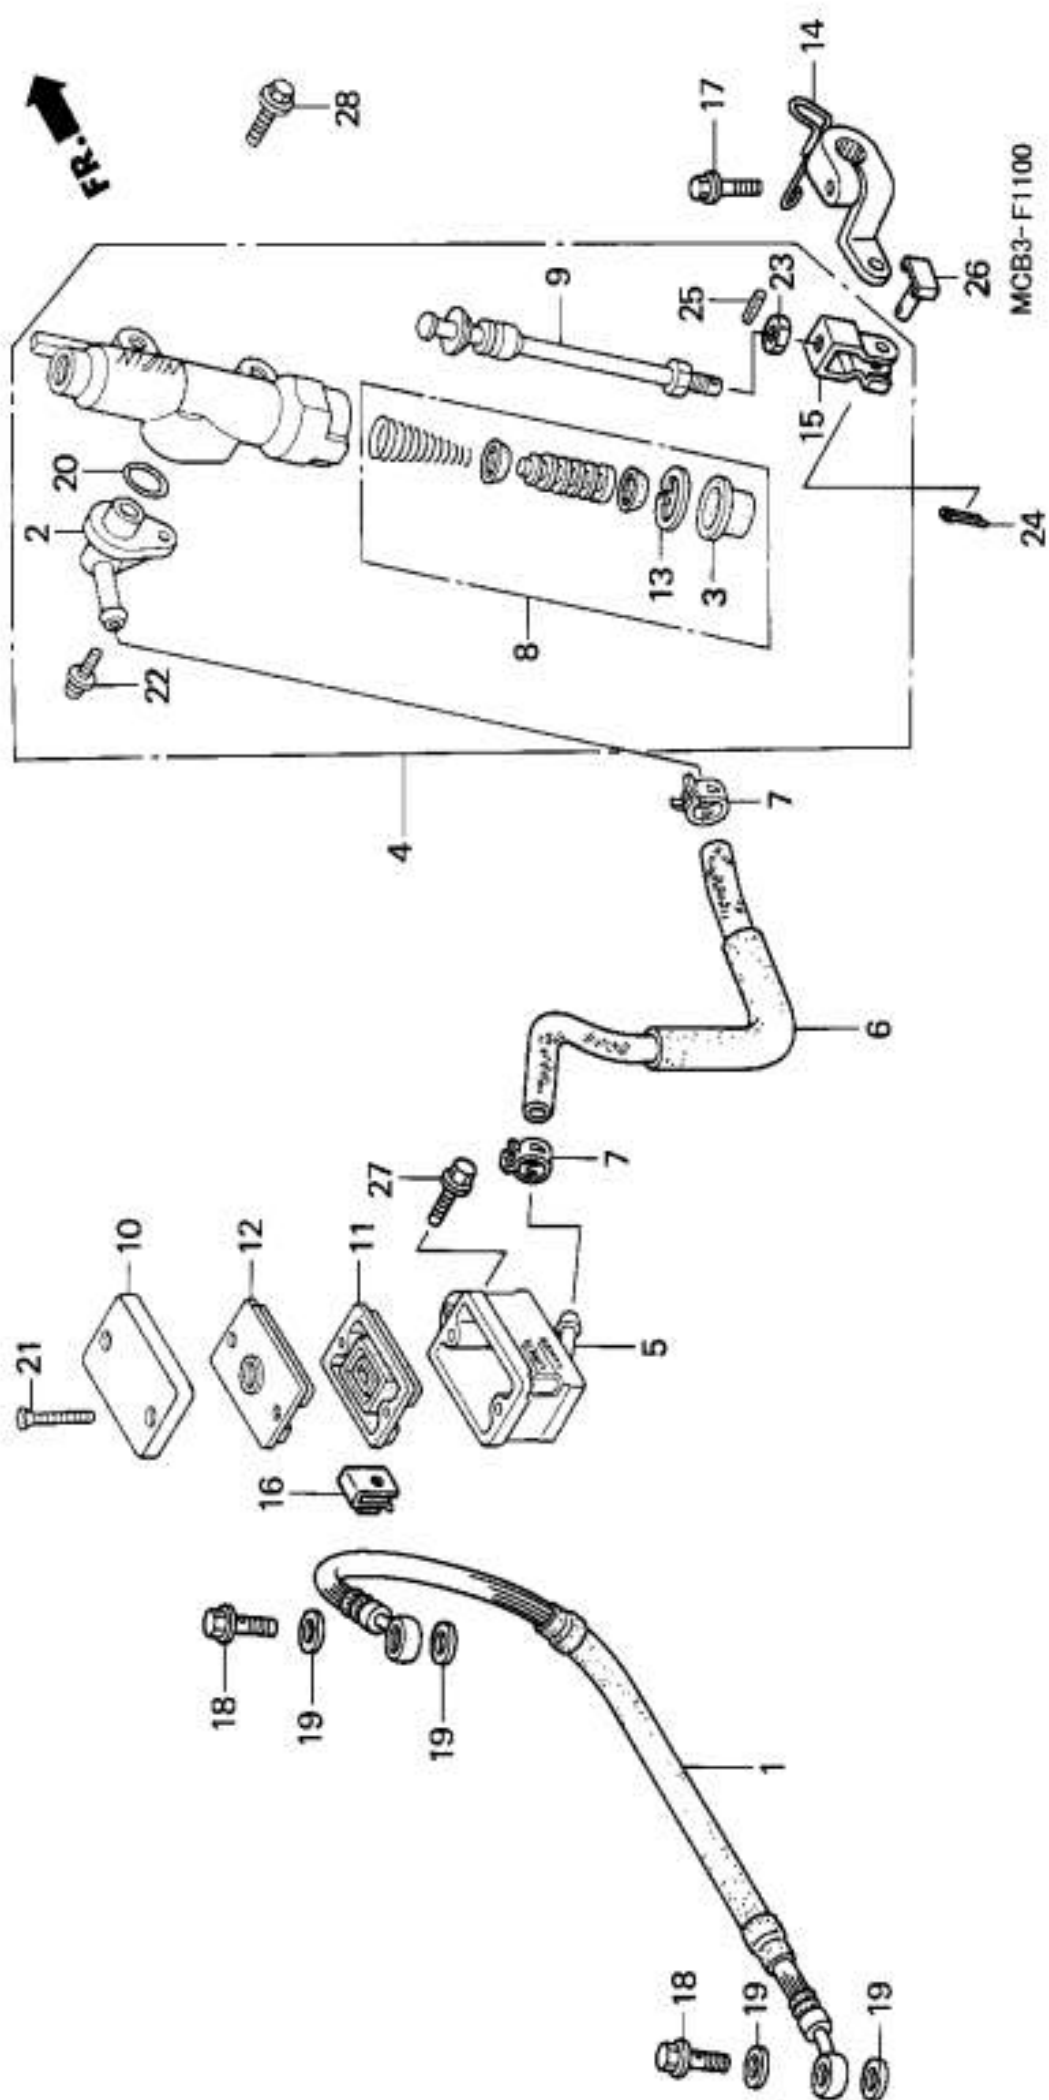


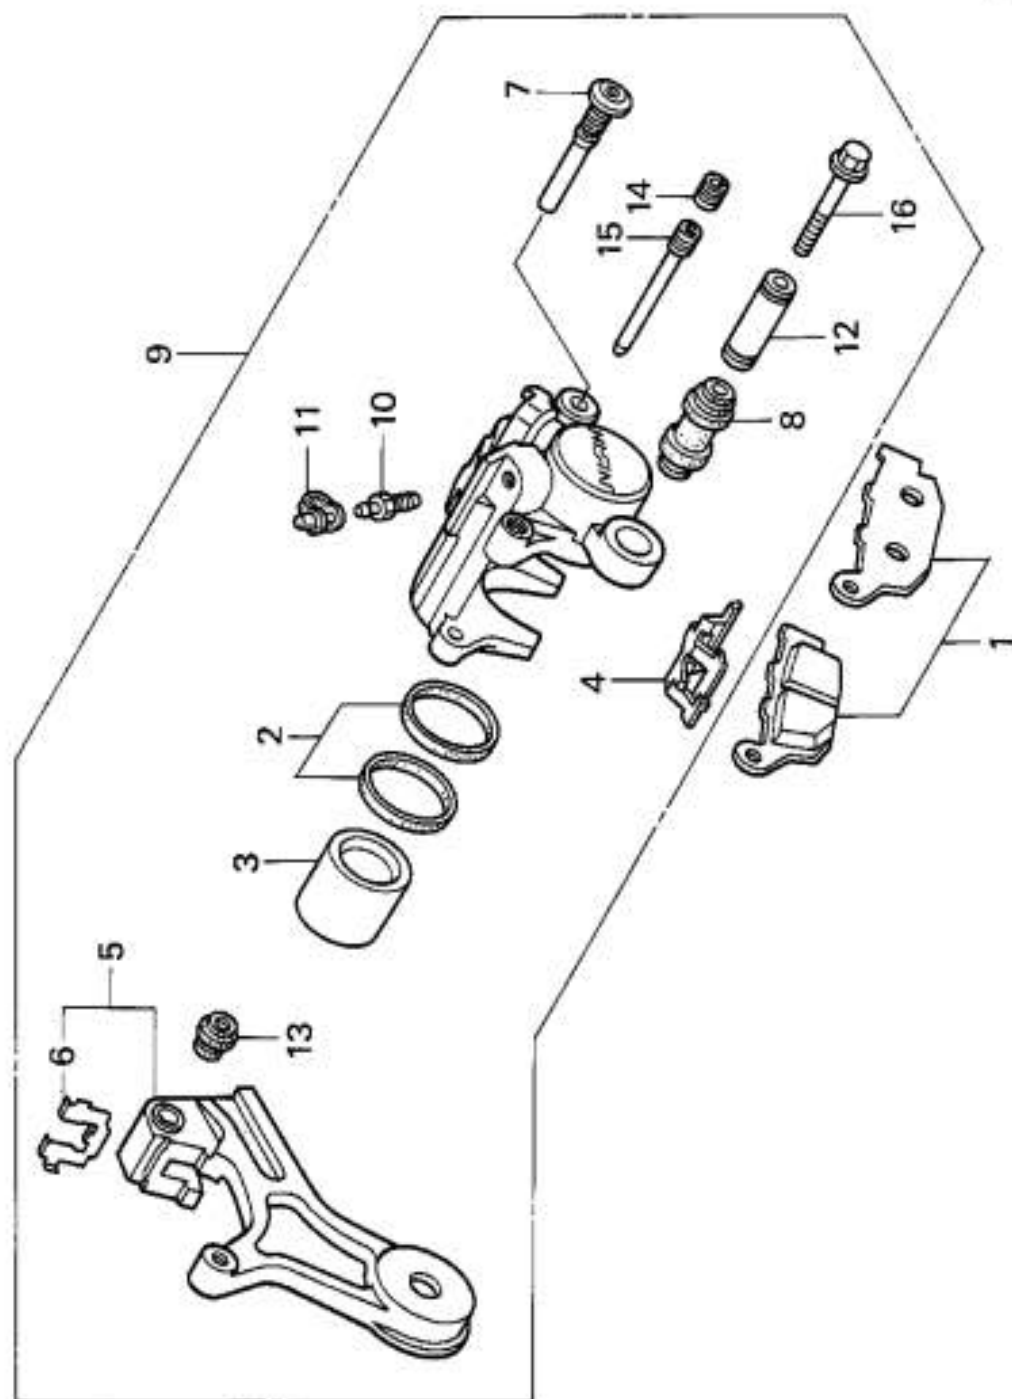


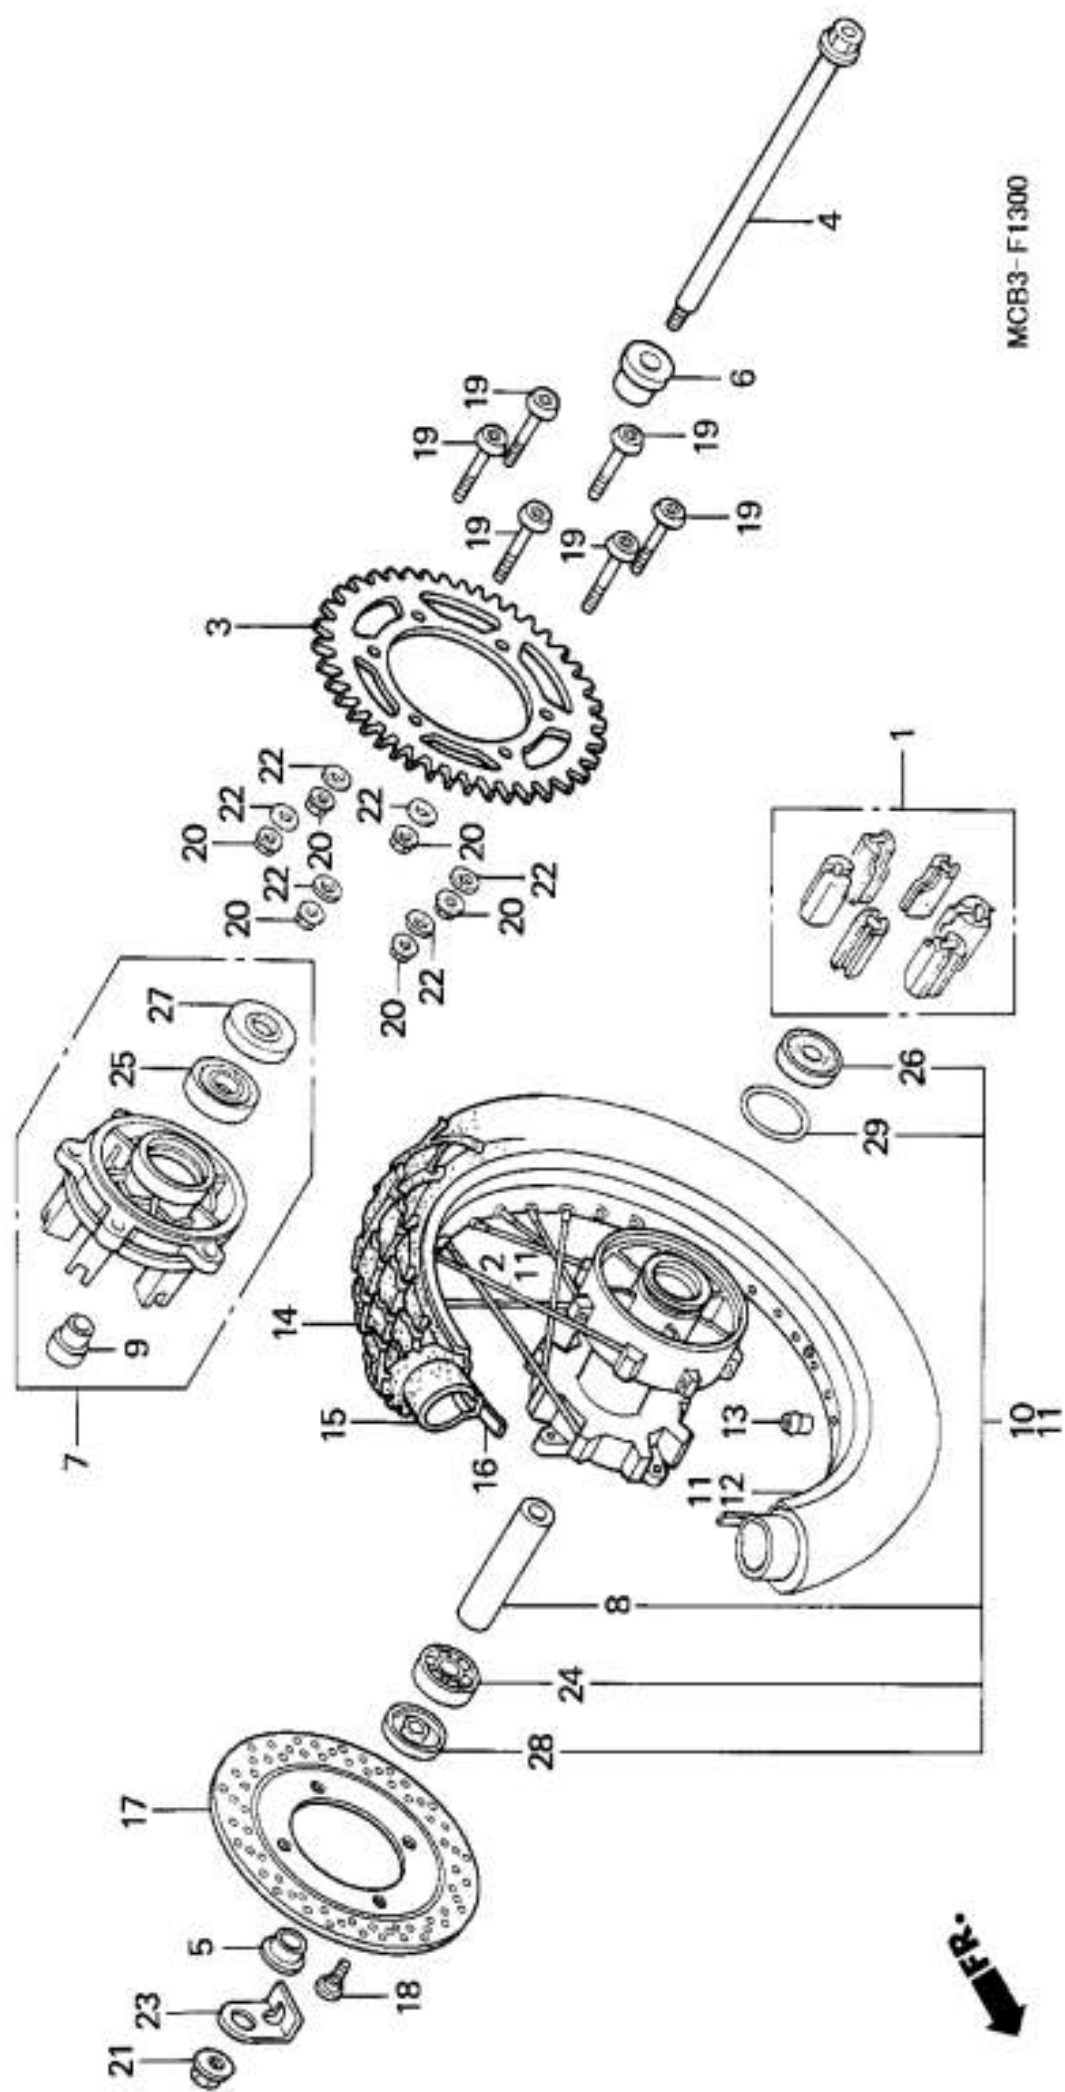


MCB3-F1300


FR. →

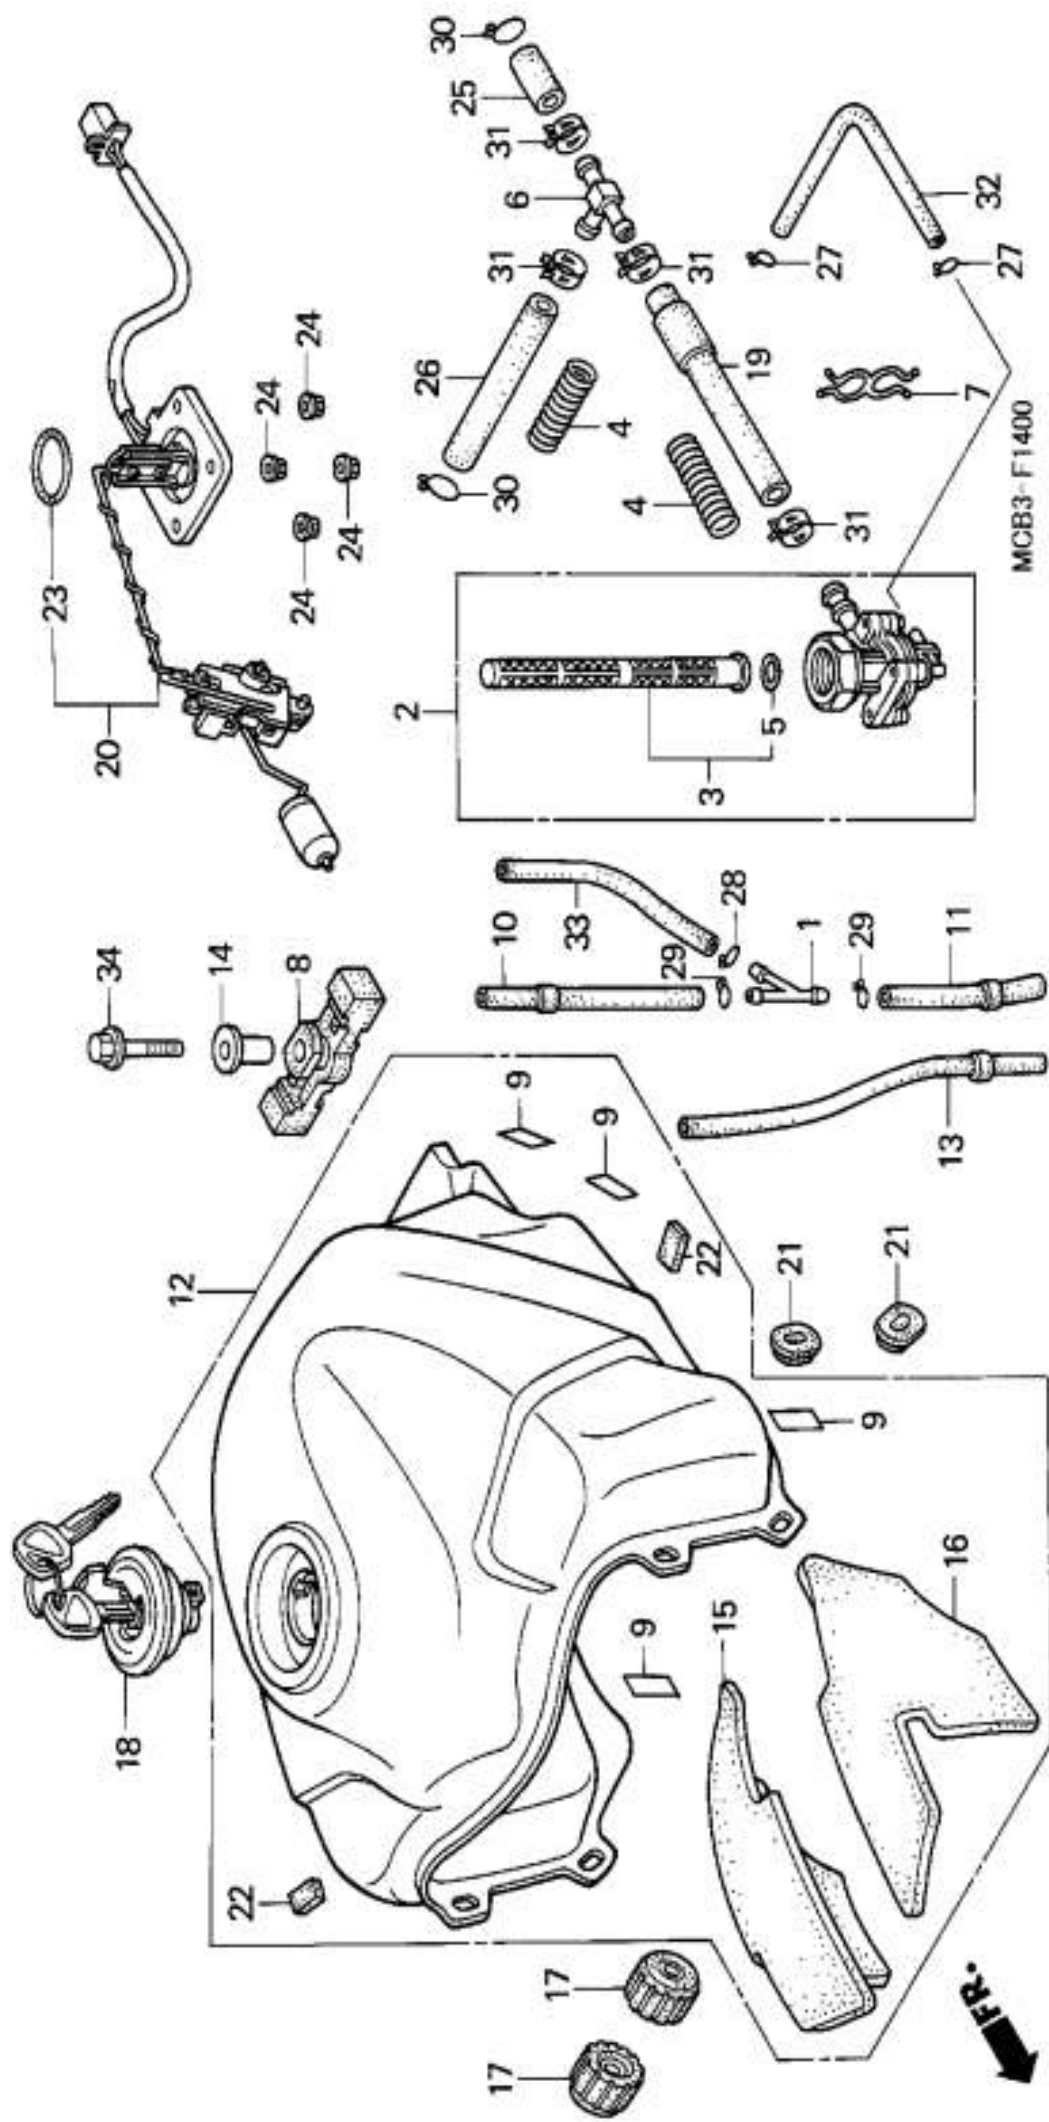


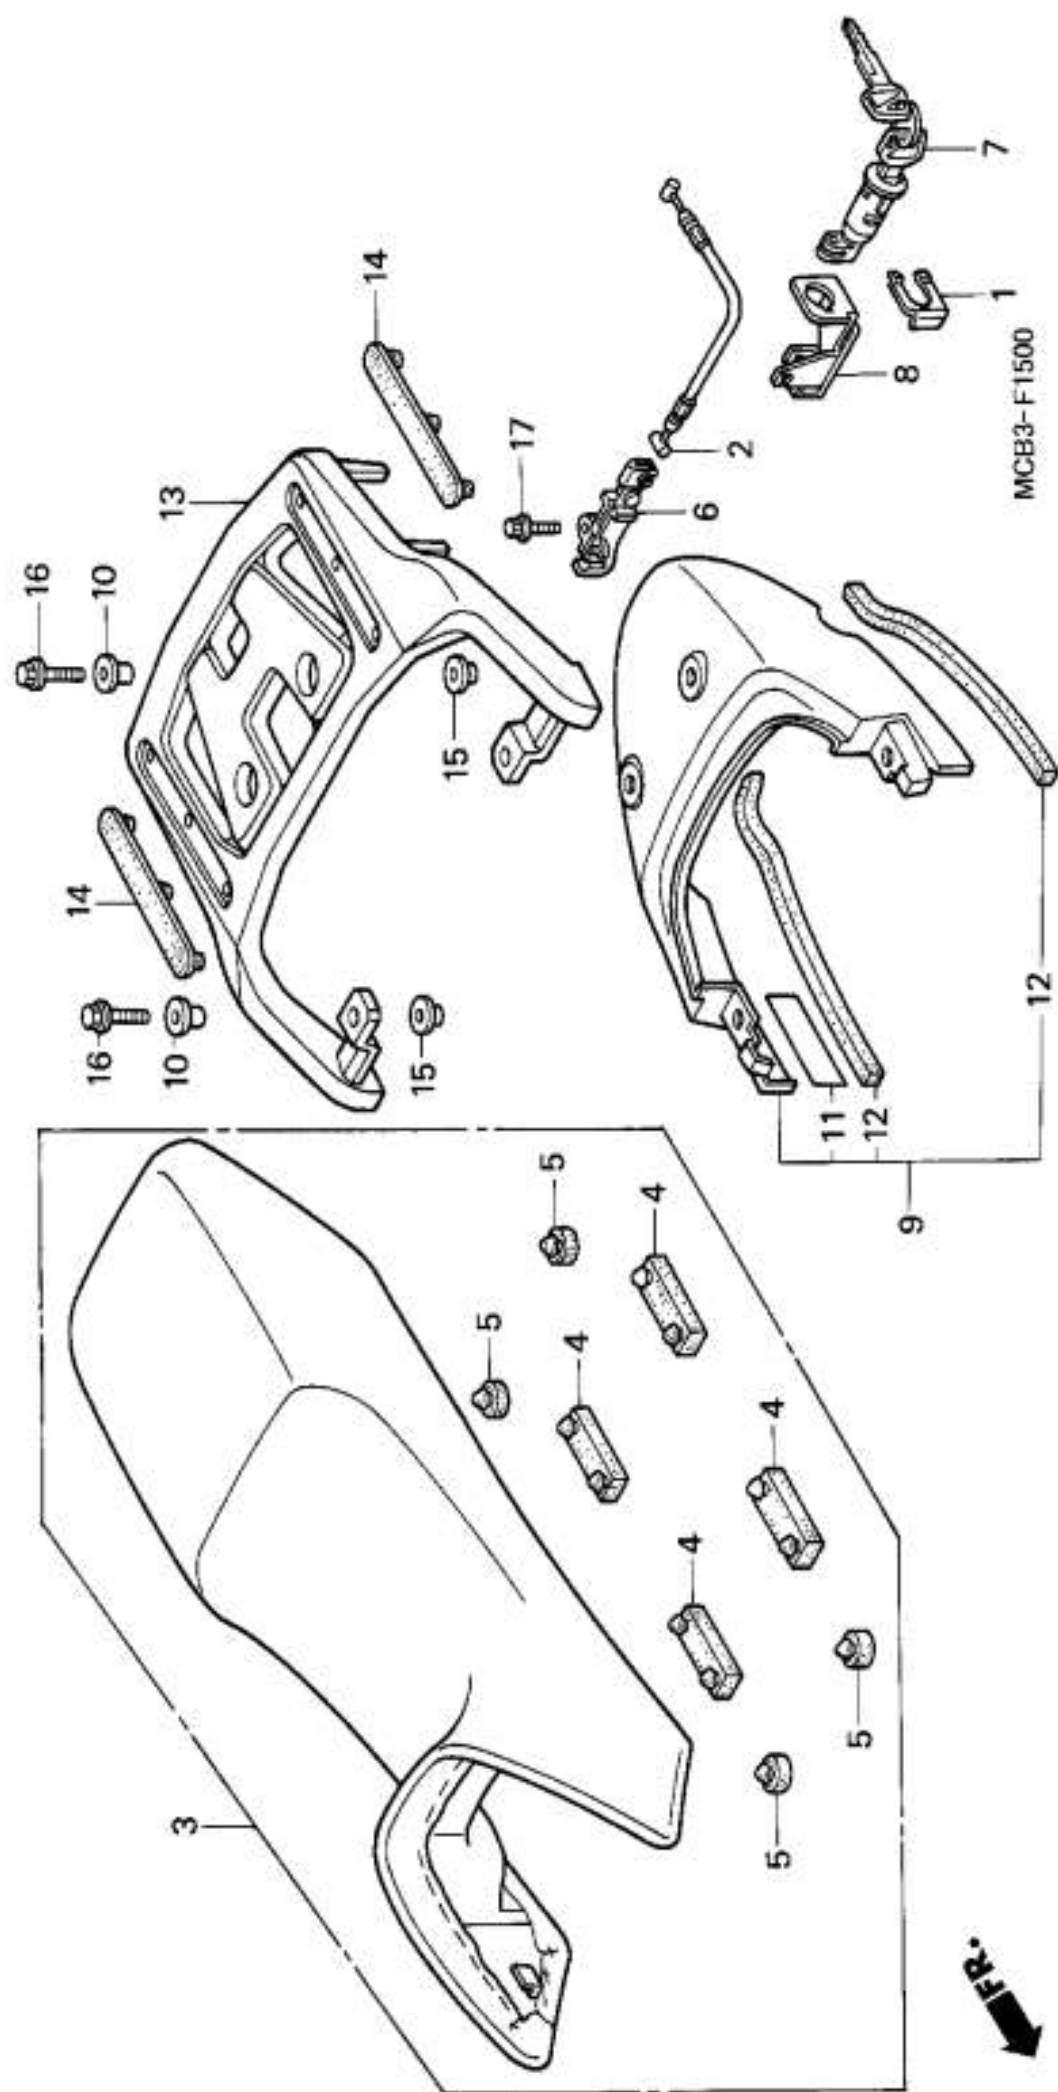

FR. →

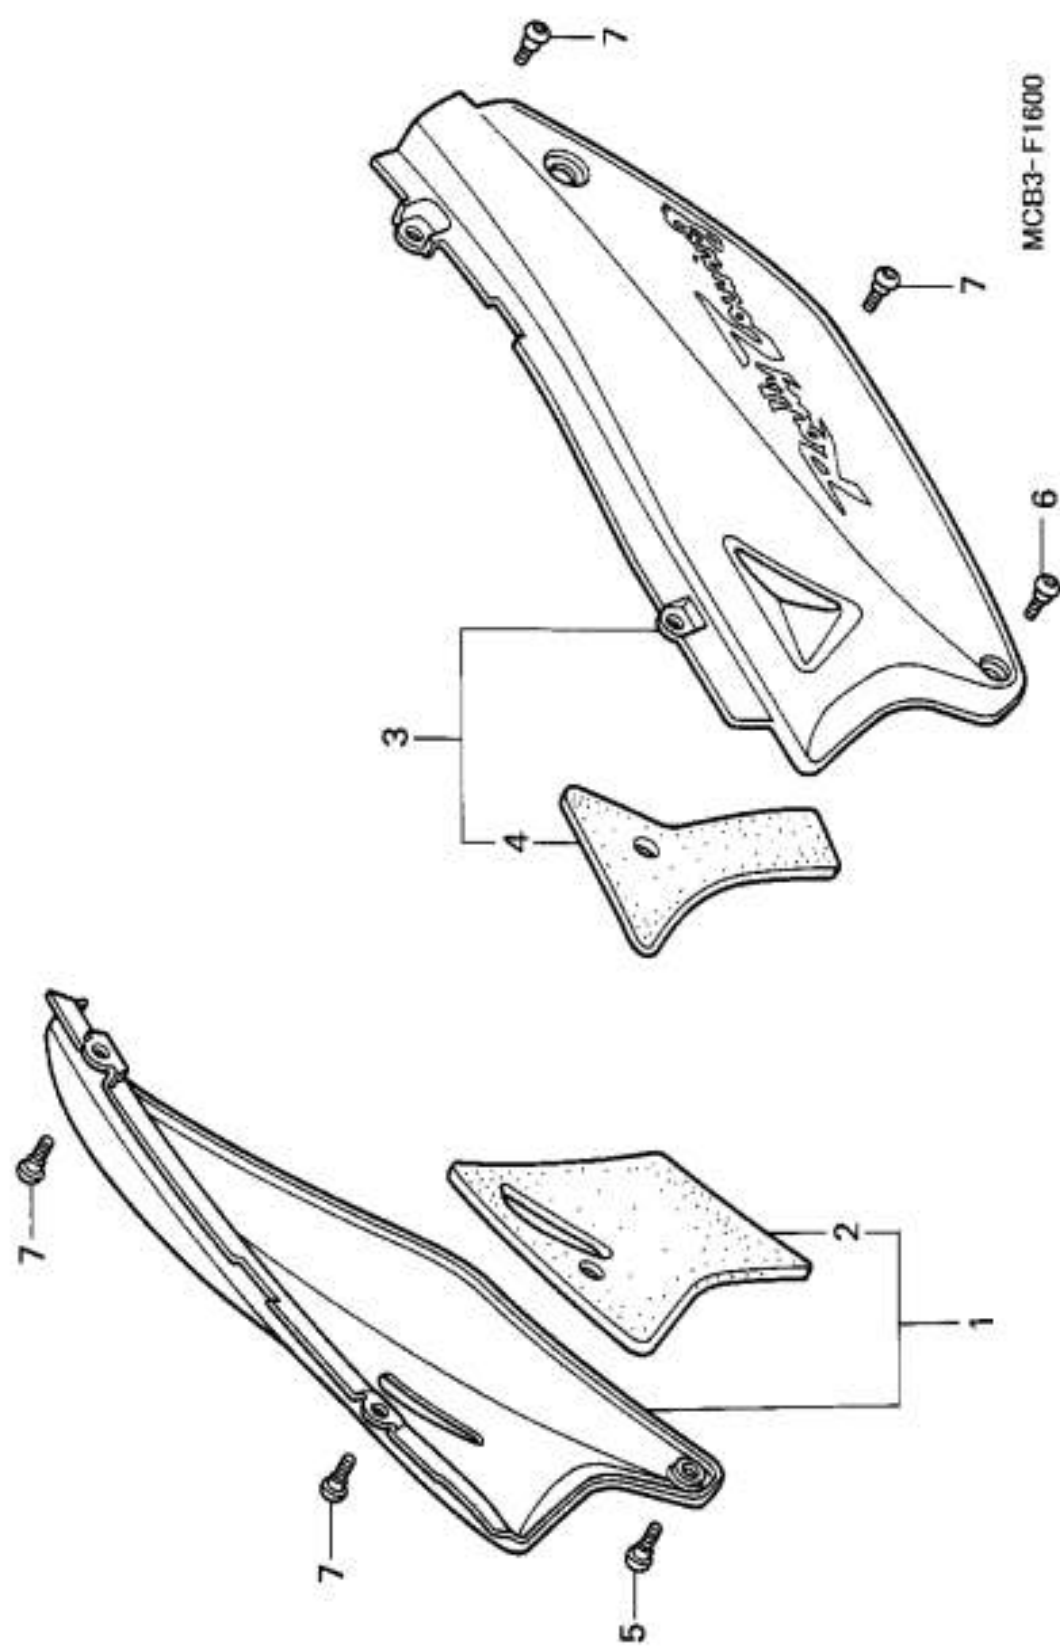

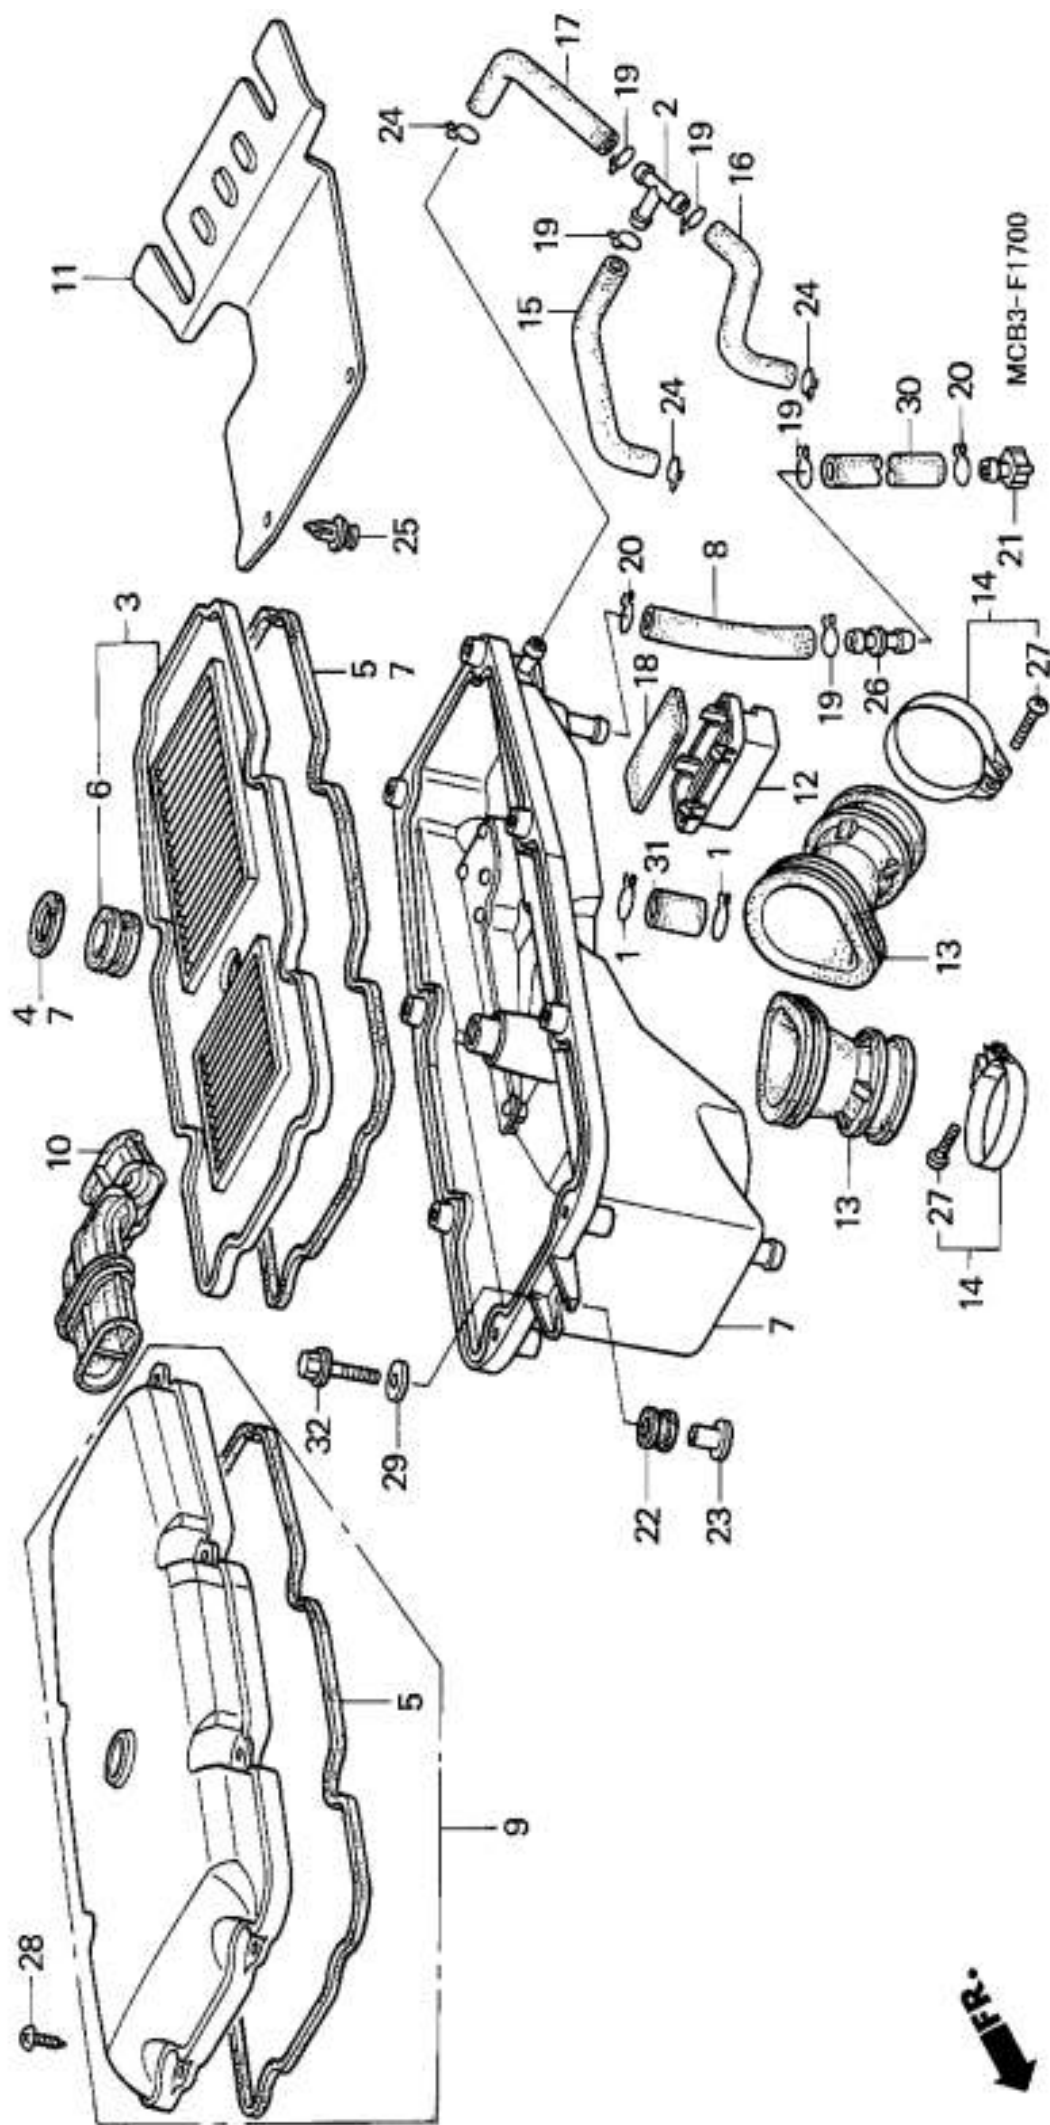


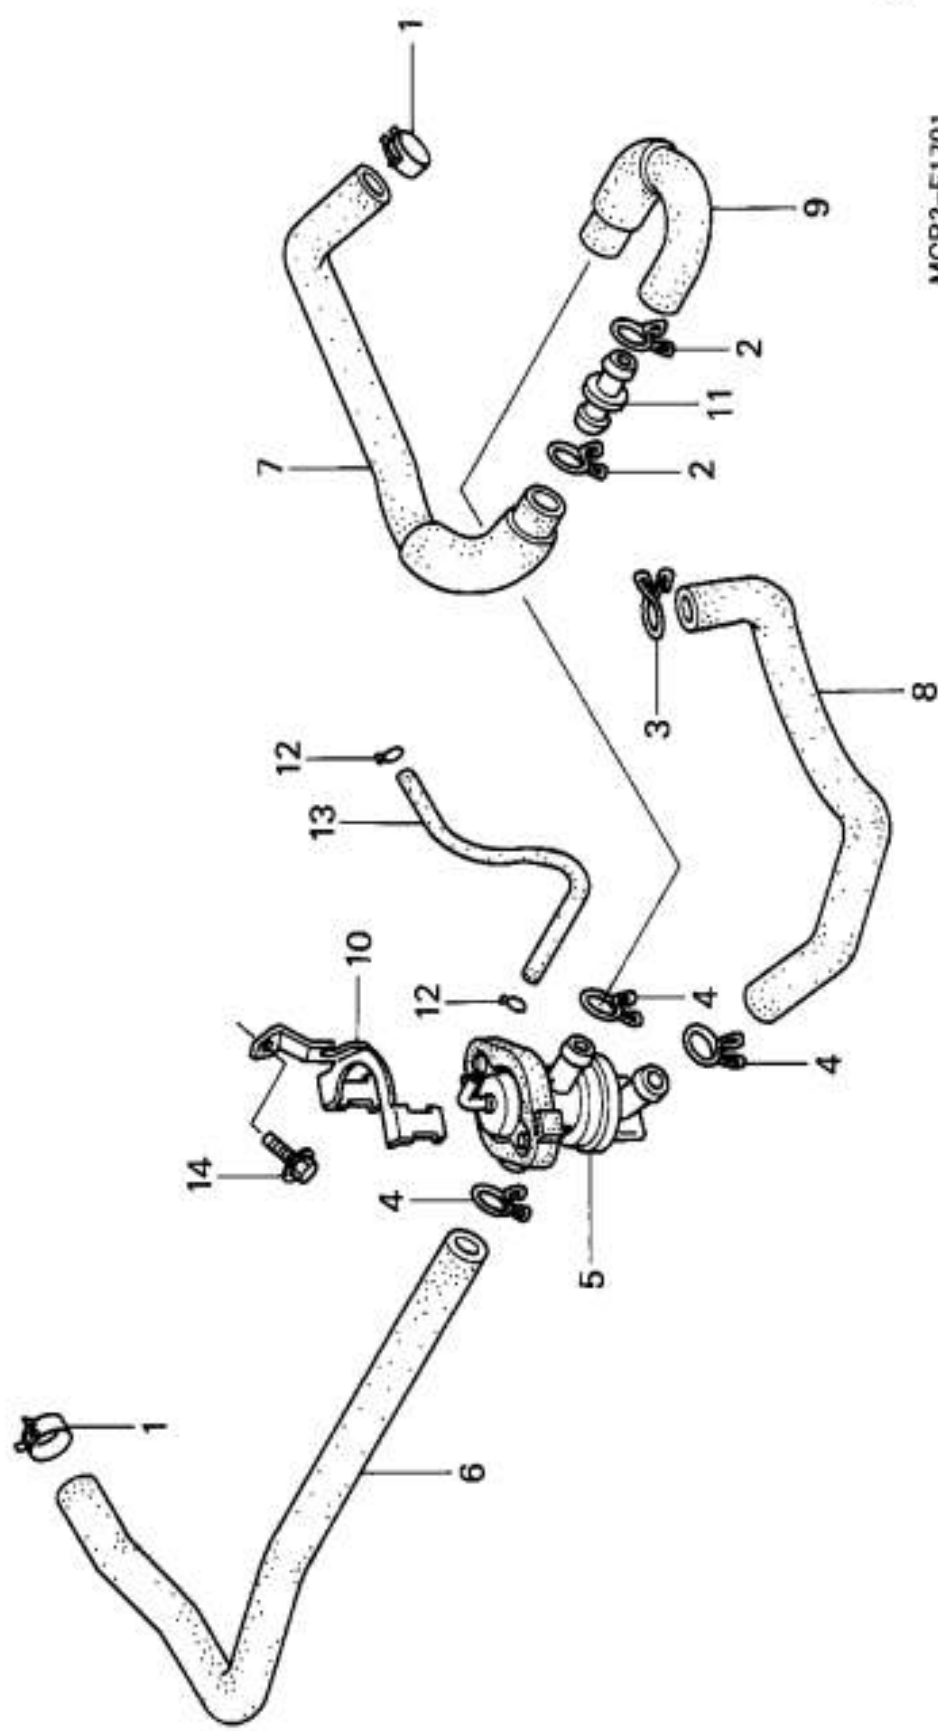


MCB3-F1701


FR. 



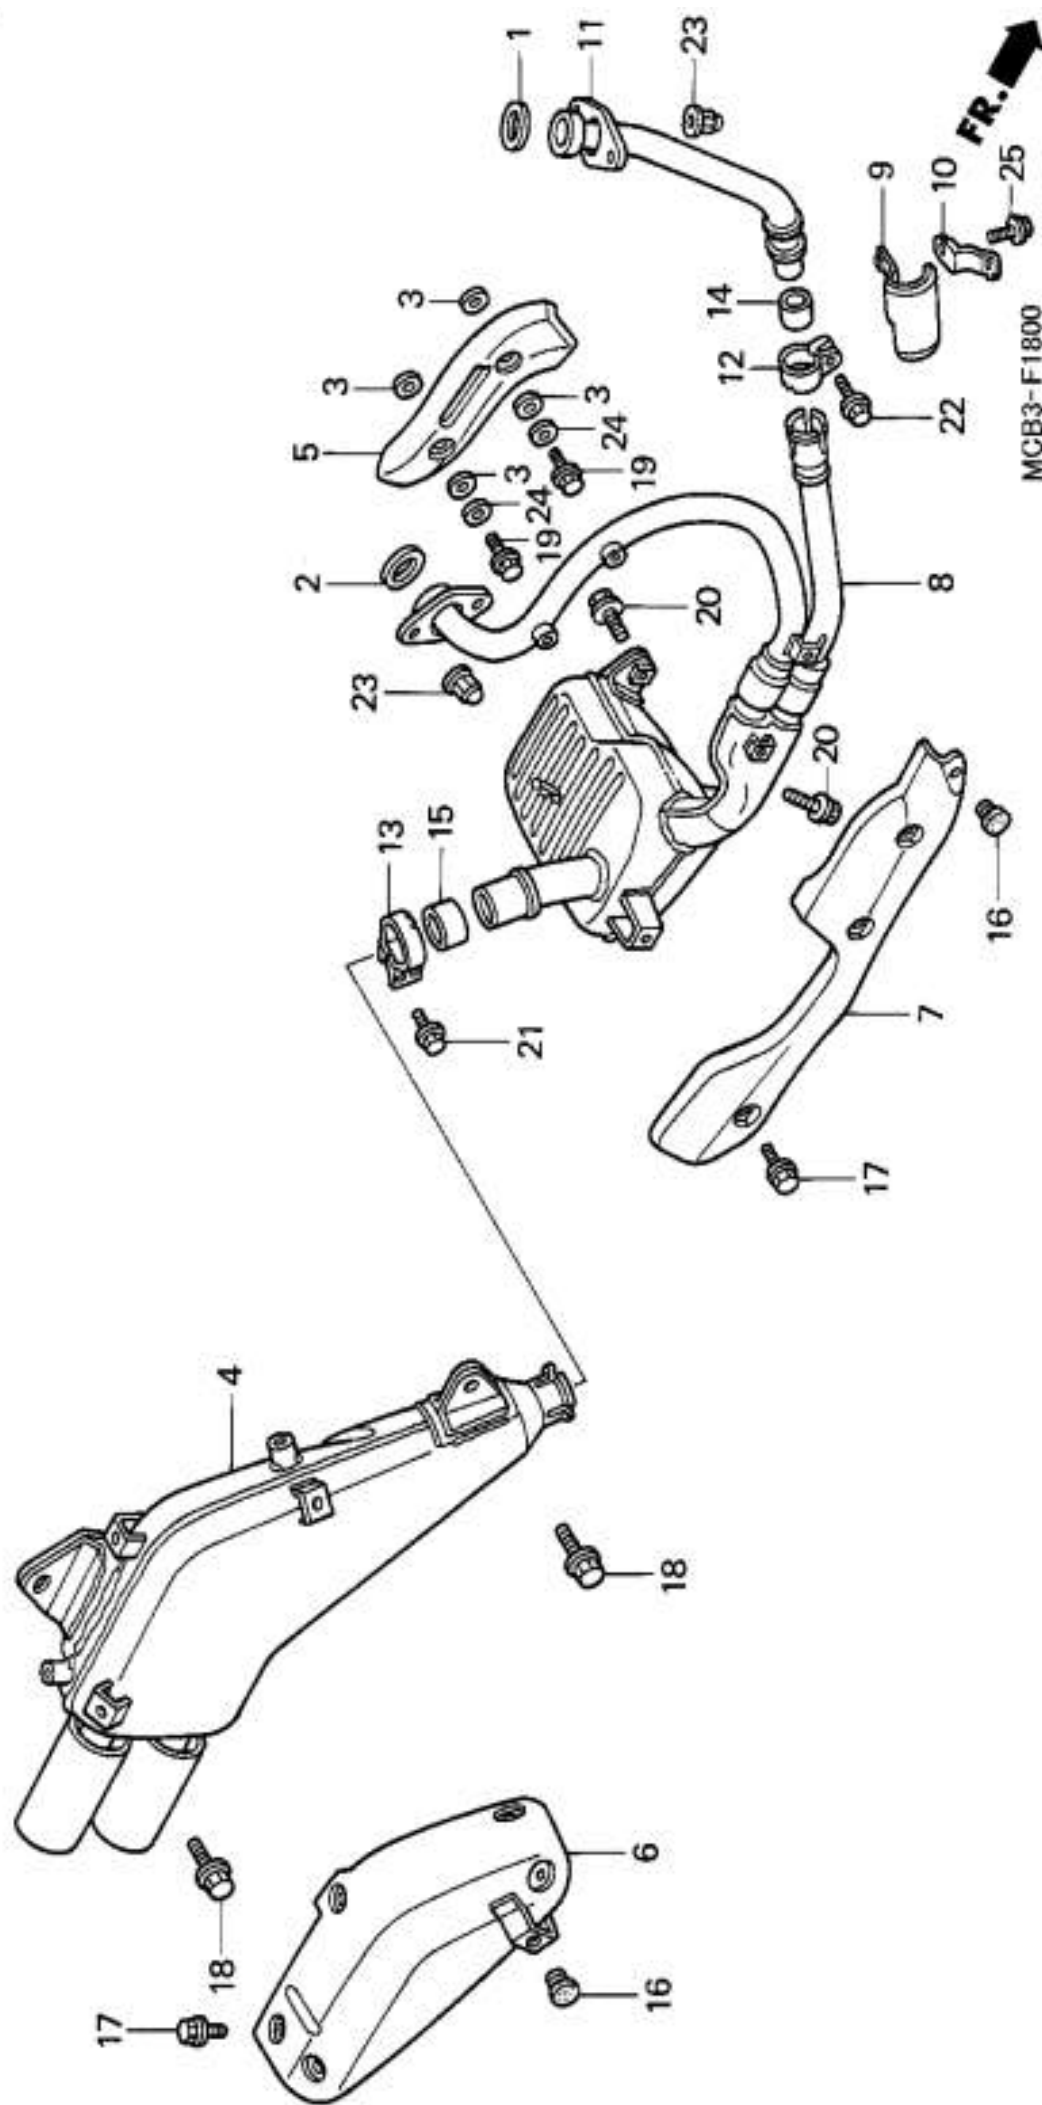

MCB3-F1800

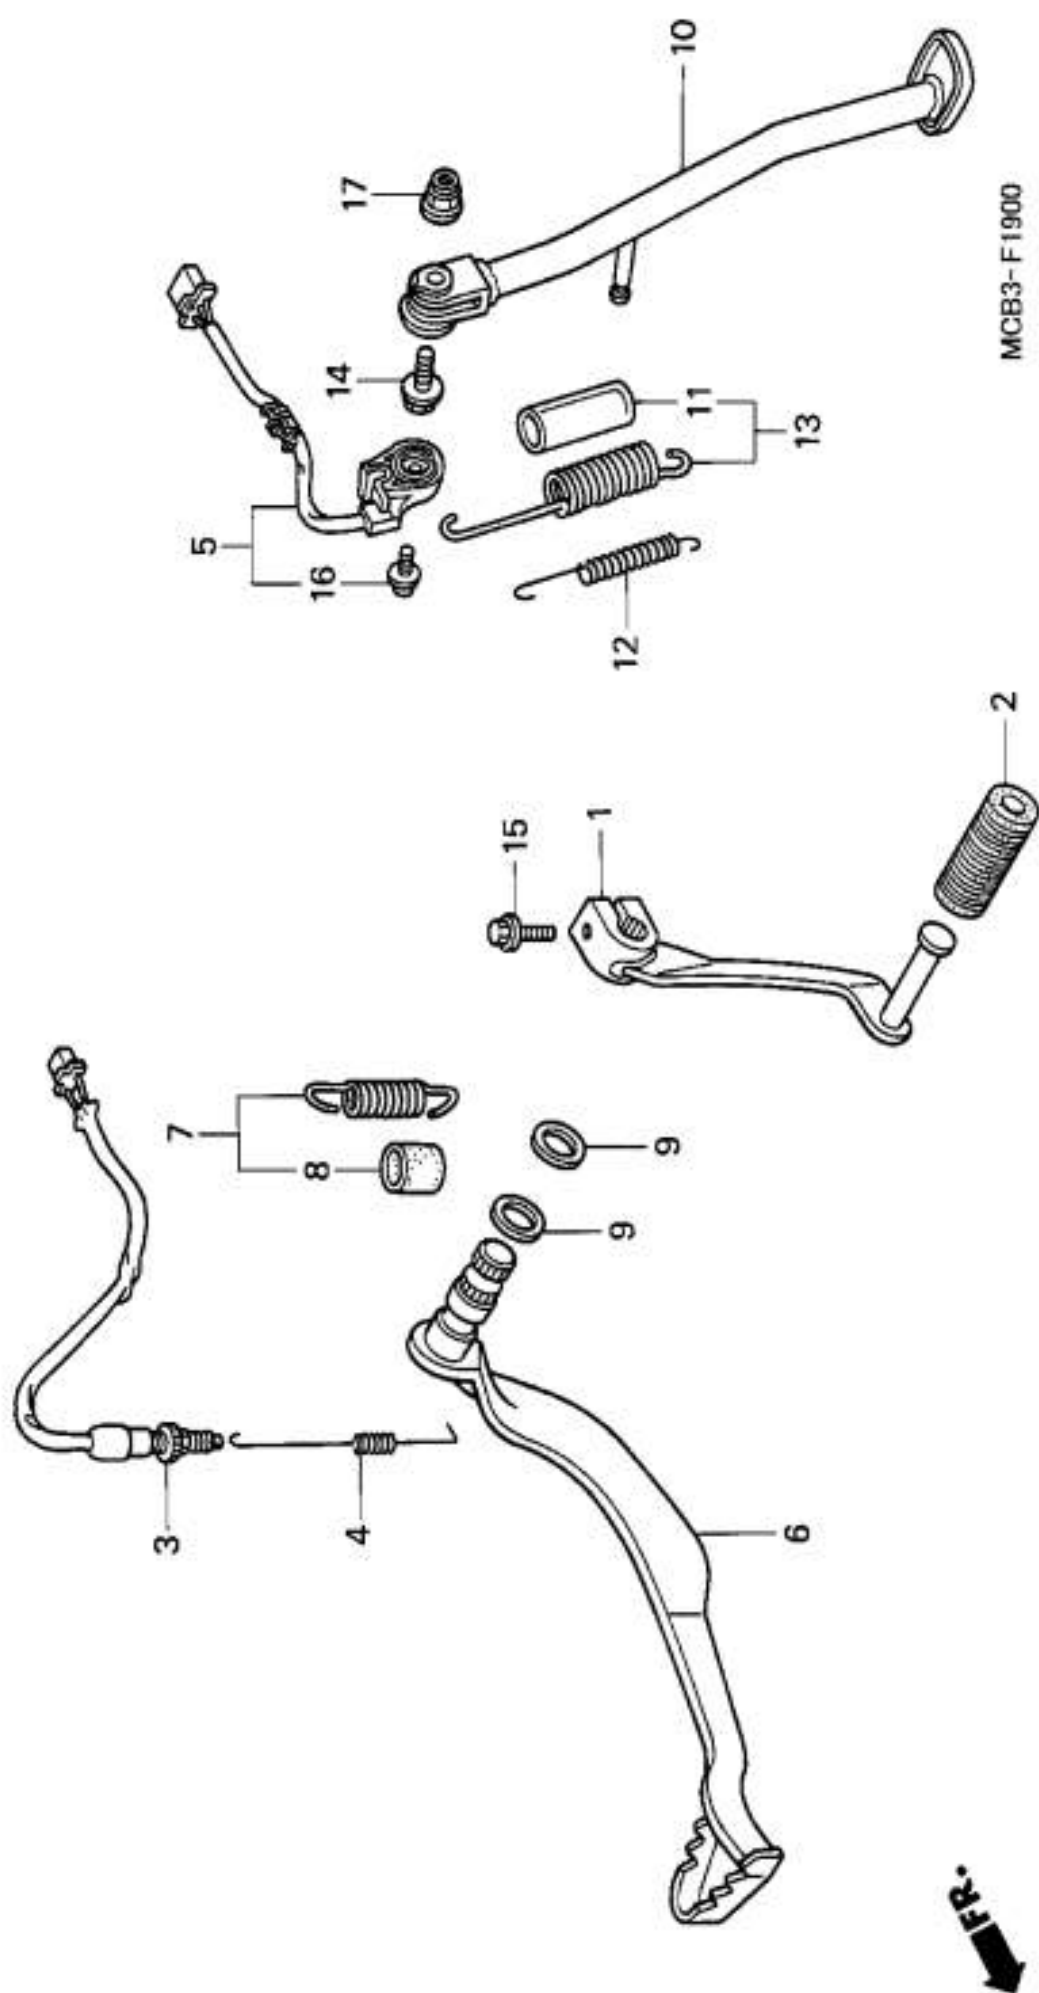

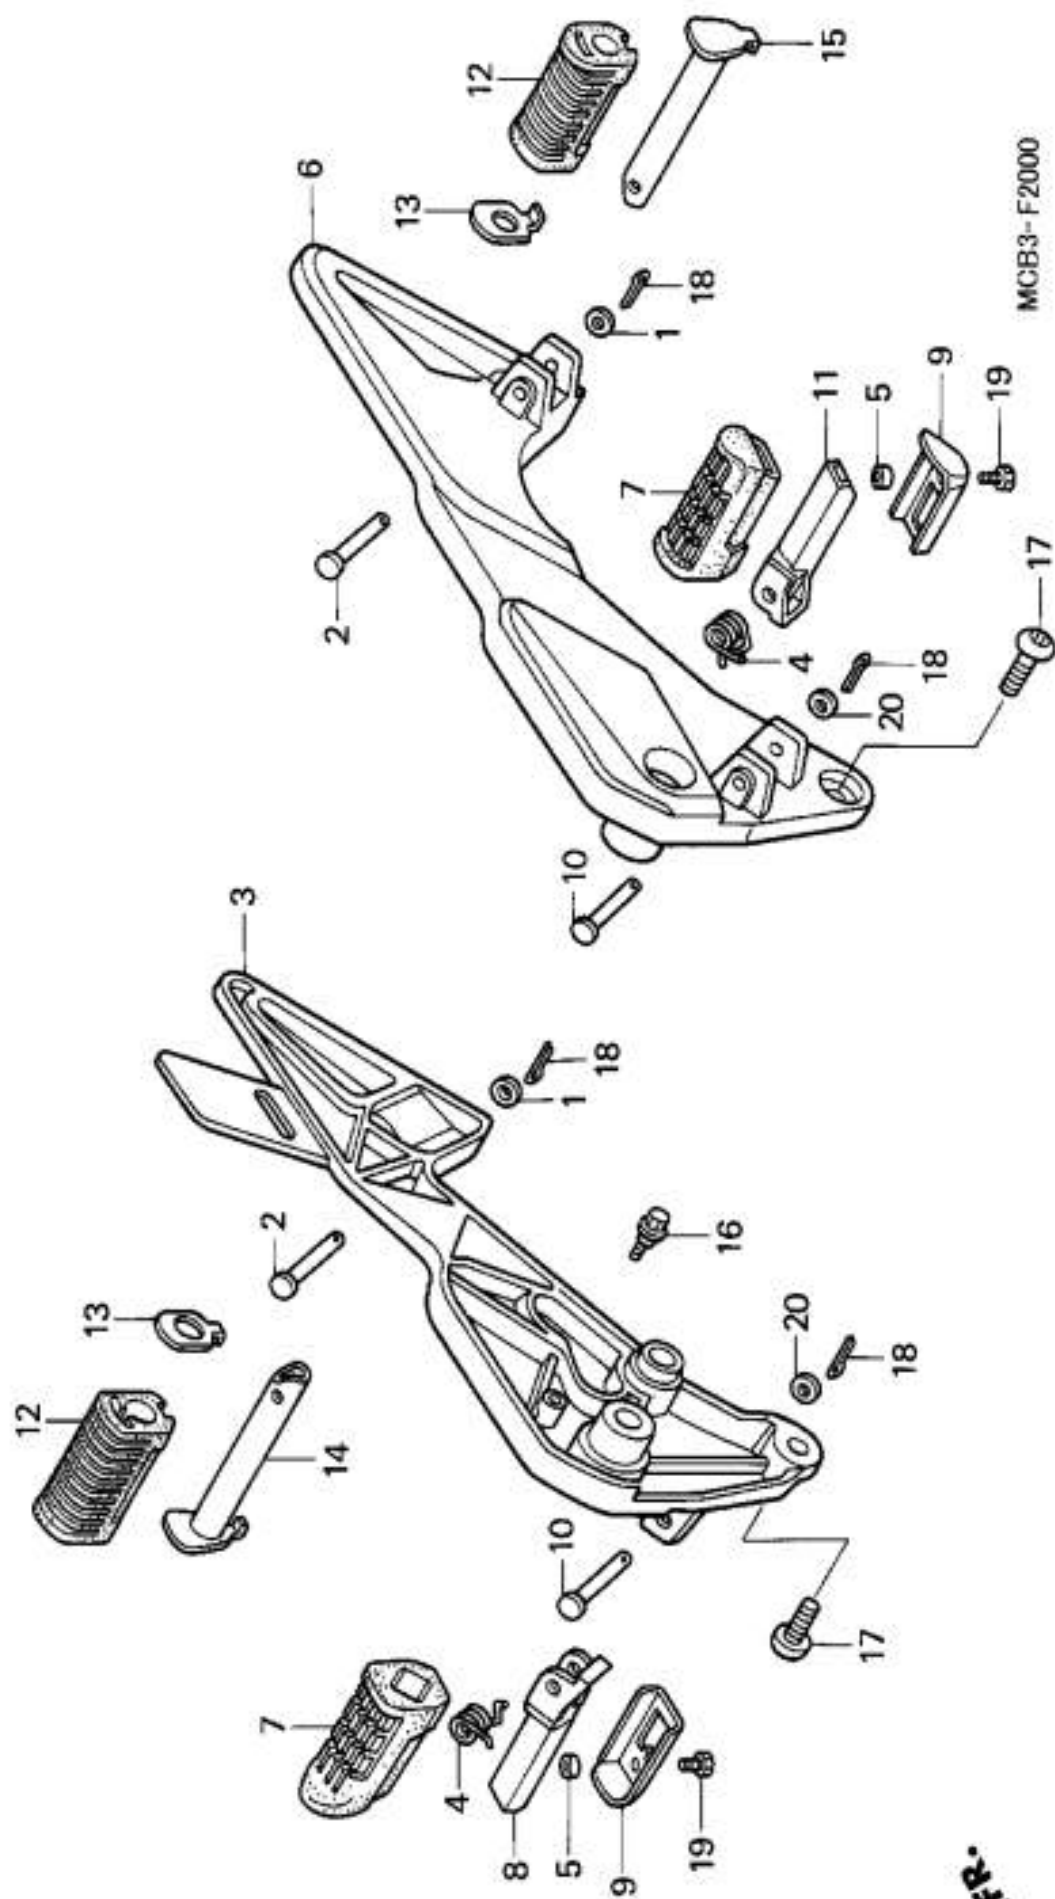



MCB3-F2000


FR.

FR.


MCB3-F2100

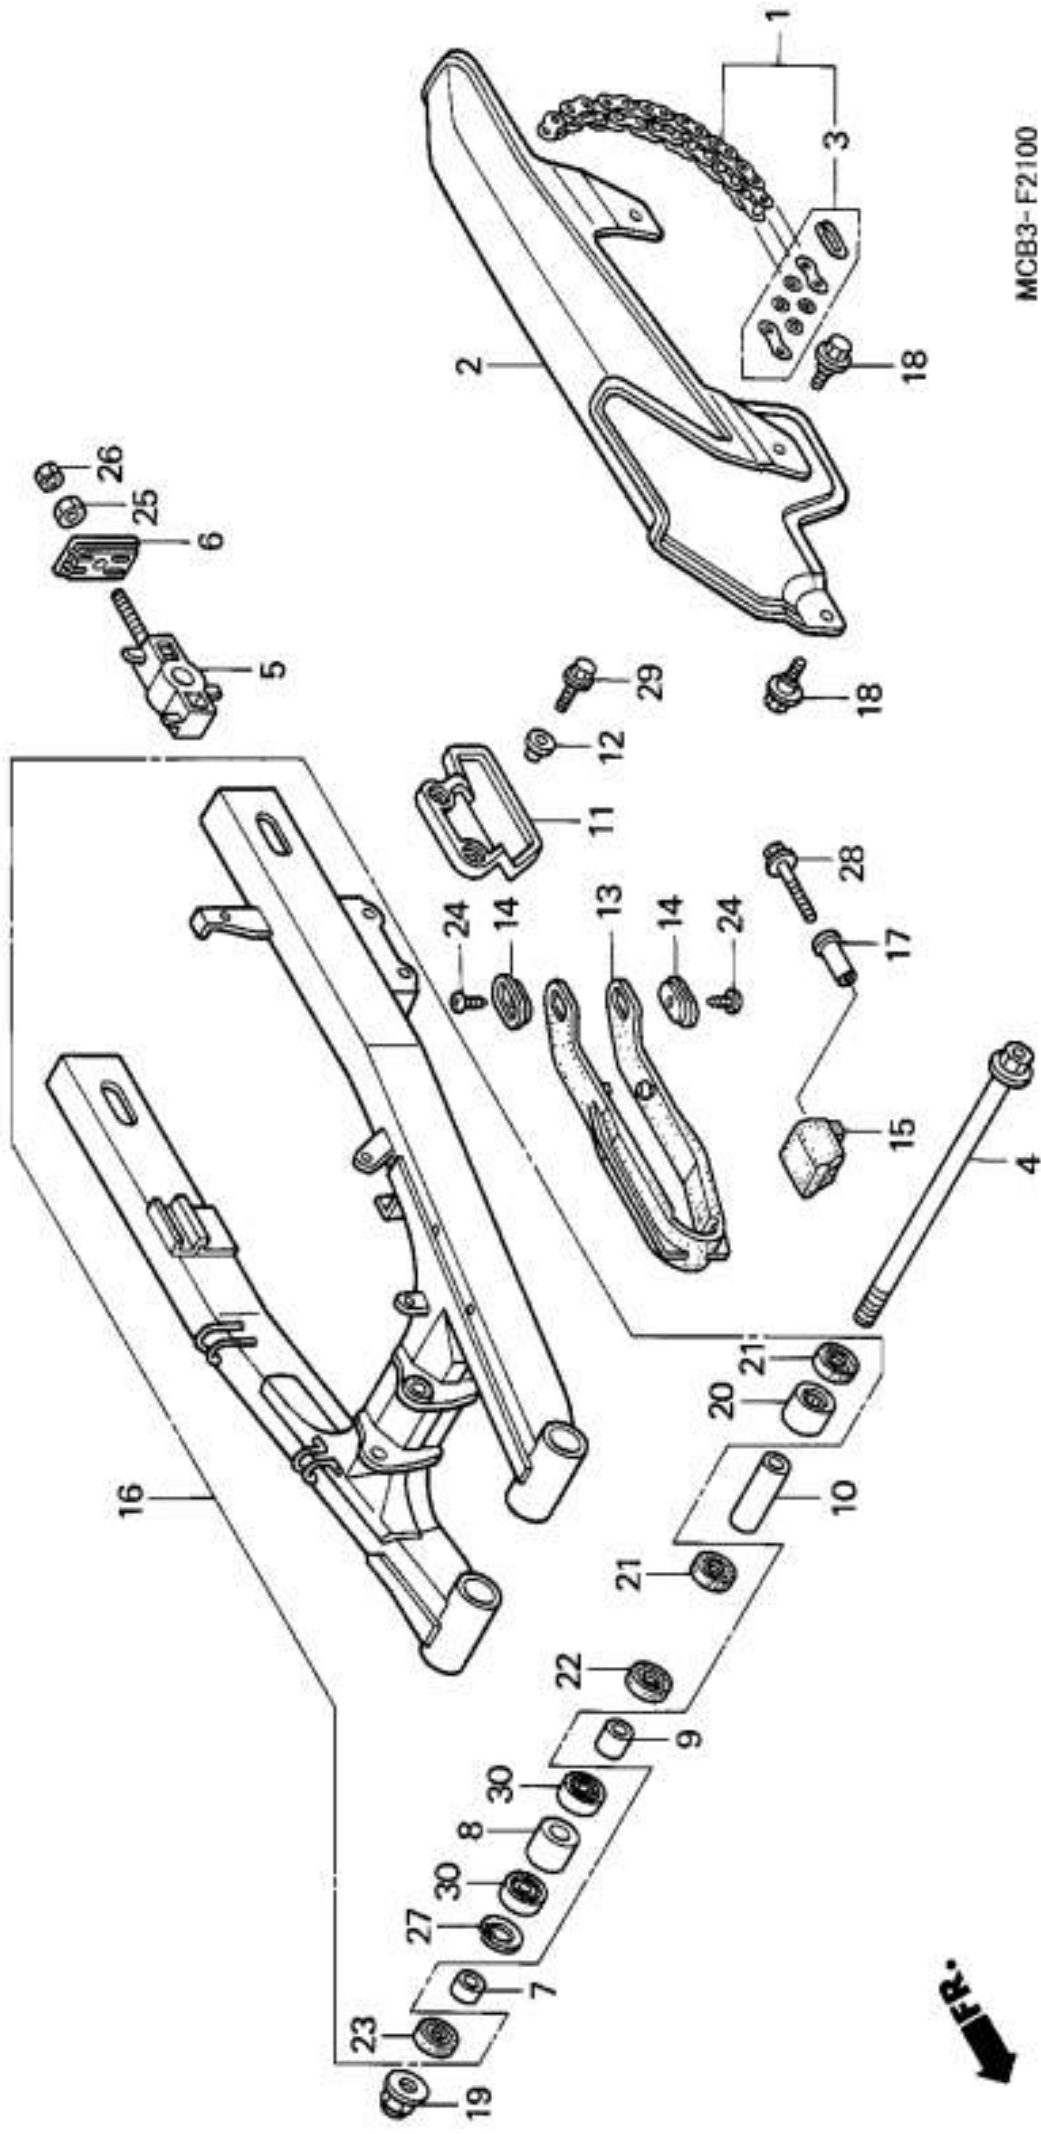

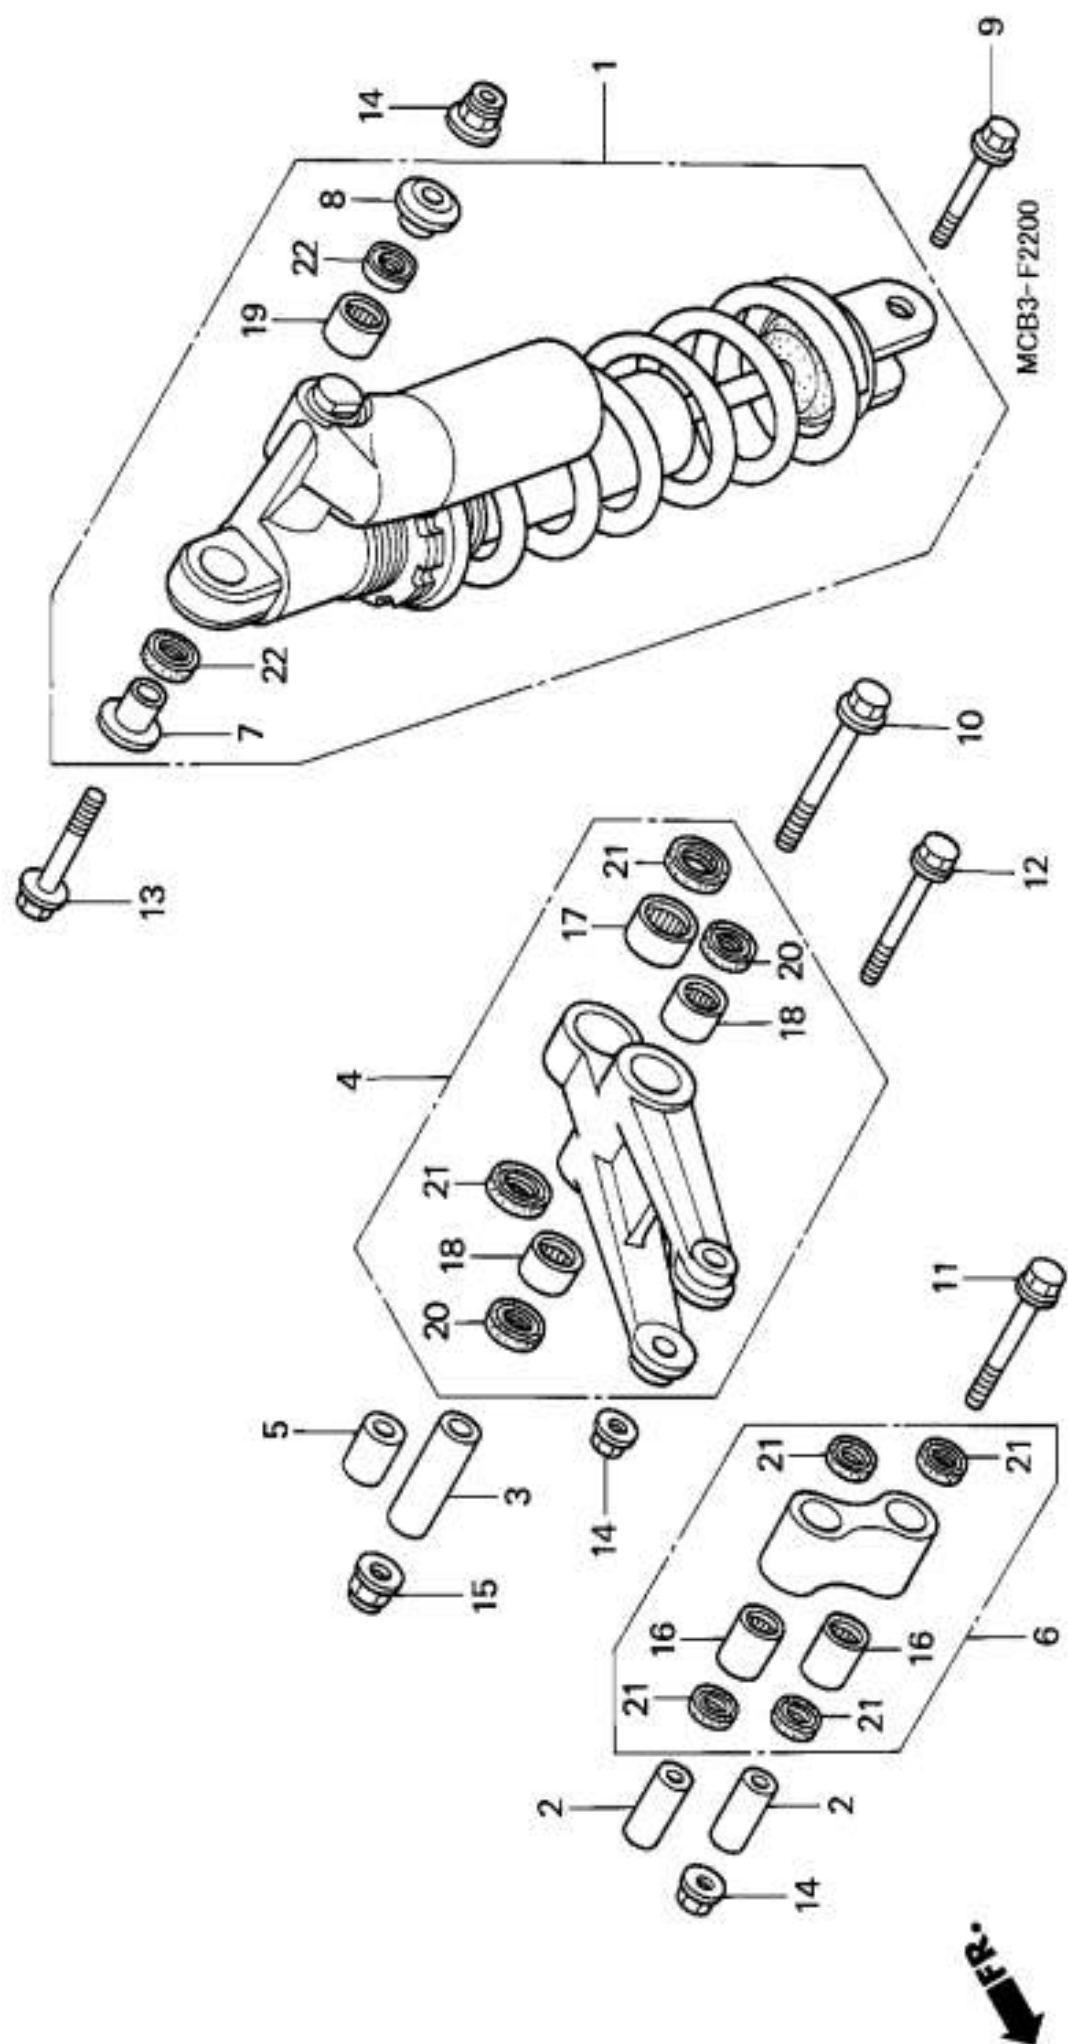

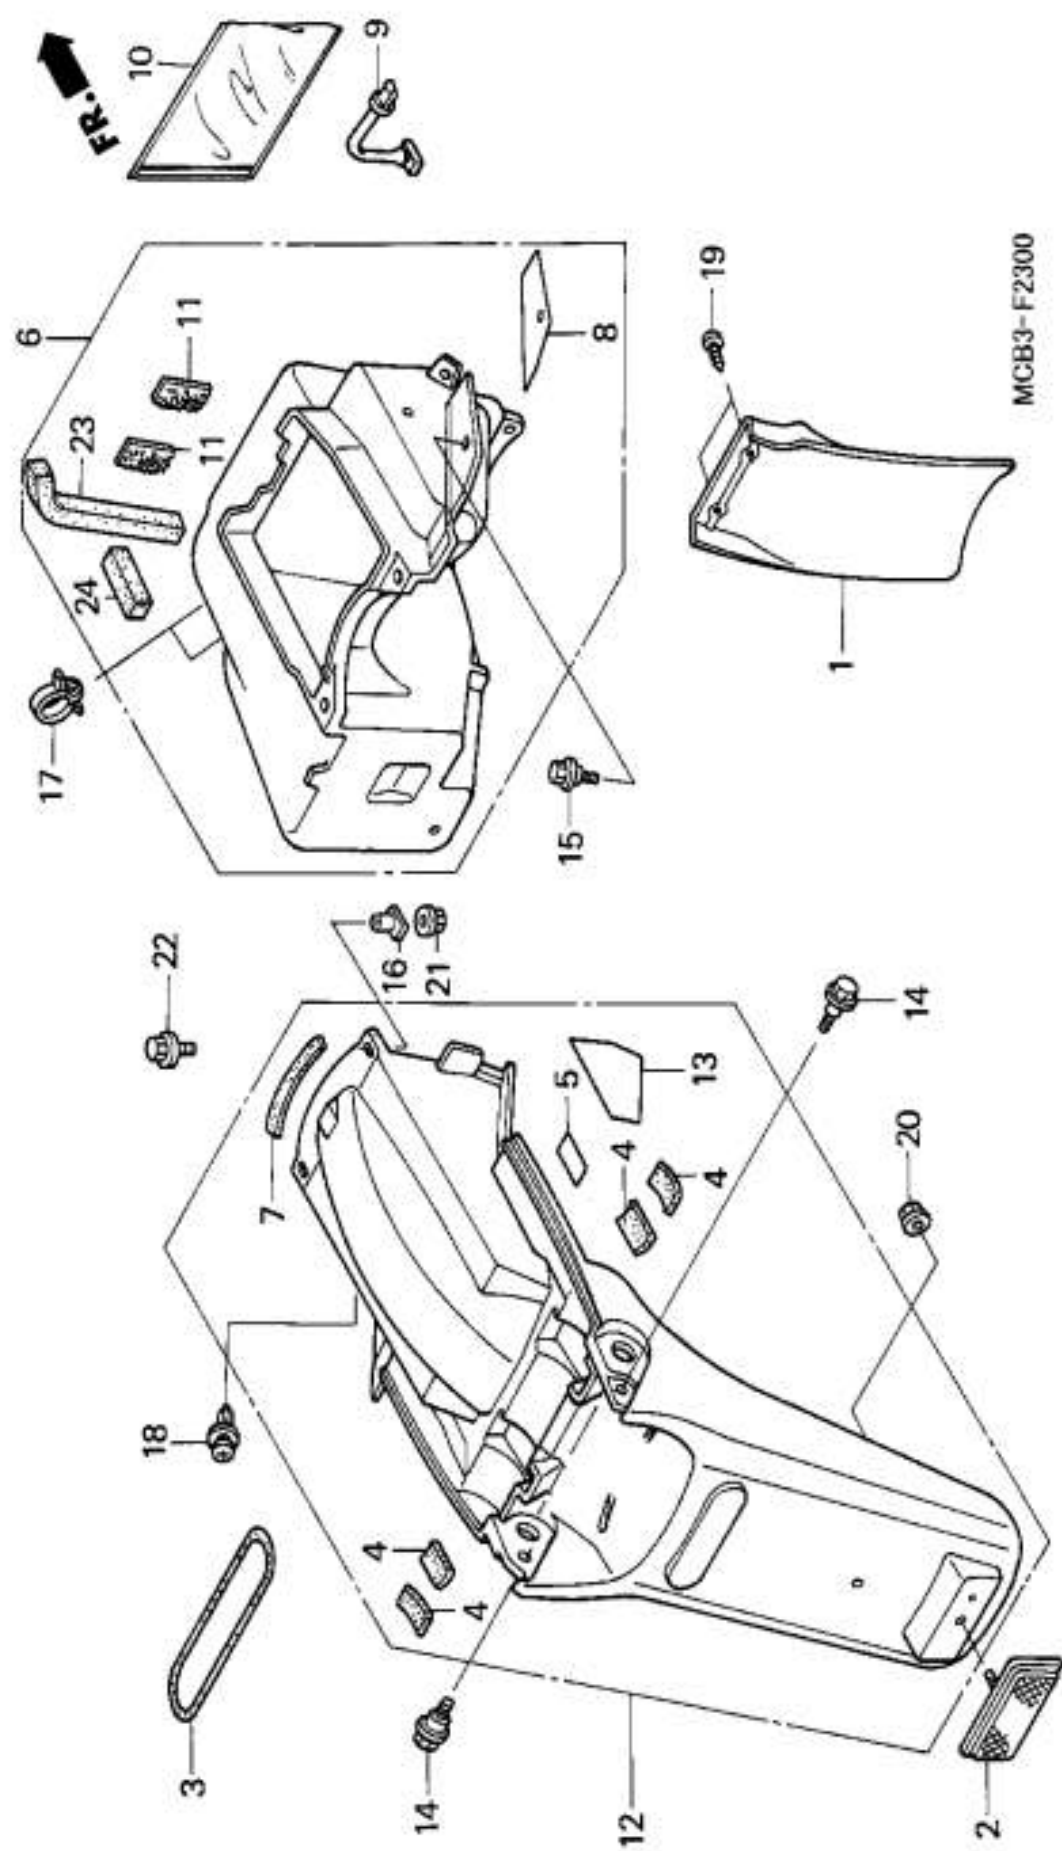


MCB3-F2300

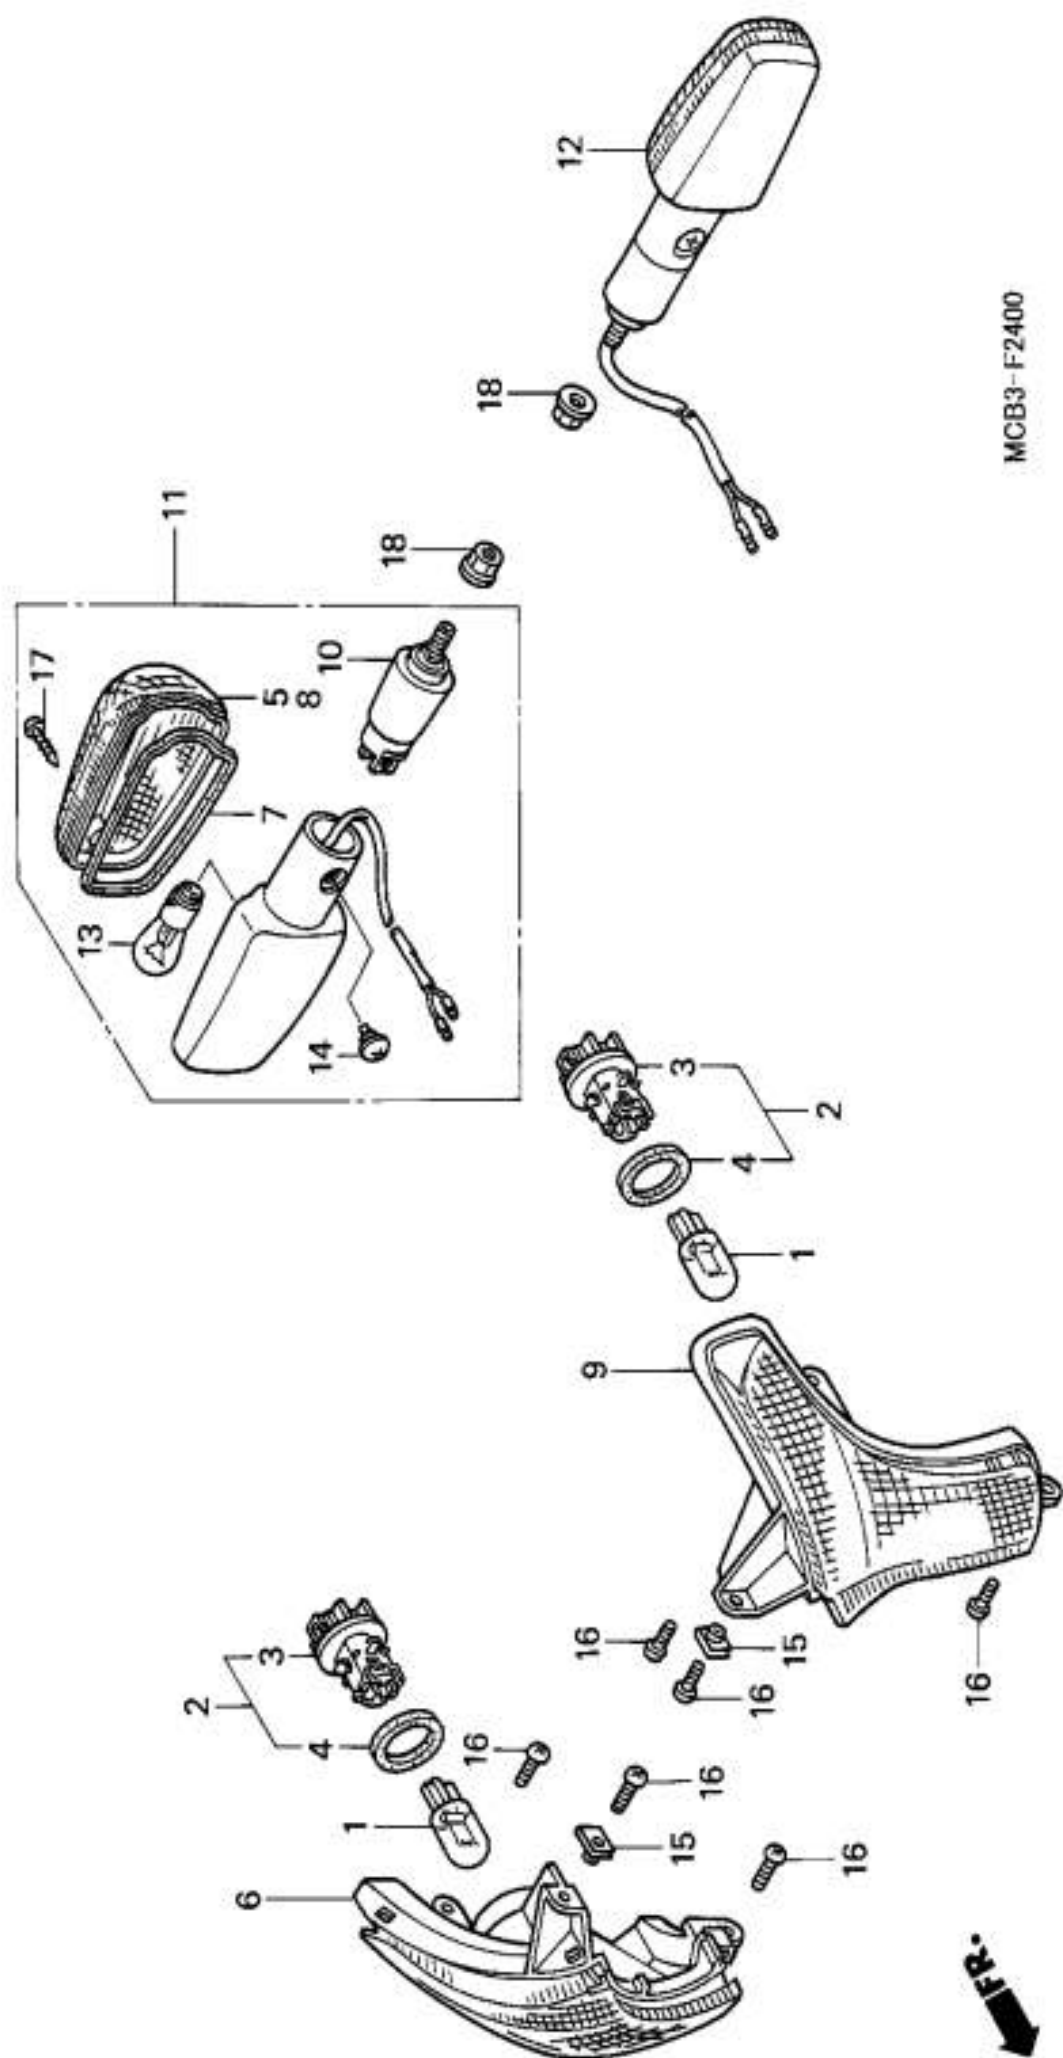

MCB3-F2400


FR

MCB3-F2500

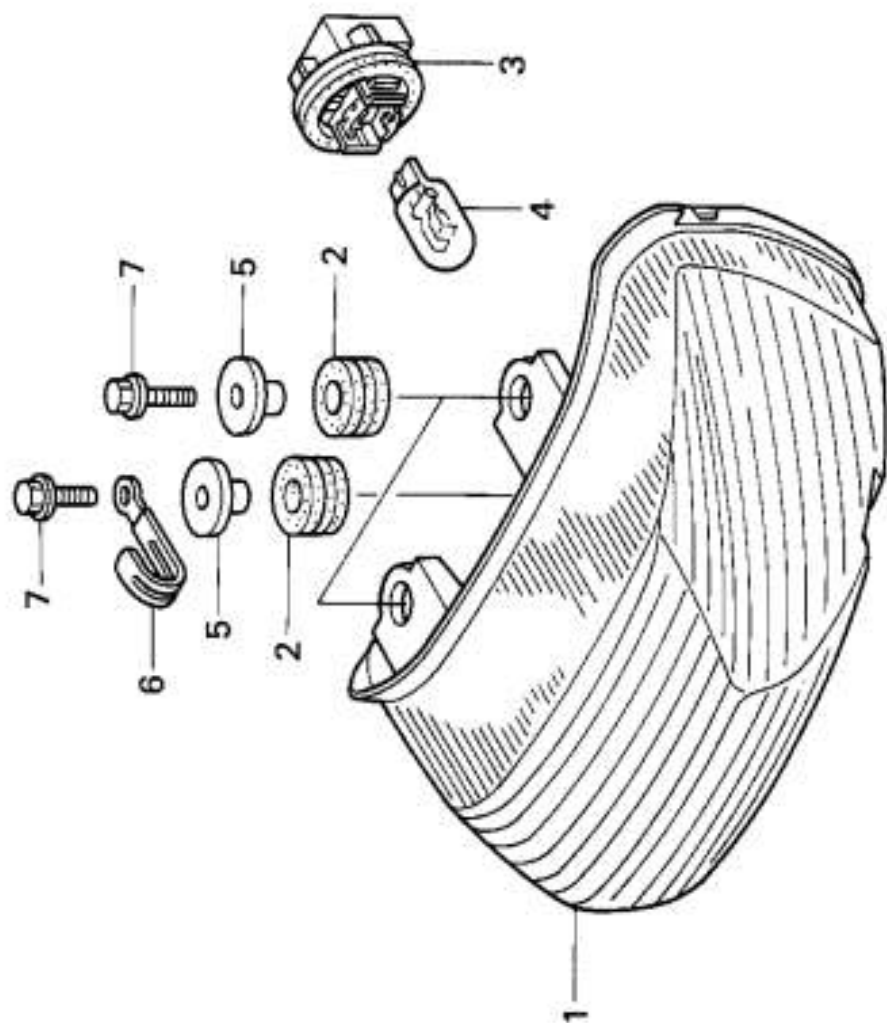


FR. 



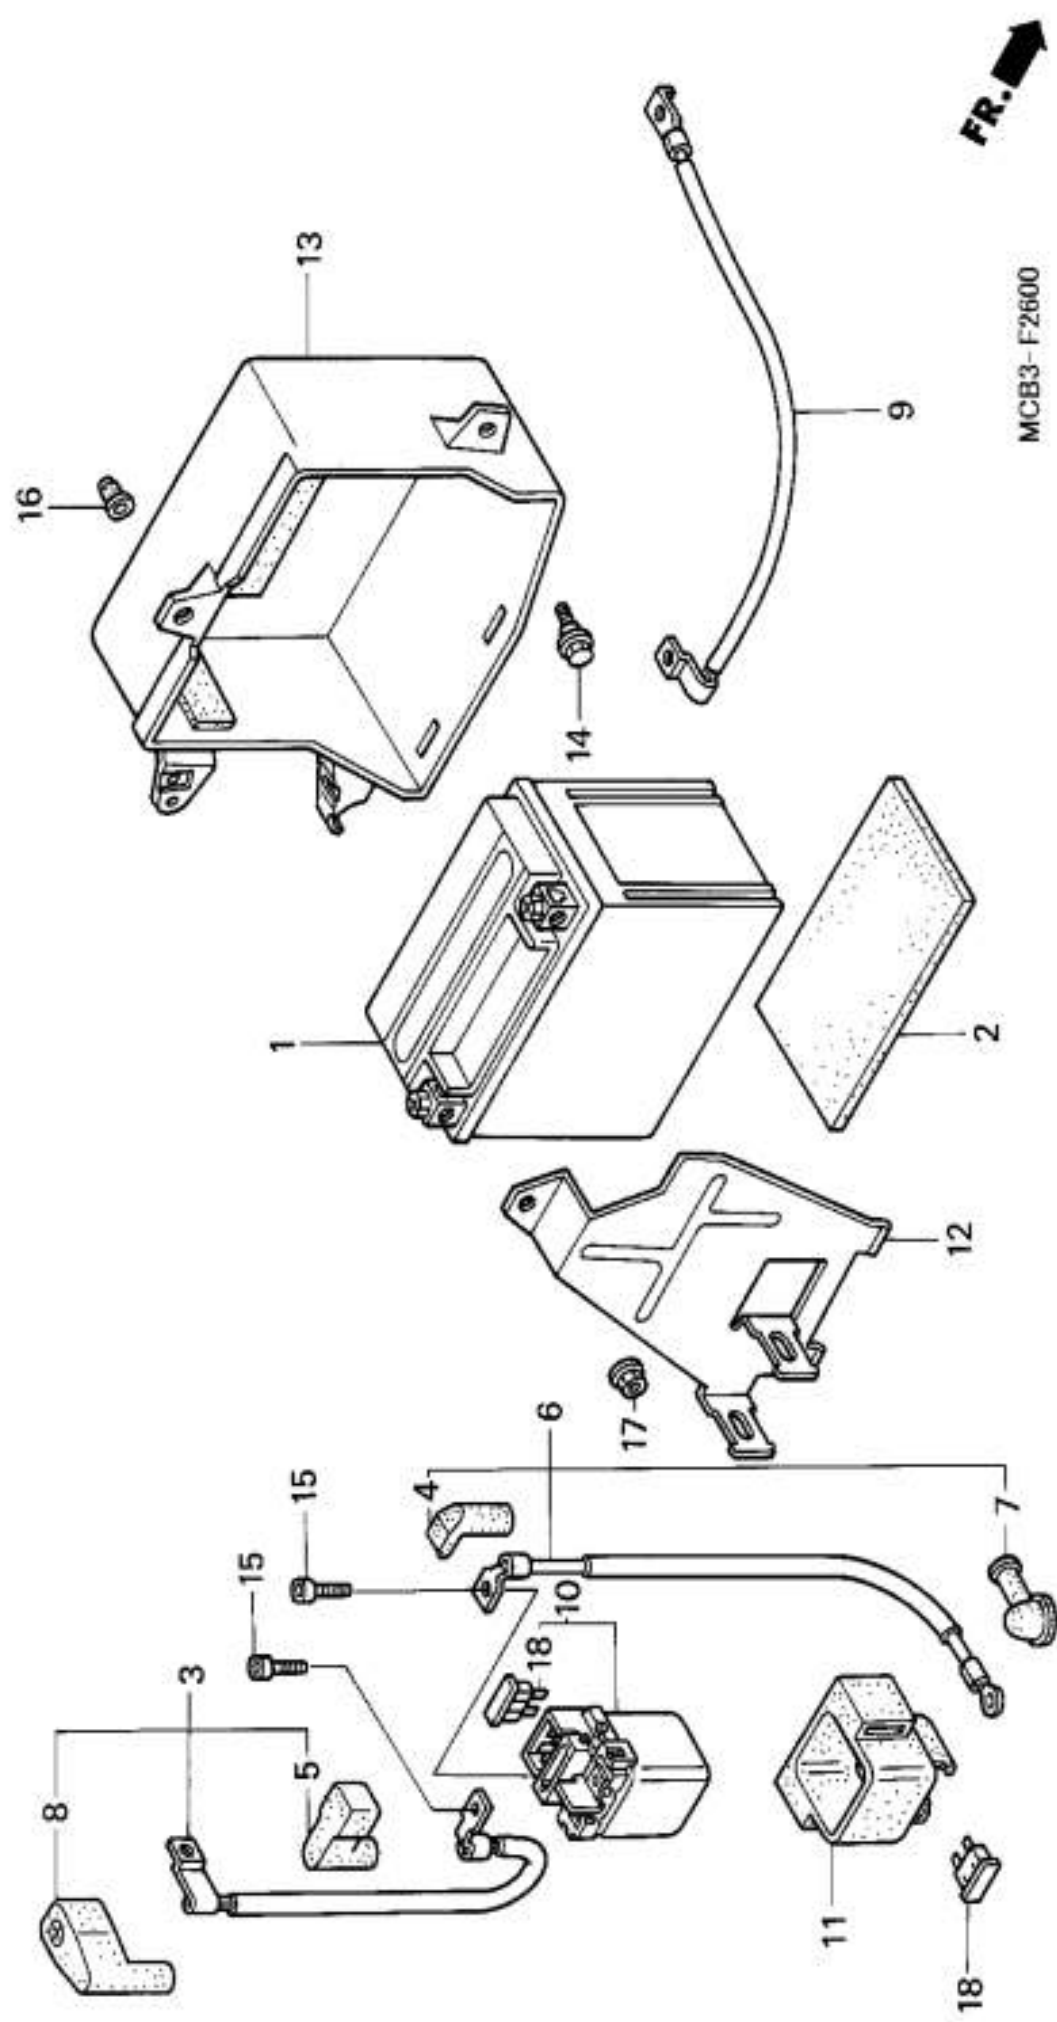


FR. ➔

MCB3-F2600

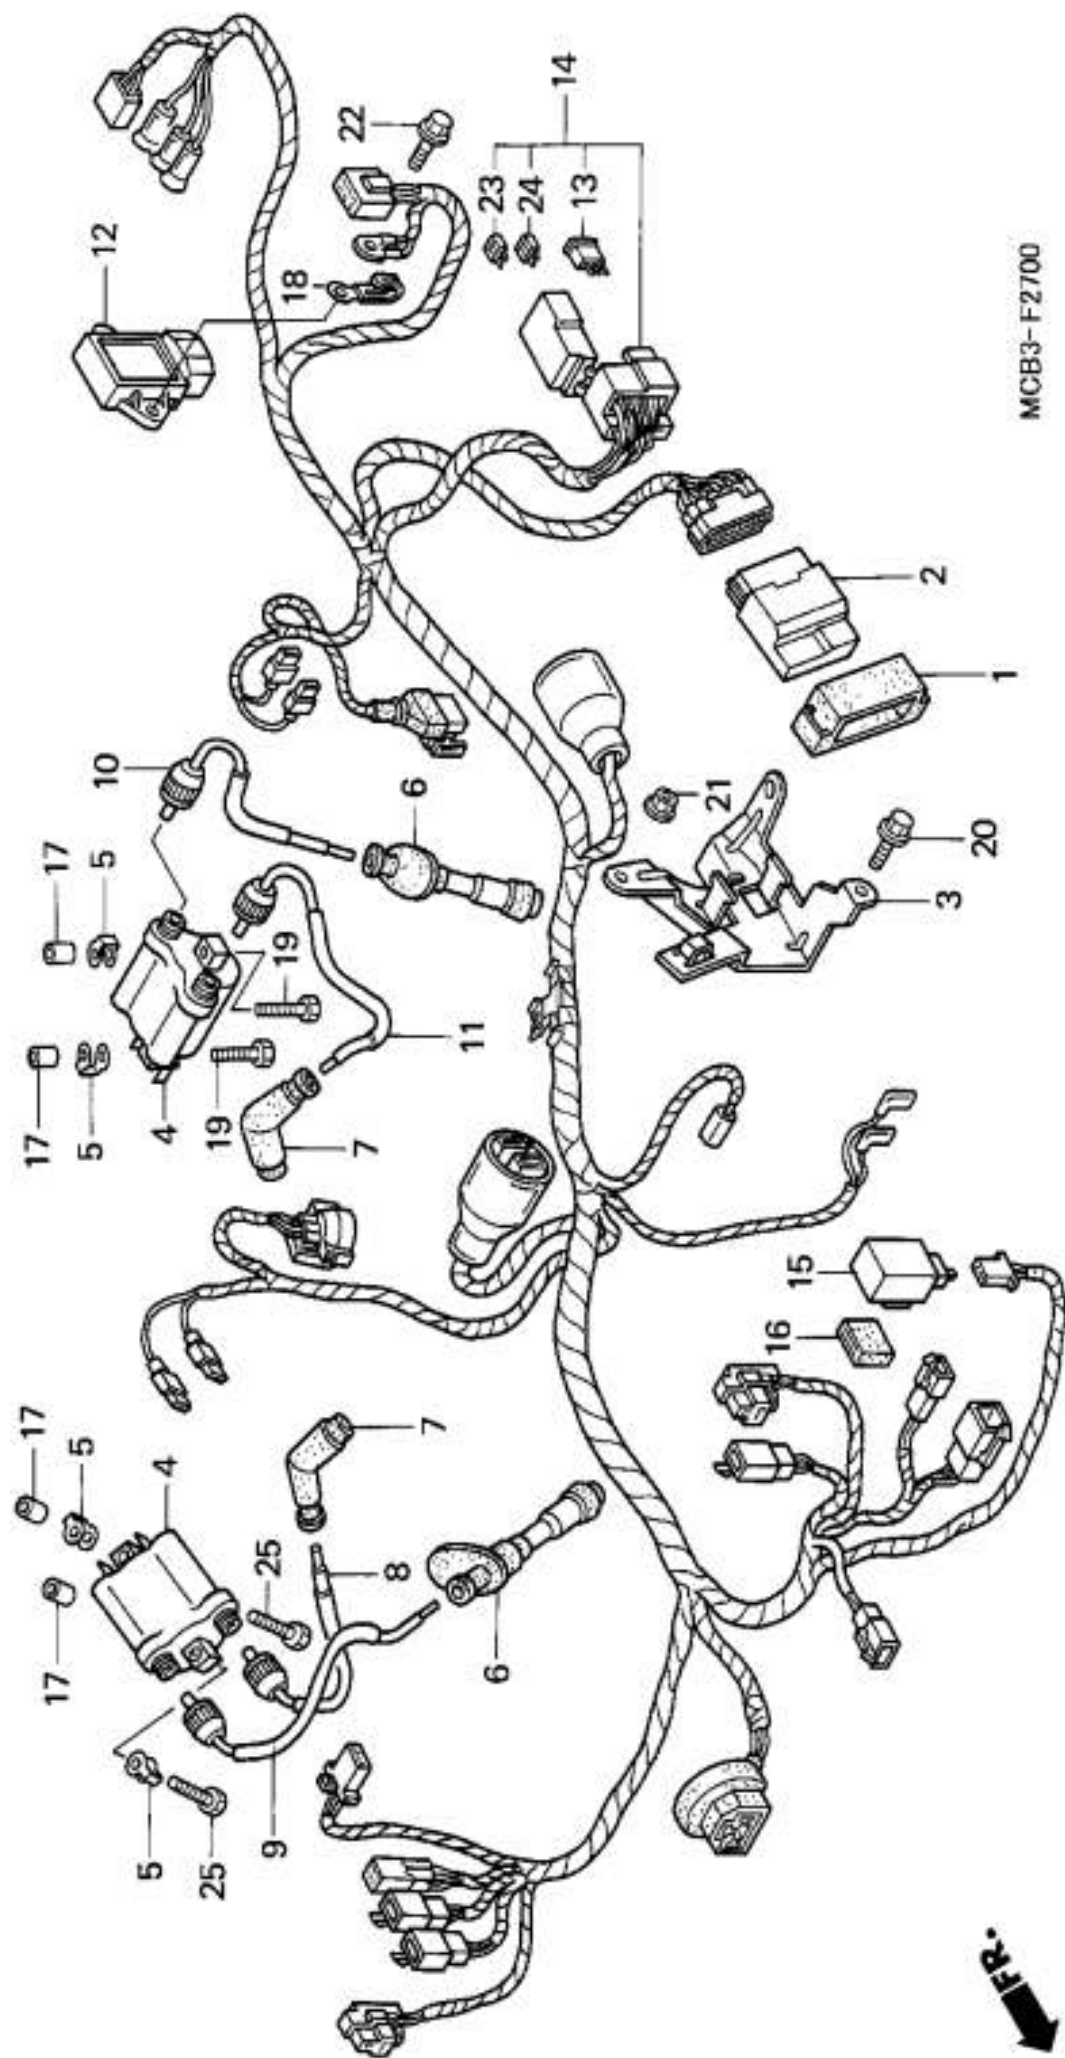


MCB3-F2700

FR. →

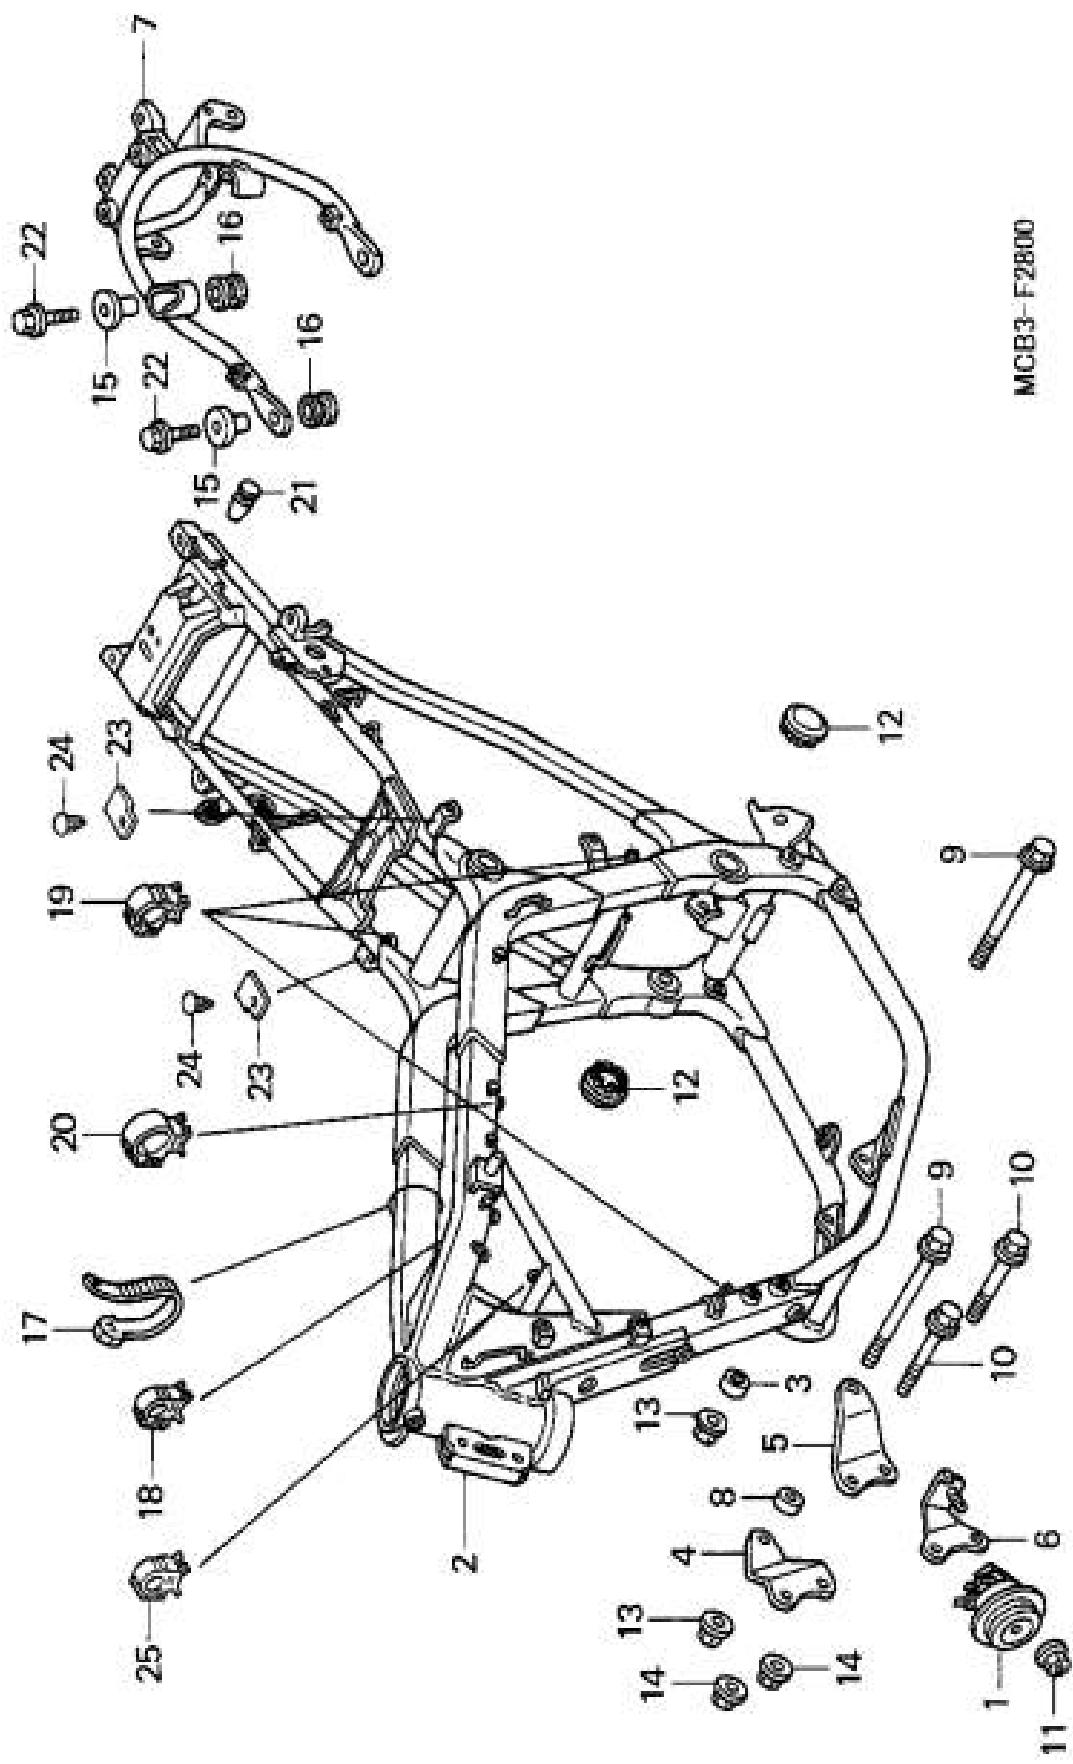


MCB3-F2800




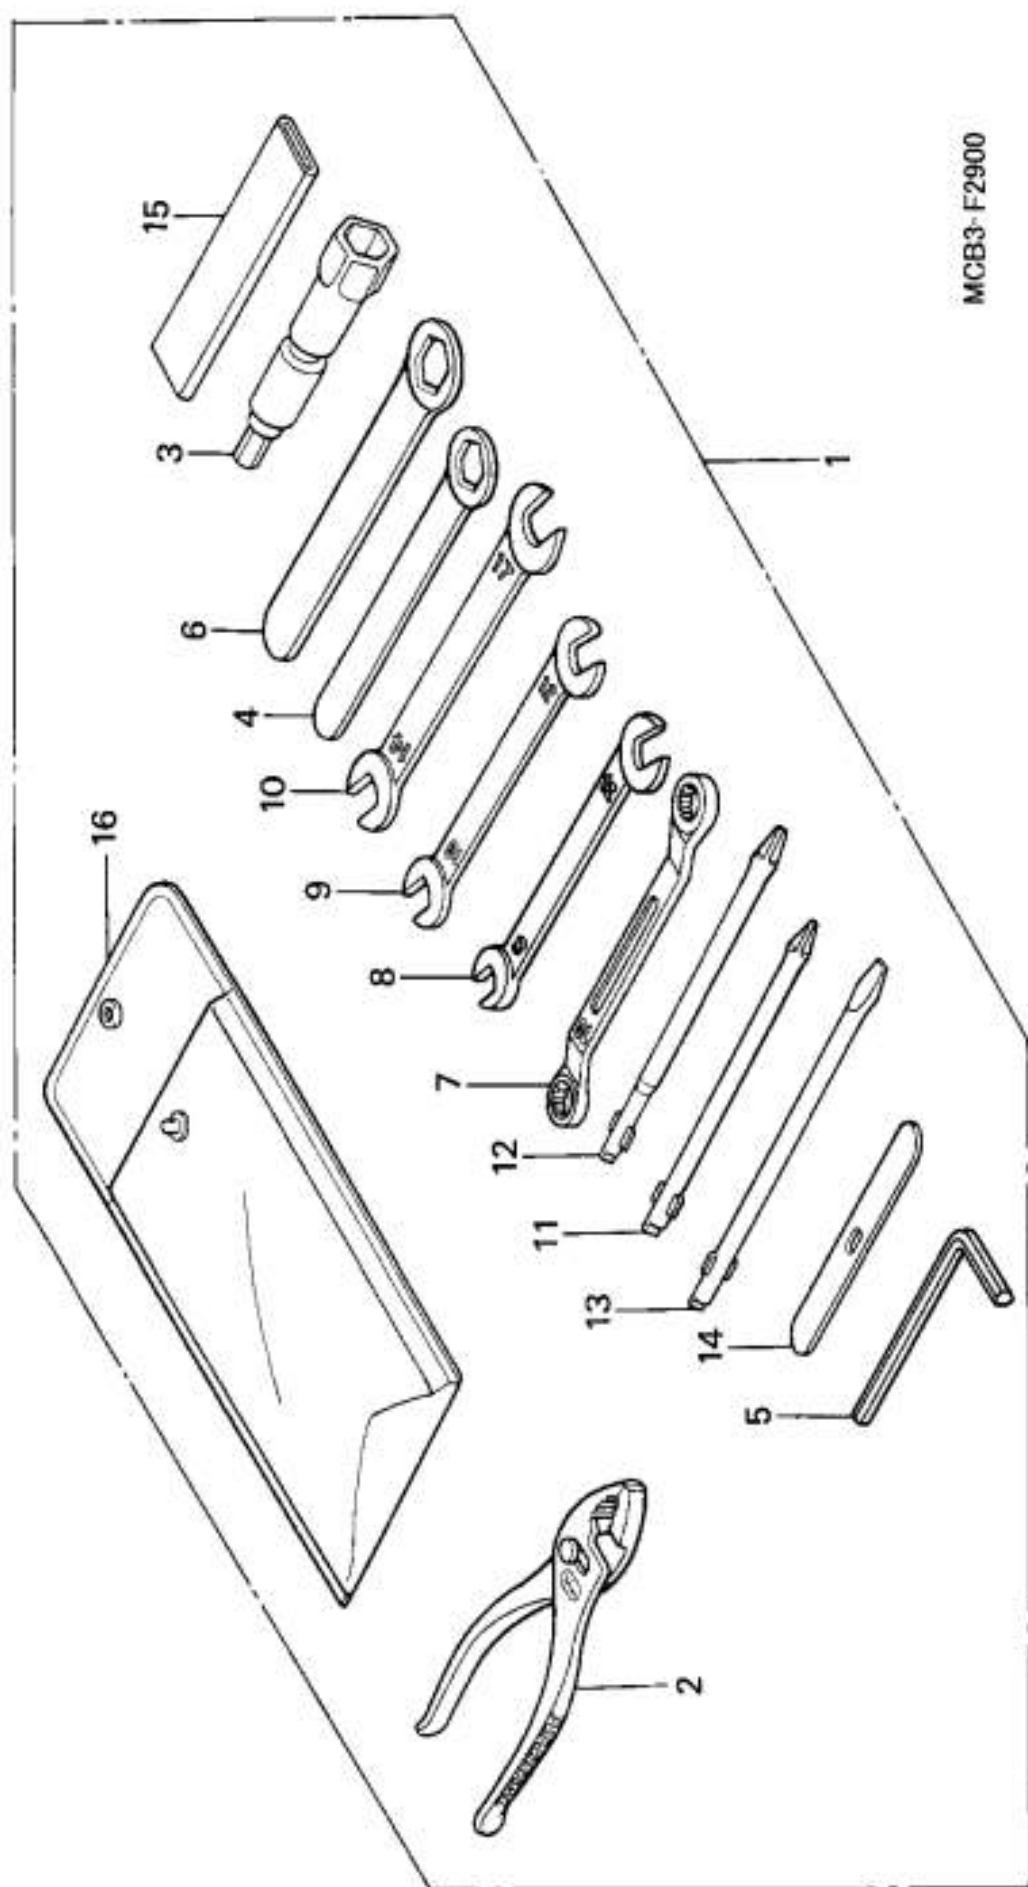

MCB3-F2900

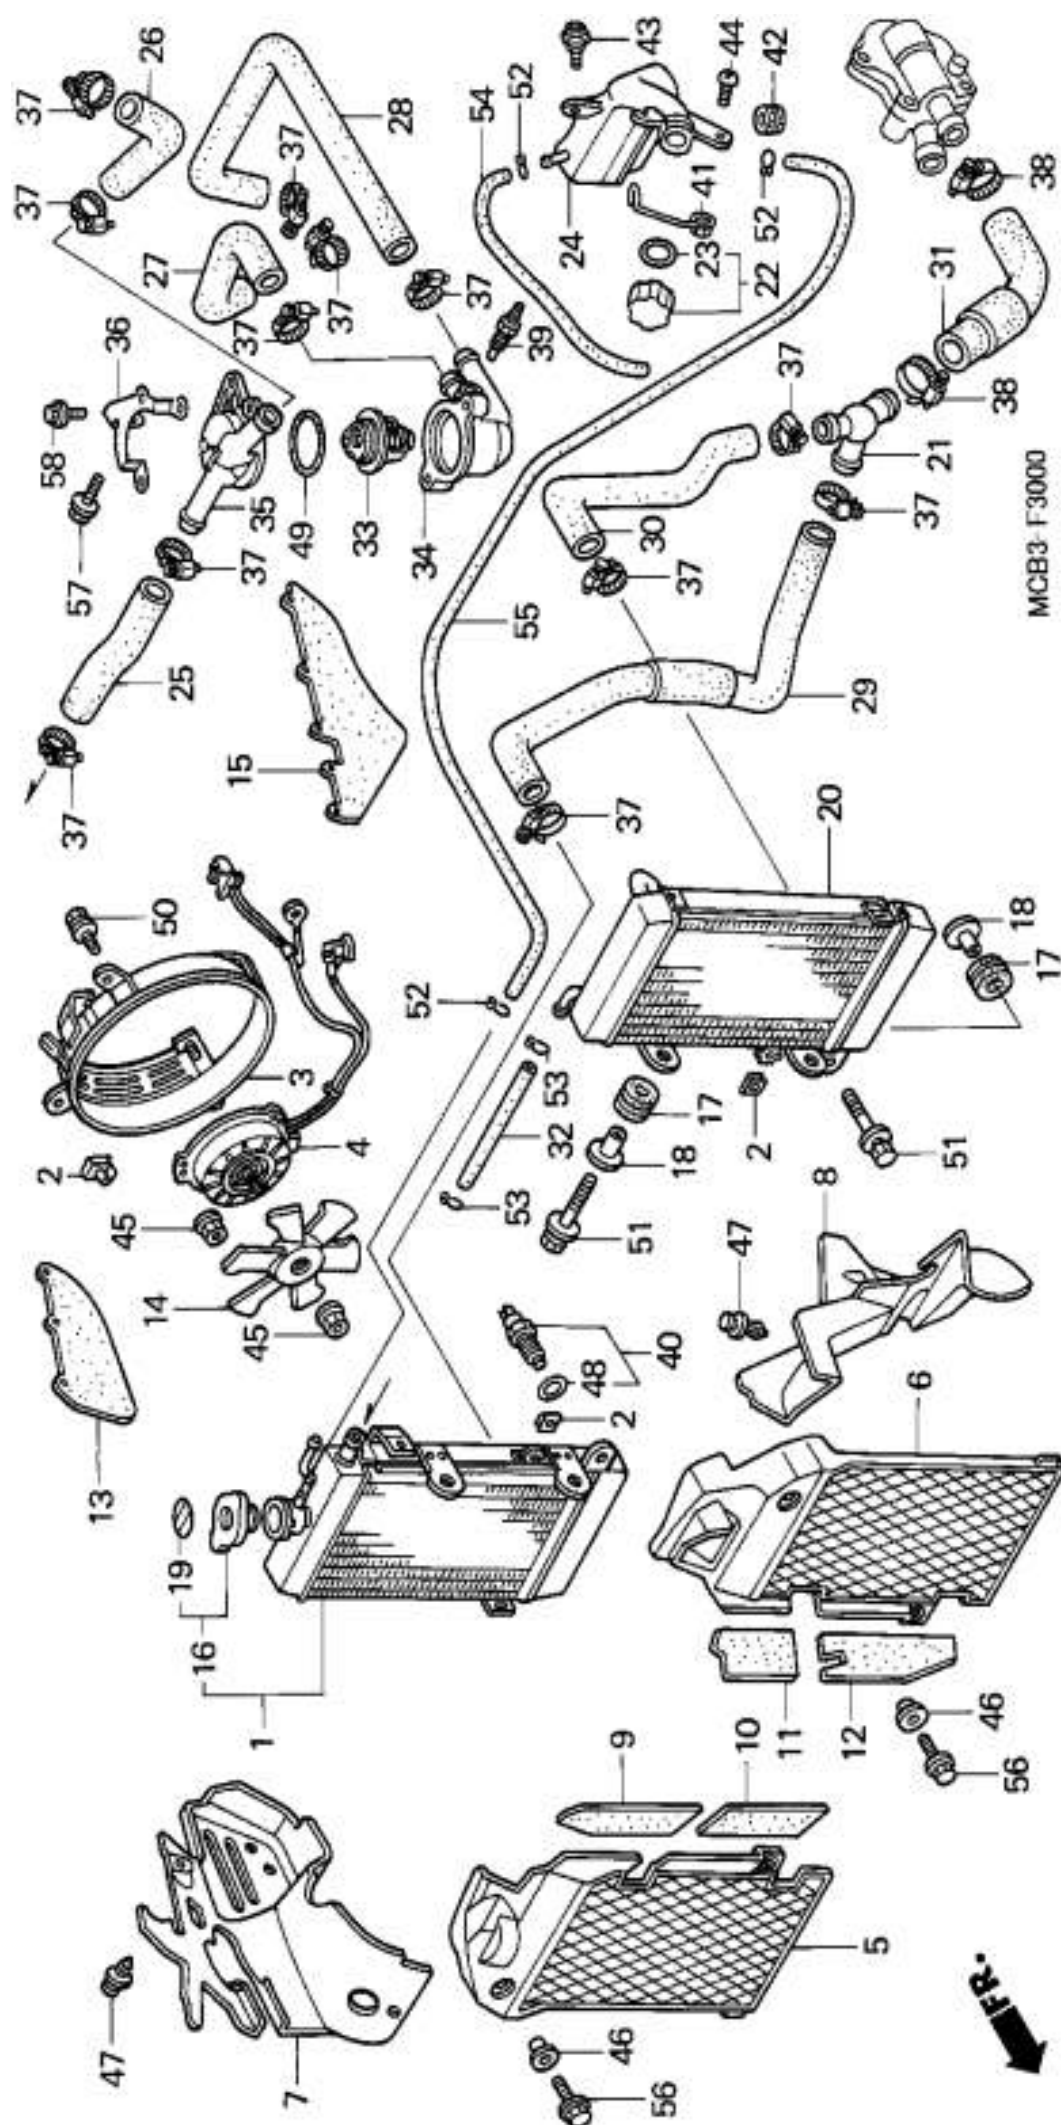

FR.

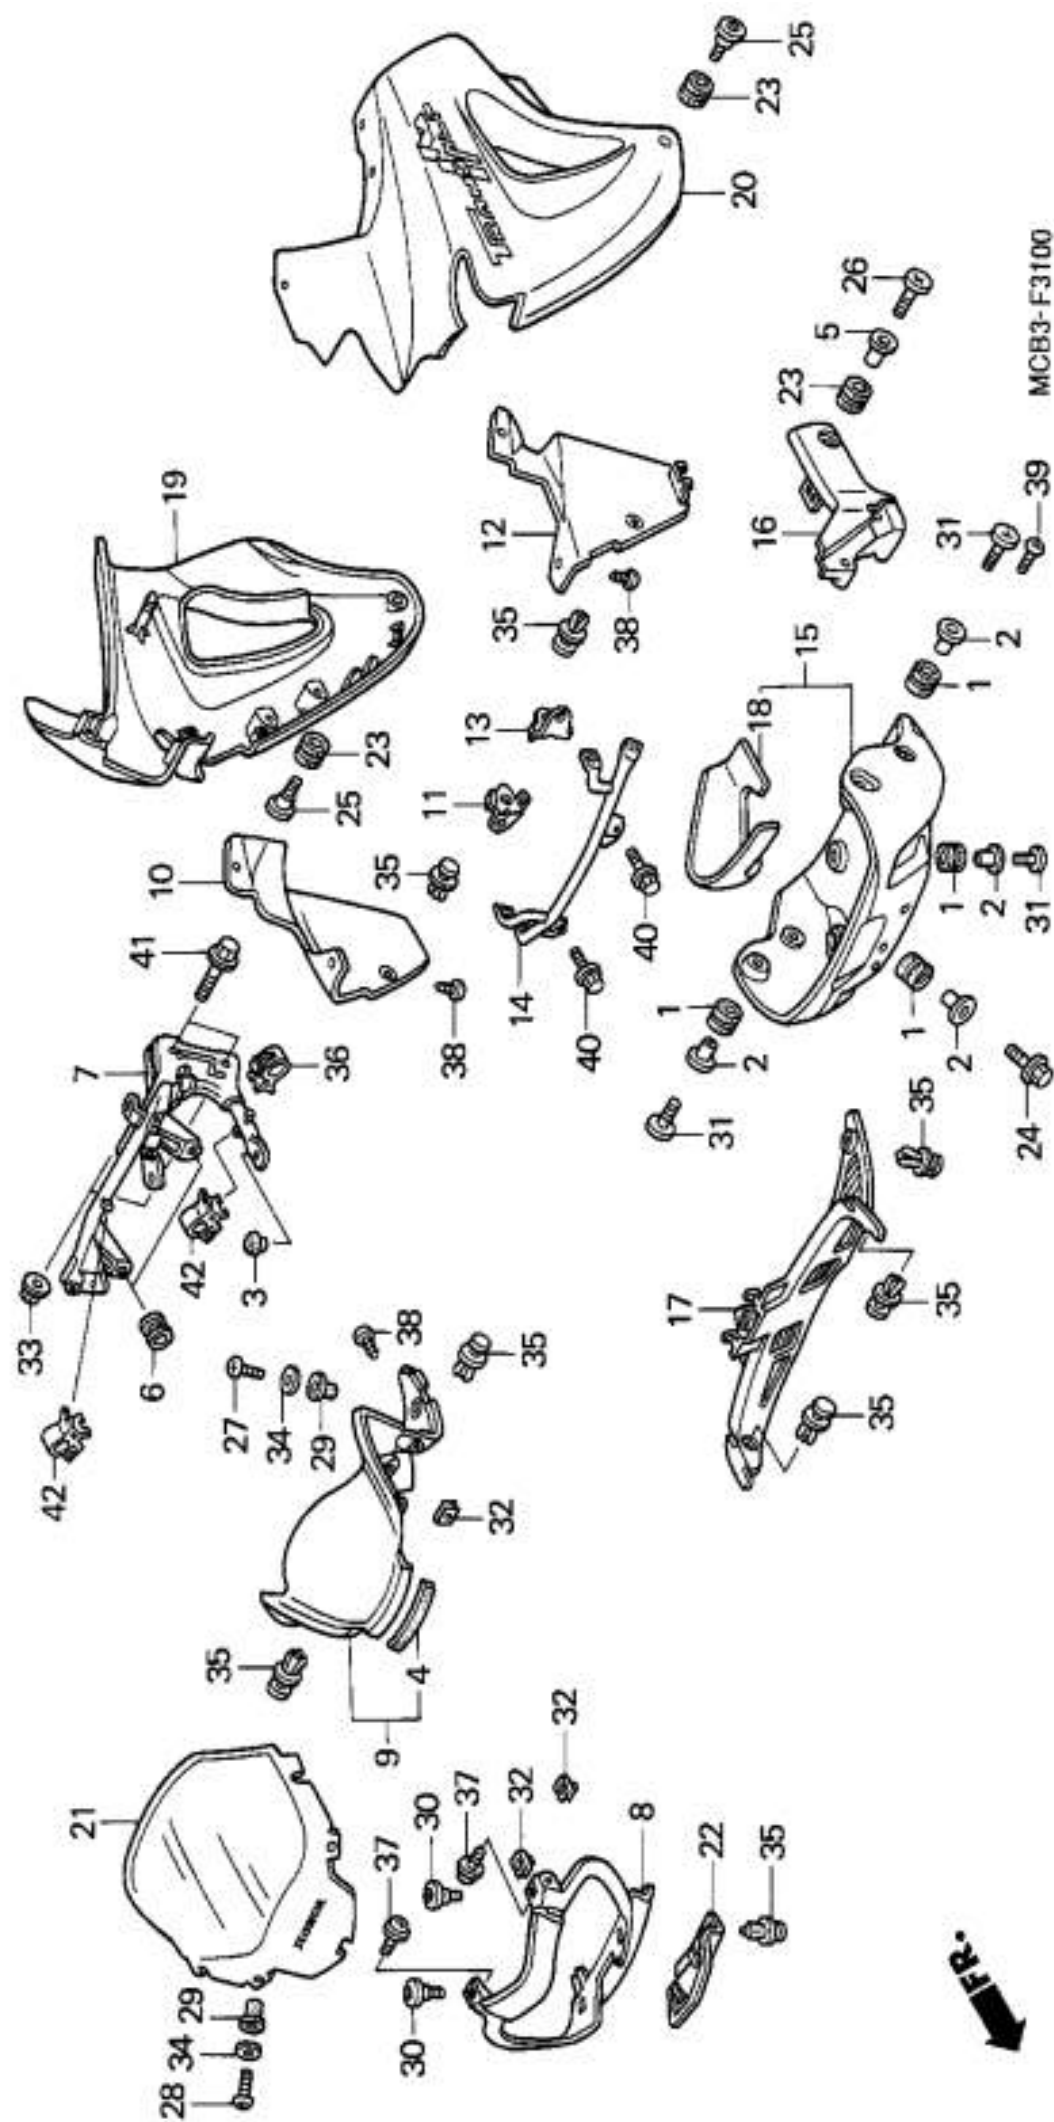

MCB3-F3100

FR.

